
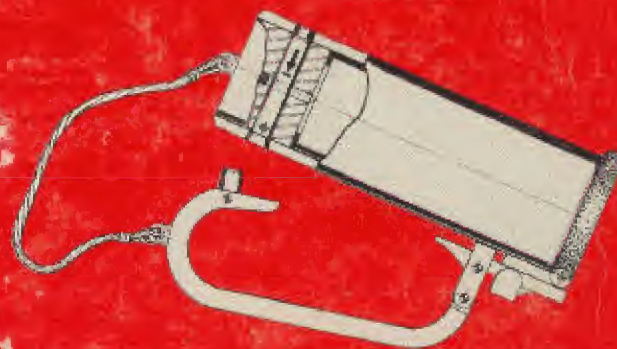


AUTOMATIC AND CONCEALABLE FIREARMS DESIGN BOOK, VOLUME III

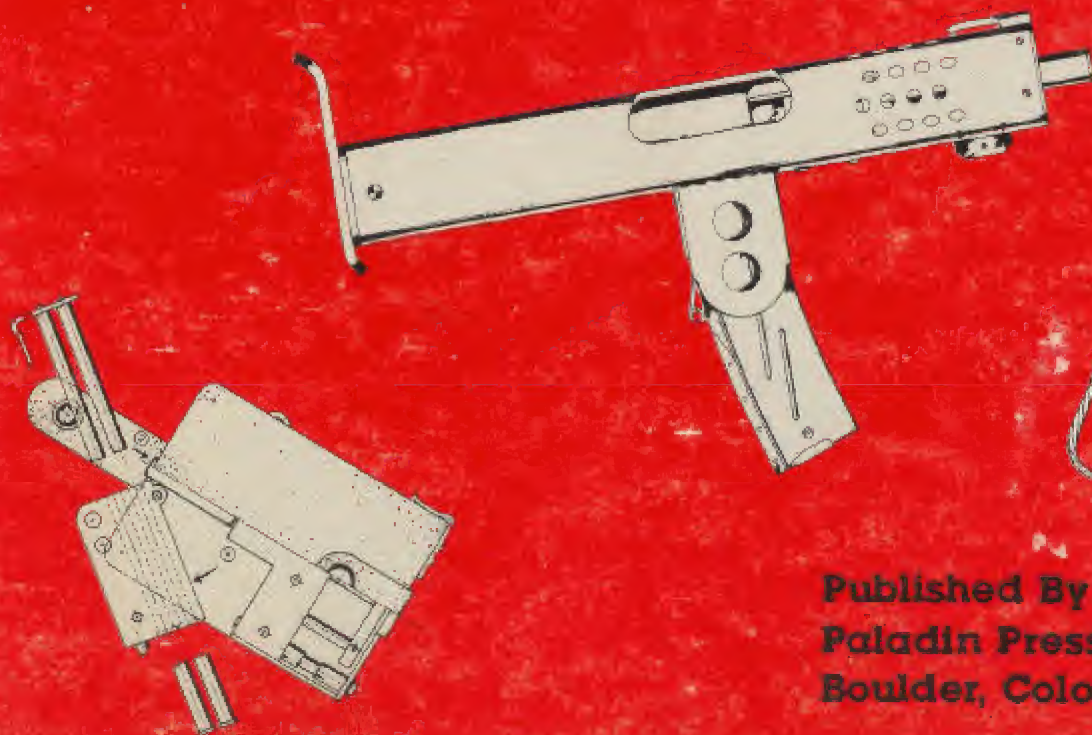

Published By
Paladin Press
Boulder, Colorado

WARNING

It is against the law to manufacture a firearm without an appropriate license from the federal government. There are also state and local laws prohibiting the possession of such weapons in many areas. Severe penalties are prescribed for violations of these laws. Be warned!

**AUTOMATIC AND CONCEALABLE
FIREARMS DESIGN BOOK,
VOLUME III**

**Paladin Press
Boulder, Colorado**

Paladin Press will not be responsible for the use or misuse of any information contained in this book. It is intended for historical and reference purposes only.

Automatic and Concealable Firearms Design Book, Volume III
Copyright 1982 by Paladin Press

All rights reserved. No portion of this book may be reproduced in any form without express written permission from the publisher.

ISBN 0-87364-224-4

Printed in the United States of America

WARNING

It is against the law to manufacture a restricted or prohibited firearm without an appropriate license from the federal government. There are also state and local laws prohibiting the possession of such devices in many areas. Severe penalties are prescribed for violations of these laws. Be warned!

CONTENTS

INTRODUCTION	1
WALLET GUN	3
XM-30 MACHINE PISTOL	9
BROWNING HI-POWER MACHINE PISTOL CONVERSION	21
.45 BULPUP SILENCED PISTOL	29
FUTURE ASSAULT SHOTGUN	41
TRIAD PROTECTION SYSTEM	49

WALLET GUN

SPECIFICATIONS:

CATEGORY IMPROVISED-HANDMADE
CALIBER 22 RIMFIRE
CAPACITY TWO SHOTS

REMARKS: *THE SYSTEM, AS THE NAME IMPLIES, IS DESIGNED TO COUNTER A HOLDUP SITUATION THROUGH USE OF A GUN DISGUISED AS AN ORDINARY-LOOKING WALLET. THE WEAPON CAN BE MADE IN VARIOUS CALIBERS, BUT .22 RIMFIRE AMMUNITION WILL MORE EASILY ACHIEVE THE FLATNESS REQUIRED TO MAKE IT LOOK LIKE A MAN'S LEATHER WALLET. THE GUN FIRES BOTH CARTRIDGES AT THE SAME TIME FOR MAXIMUM STOPPING POWER AT CLOSE RANGES.*

SYSTEM OF OPERATION:

Model 1 is a hammer-type gun fired via double action by pressing the thumb-operated lever. The thumb lever in this particular model can be folded forward flush to frame level when not in use. In emergency situations, like holdups or robberies, simply pull the lever with your thumb to a vertical firing position while pulling your "wallet" out of your pocket and pretending to give it to your assailant. Since the robber will not be aware of the weapon inside, he will be caught in the instant of surprise, and will easily be outgunned. It will be too late for him to know what hit him.

The model 2 antiholdup wallet gun is more adaptable and more easily put into instant action than model 1. The manual extractor will also enhance its versatility as a survival-type weapon if reloading will be needed. In preparation for instant use, push the front end of the striker spring rod until it engages with the sear. Then pull the front flap of the leather around the front end of the striker rod and frame cover. This will act as

your safety. The leather flap will prevent the forward motion of the striker spring guide.

your pocket and flick off the snap catch of the leather flap with your thumb. This will clear the leather strap from in front of the striker rod, readying it for firing. By pressing the protrusion of sear on top of the frame, the weapon will fire both cartridges. Refer to diagrams for complete details on manual operation and extraction of empty shells.


This weapon offers several applications for self-defense and personal protection. Besides being used as a wallet gun, it can be built into the side pocket of a woman's handbag as protection against muggers and rapists.

It can also be made to fit into the logbook that police officers carry to give them a last-ditch weapon that could save their lives in extreme situations. It can also be disguised as a cigarette box.




Think of a disguise for the antiholdup gun that will fit into your lifestyle. You may find that this weapon will not only save your cash, but may also save your life in time of need.

PARTS LIST: MODEL 1

1. Frame—formed from 1/16-inch-thick steel
2. Thumb-operated lever for firing
3. Snap catch
4. Frame cover—1/16-inch steel secured to frame by two screws
5. Index bolt
6. Spring
7. Trip lever arm
8. Trip plunger spring
9. Trip plunger
10. Trip lever arm pivot pin—permanently brazed to frame
11. Trip lever arm spring
12. Trip lever arm spring base pin—permanently brazed to frame
13. Frame cover screw base rods—thread holes for two screws, permanently brazed to frame
14. Frame cover screw—front
15. Barrel axis pin—permanently brazed to frame
16. Trip pin
17. Trip
18. Thin, soft leather laminated to external surfaces of the frame
19. Frame cover screw—rear
20. Hammer
21. Hammer spring
22. Barrel—.22 magnum rimfire. Counterbore chambers to seat rim of cartridges.
23. Barrel lock bolt spring
24. Barrel lock bolt stop pin
25. Breech lock
26. Barrel lock bolt
27. Firing pin
28. Breechblock pins
29. Hammer pivot pin
30. Push-button release for barrel lock bolt

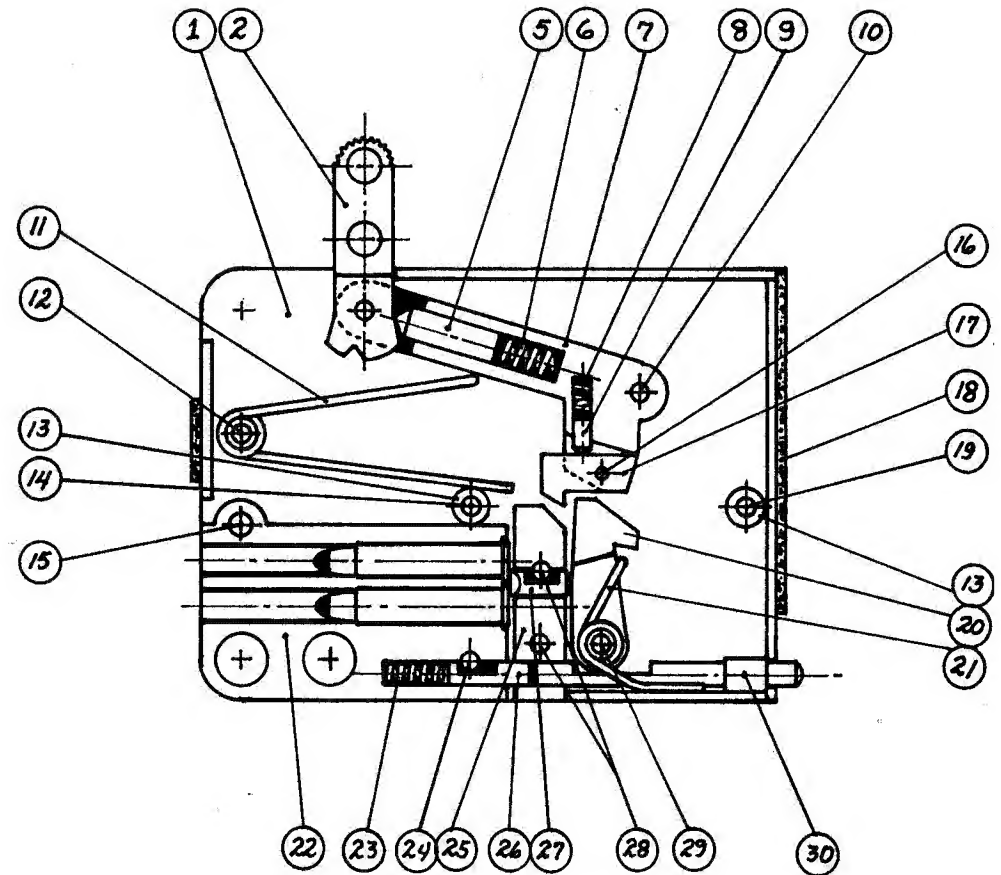


NOTE: DRAWING ON THIS PAGE 3/4 SCALE. ALL OTHER WALLET GUN DRAWINGS ARE FULL SCALE.

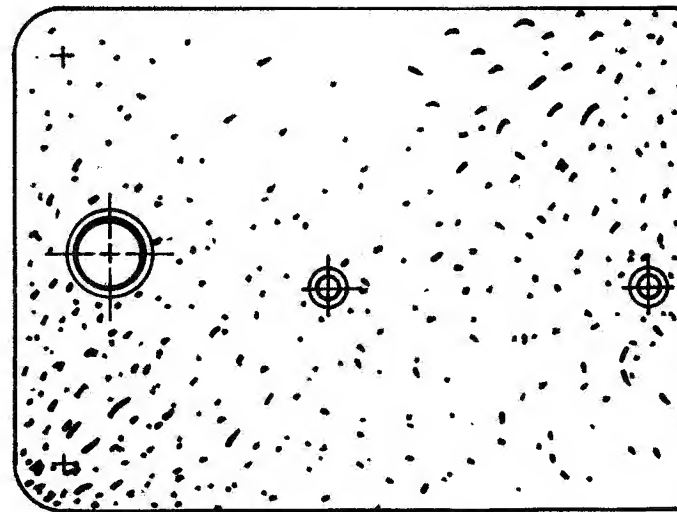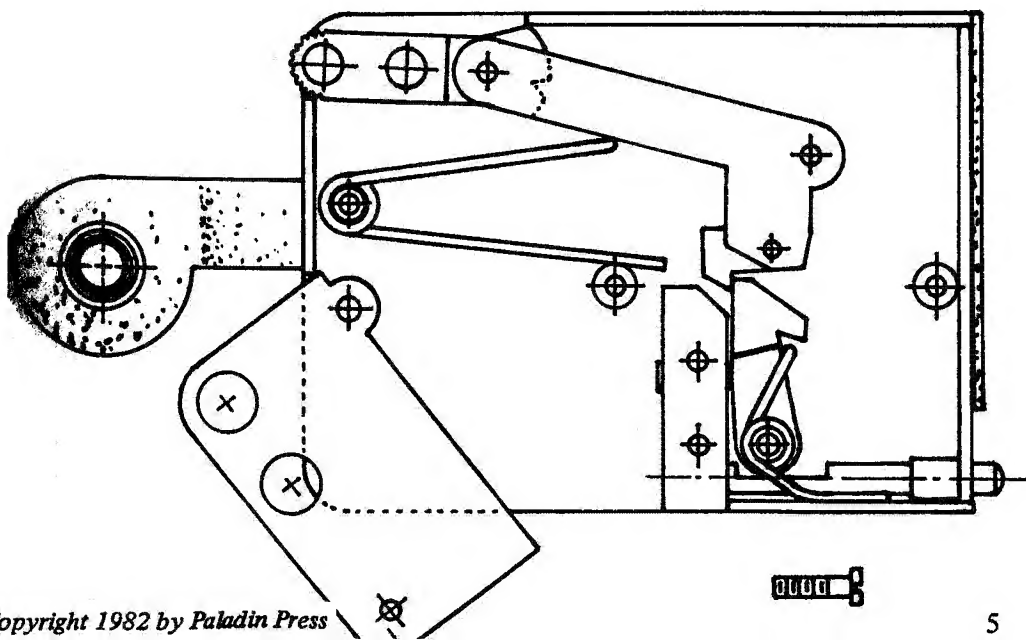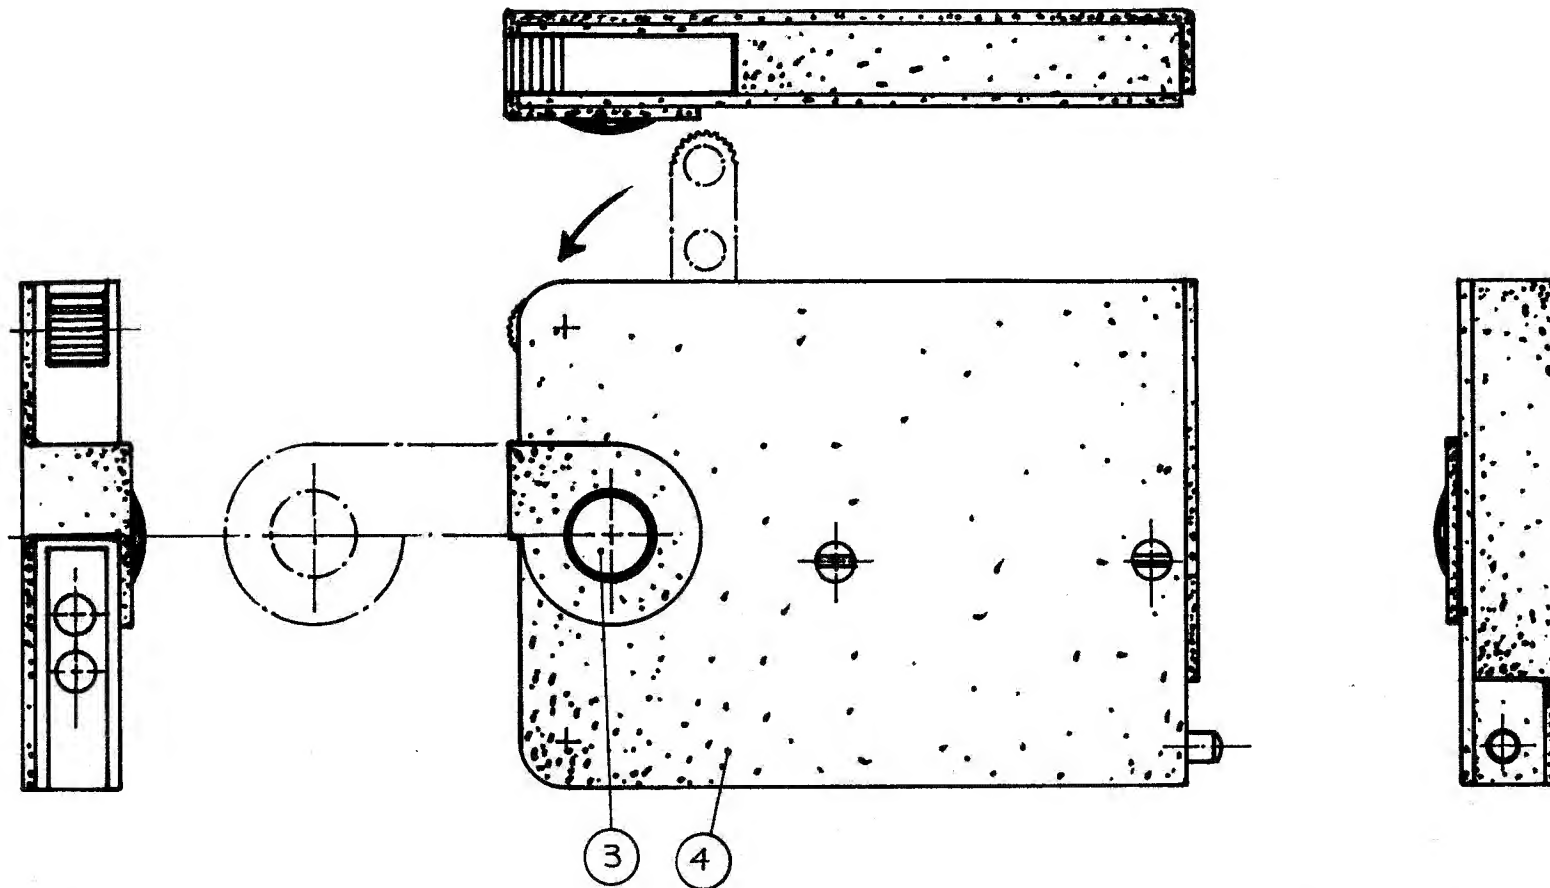

PARTS LIST: MODEL 2

1. Sear
2. Sear axis pin—permanently brazed to frame
3. Sear spring
4. Striker spring—cut from M1 carbine recoil spring of similar coil-type hammer spring
5. Striker spring guide
6. Extractor—dual prong type (same diagram as cartridge case)
7. Extractor base—flat spring clip pressing against top surface of frame to prevent extractor unit from falling off the housing frame.
8. Frame cover screws—two positions
9. Breechblock—aluminum plate preferred for lightness
10. Firing pin base plate
11. Frame body—1/16-inch steel sheet formed like box compartment
12. Barrel axis pin—permanently brazed to frame
13. Barrel
14. Barrel lock bolt spring
15. Lock bolt stop pin
16. Lock bolt—drill rod hardened
17. Push button lock bolt release stop pin
18. Firing pin
19. Securing pin for firing pin
20. Push button lock bolt release
21. Leather flaps snap catch
22. Paper money clip rivets—to be riveted outside frame body
23. Paper money clip
24. Ultra-thin soft leather
25. Frame cover—1/16-inch steel sheet laminated with ultra-thin soft leather

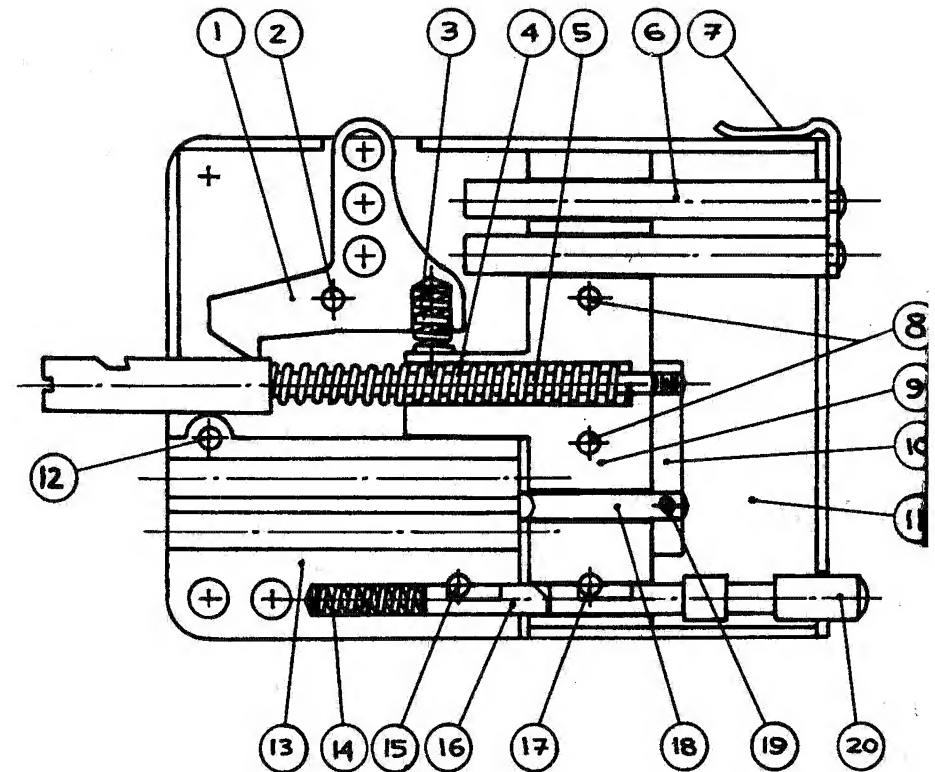

XM-30 MACHINE PISTOL

SPECIFICATIONS:

CATEGORY IMPROVISED-HANDMADE
CALIBER 30
CAPACITY 15- OR 30-ROUND
OPERATION AUTOMATIC

REMARKS: *THE XM-30 MACHINE PISTOL IS DESIGNED TO BE A VERY COMPACT, FAST-FIRING, CLOSE-QUARTERS WEAPON UTILIZING THE MORE POWERFUL M1 CARBINE .30-CALIBER CARTRIDGE FOR HIGHER VELOCITY AND PENETRATION.*

SYSTEM OF OPERATION:

The XM-30 machine pistol operates on the hesitation blowback principle using a bolt-retarding mechanism to slow down its breech opening. The retarder is necessary since the gun utilizes a more powerful cartridge than the pistol-type ammunition commonly employed in most submachine guns and automatic pistols.

When utilizing low-powered ammunition such as 45 ACP, 9mm, .380, etc. in this system or configuration, the retarder is not necessary since pistol-type ammunition will function safely on the blowback principle using a heavy bolt.

The basic configuration of the XM-30 is advantageous. The grip is placed exactly at its center of gravity and the butt plate line has a dual position index. The upper index position places the bore axis of the barrel well below it, completely eliminating muzzle climb in a full automatic. The butt plate can also be indexed to a lower-than-normal position if the shooter so desires.

The trigger mechanism has been kept to utmost simplicity: the sear doubles as the trigger and is operated by the thumb of the hand grasping the front portion of the receiver in a normal manner while the other hand grasps the grip which contains the magazine.

Both the 30-round and the 15-round clip of M1 carbines can be utilized. The side lug on the left side of the 30-round clip must be filed off so the magazine can be inserted freely into the magazine housing.

The weapon does not have a sight. Since it is designed as a spray-type weapon for close quarters, a sight is not necessary. However, a high-type sight similar to that used on the M16 rifle is adaptable.

Most of the components required to build this weapon are from the M1 carbine itself and are readily available from mail-order suppliers.

NOTE ON COCKING THE WEAPON BEFORE FIRING:

To cock the bolt, insert your finger at the front end of the ejection port. Pull the front shoulder of the bolt carrier to the rear until the sear engages with it, and hold the bolt assembly on the open position ready to fire. If the weapon is not to be fired, apply the safety to prevent the sear from accidentally releasing the bolt carrier, thus firing the weapon unintentionally.


IMPORTANT:


Some difficulty might be encountered in cocking the weapon due to the retarder hooking with the receiver tubing. Before pulling the bolt to cock it, simply push up the retarder with your finger, not cocking the weapon, while the butt plate is resting against your waist.



PARTS LIST:



1. Butt plate—formed and shaped from 3/16-inch steel plate
2. Butt plate screw—hex-type head preferably flush with counterbore of the plate hole
3. Rear receiver block—some machining required
4. Receiver block retaining pin—hardened after cutting to dimension. It is retained and tightened by butt plate screw to prevent it from loosening during battery.
5. Recoil spring guides—two pairs—M1 carbine spring guides must be cut to length
6. Recoil springs—two pairs—standard size and length from M1 carbine
7. Receiver tubing—cut from seamless tubing
8. Barrel—bored, reamed, and rifled for M1 carbine cartridge. It is best to order barrel ready-made from a supplier.
9. Barrel-support base—some machining and threading needed
10. Push thumb-operated trigger—formed and cut from 1/8-inch steel sheet. It must be hardened after final cutting and polishing.
11. Sear/trigger spring—can be cut and improvised from M1 carbine ejector spring
12. Butt plate index plunger stop pin—made from drill rod material
13. Butt plate index plunger
14. Butt plate index plunger spring—cut from M1 carbine recoil spring
15. Retarder pin—cut from drill rod hardened after cutting
16. Firing pin protrusion control pin—hex slot headless type to be tightened by Allen wrench
17. Bolt—round-type M2 carbine complete with firing pin, extractor, and ejector assembly. Note that locking lugs are nonfunctional. Bolt must be fully assembled before mating it with the bolt carrier. If possible, bolt must be press-fitted to center hole of carrier and pinned with hardened roll pin.
18. Bolt retaining pin—roll pin preferred. If roll pin is unavailable, use drill rod of slightly larger diameter than the pin hole and peen both ends to prevent loosening.
19. Magazine catch screw
20. Magazine catch—form and file soft spring to flat shape before rehardening
21. Magazine housing—formed, cut, and shaped from 1/8-inch steel sheet. After final forming and cutting, spot-weld housing to receiver.
22. M2 carbine 30-round clip—file off the side lug mating with the side catch of M2 catch so that magazine may be inserted freely into the housing. The 15-round clip need not be modified.
23. Barrel-support base screws—two sets—hardened
24. Sear nose
25. Index balls—two pair—1/8-inch-diameter steel balls
26. Index ball spring—M1 carbine extractor spring adaptable
27. Safety block
28. Safety block connecting pin
29. Front barrel base support
30. Sear/trigger pin—pin must be peened on both ends to prevent loosening during assembly
31. Sear stop pin
32. Safety lever
33. Bolt carrier—machining required
34. Retarder lever—hardened after cutting and polishing
35. Retarder spring—cut from M1 carbine recoil spring

Note: Bolt retarder mechanism is not necessary when using pistol-type ammunition such as the 45 ACP, 9mm Parabellum cartridge, .380, etc.

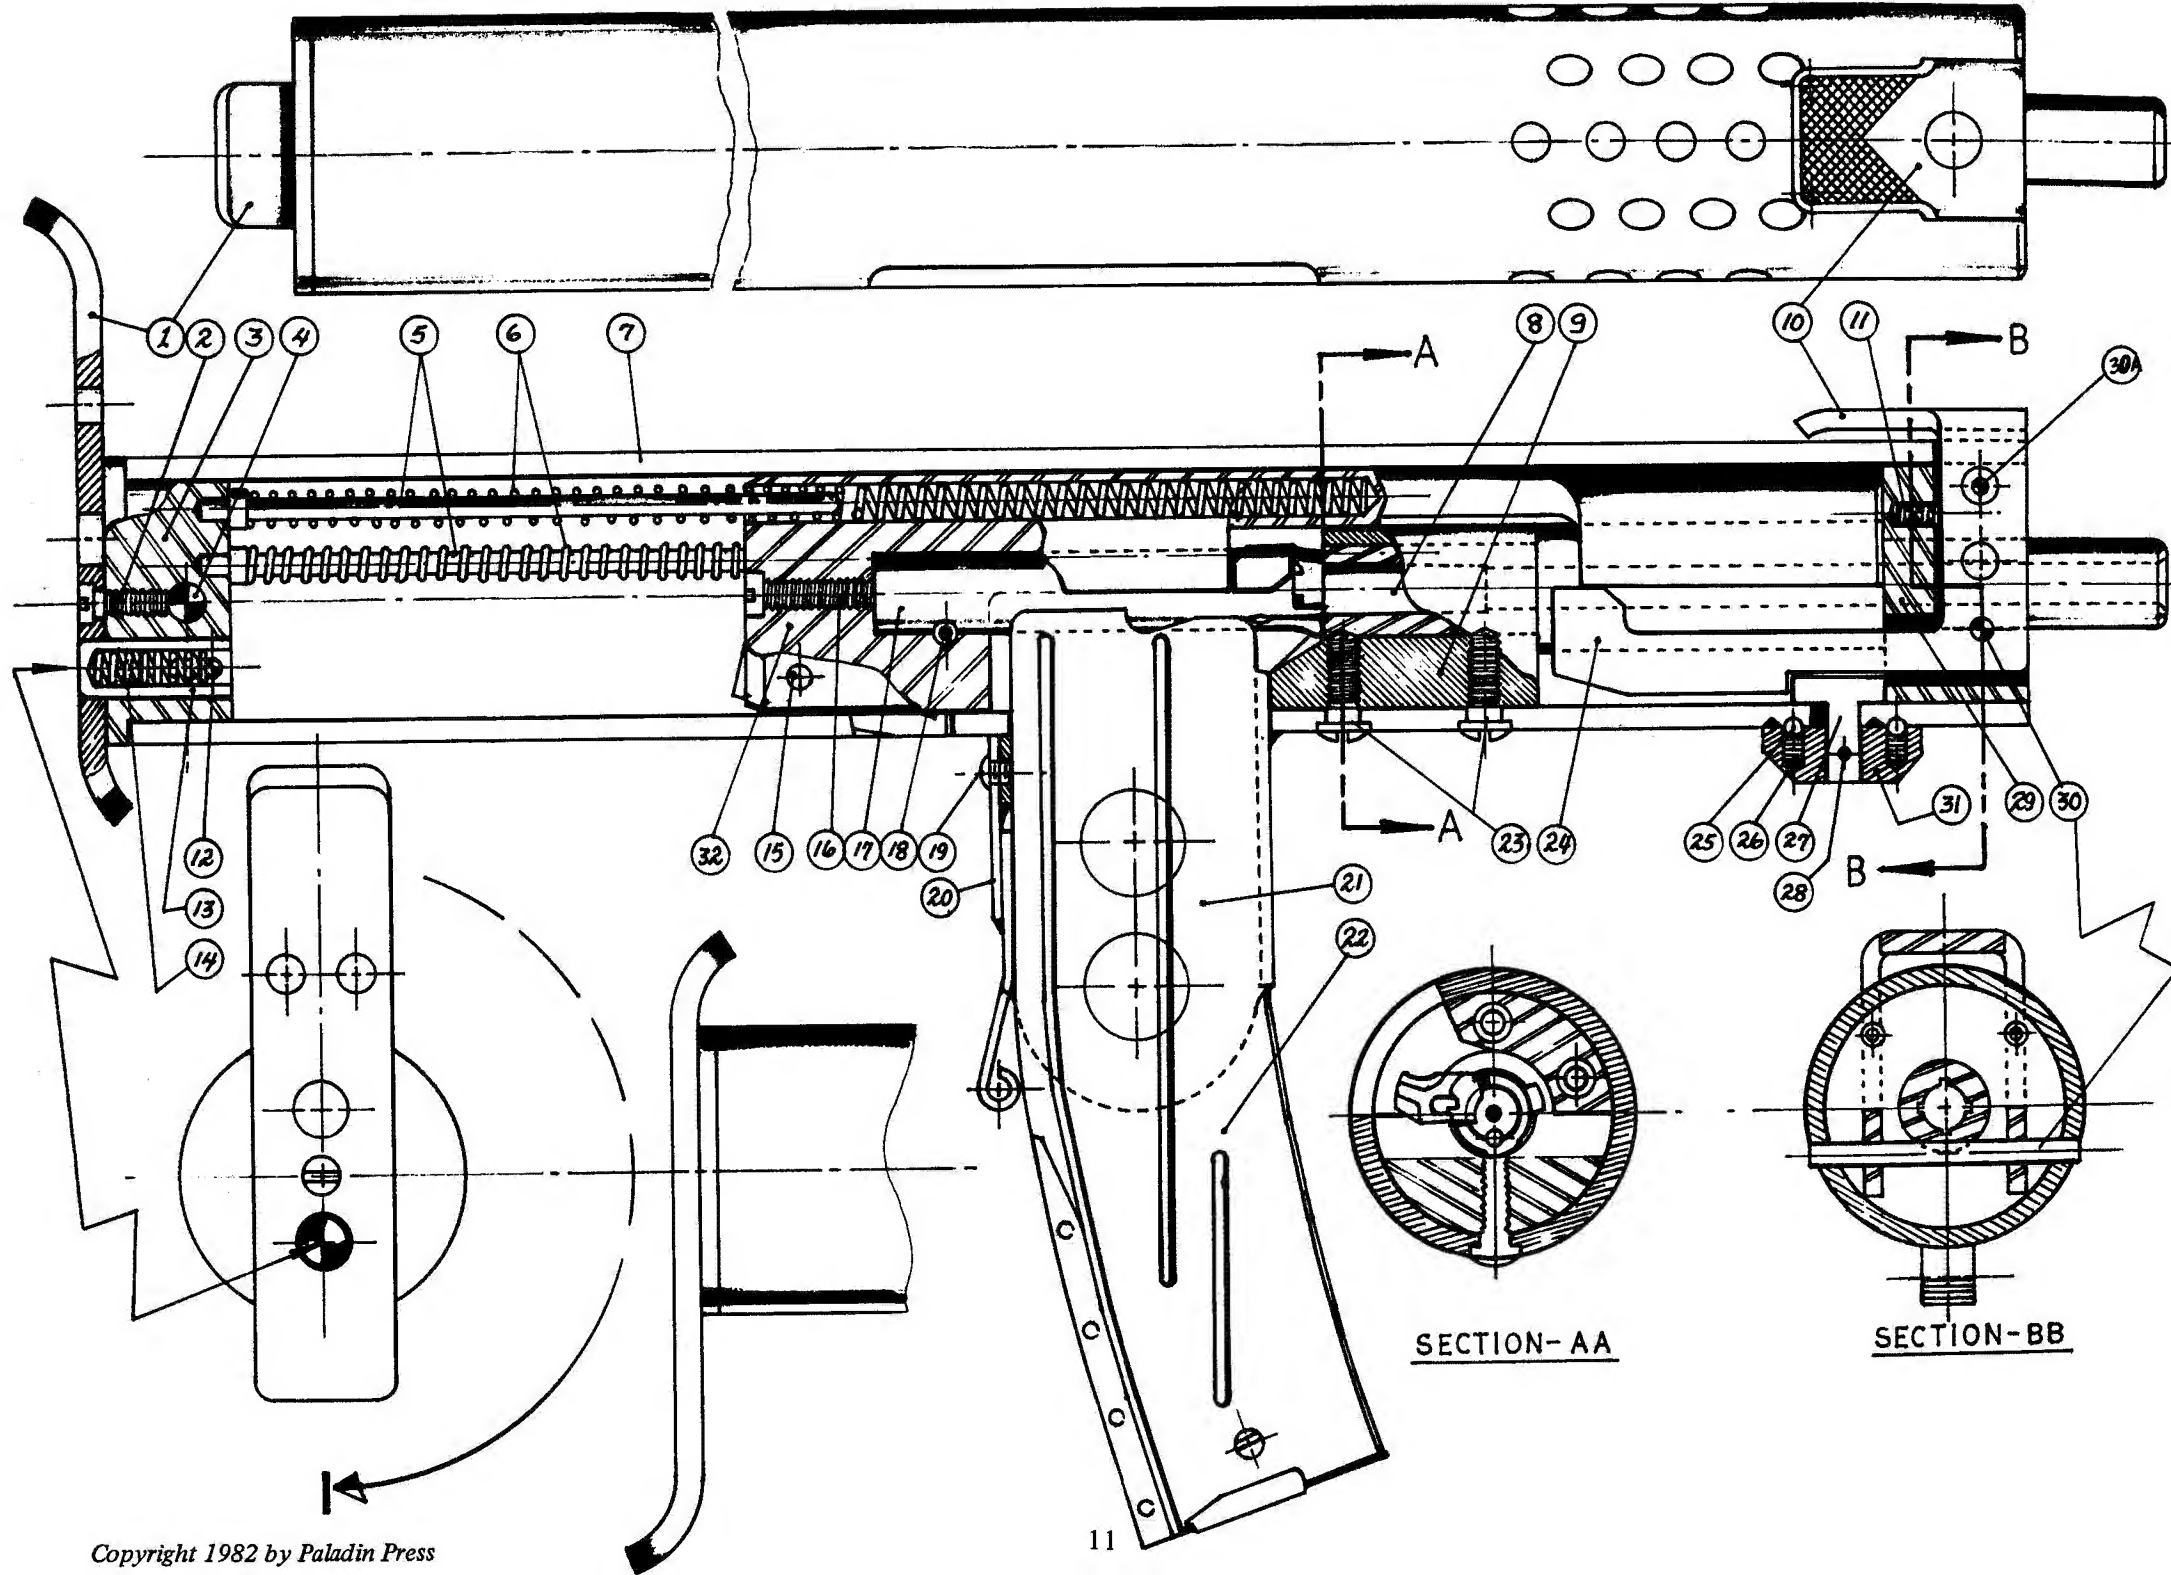





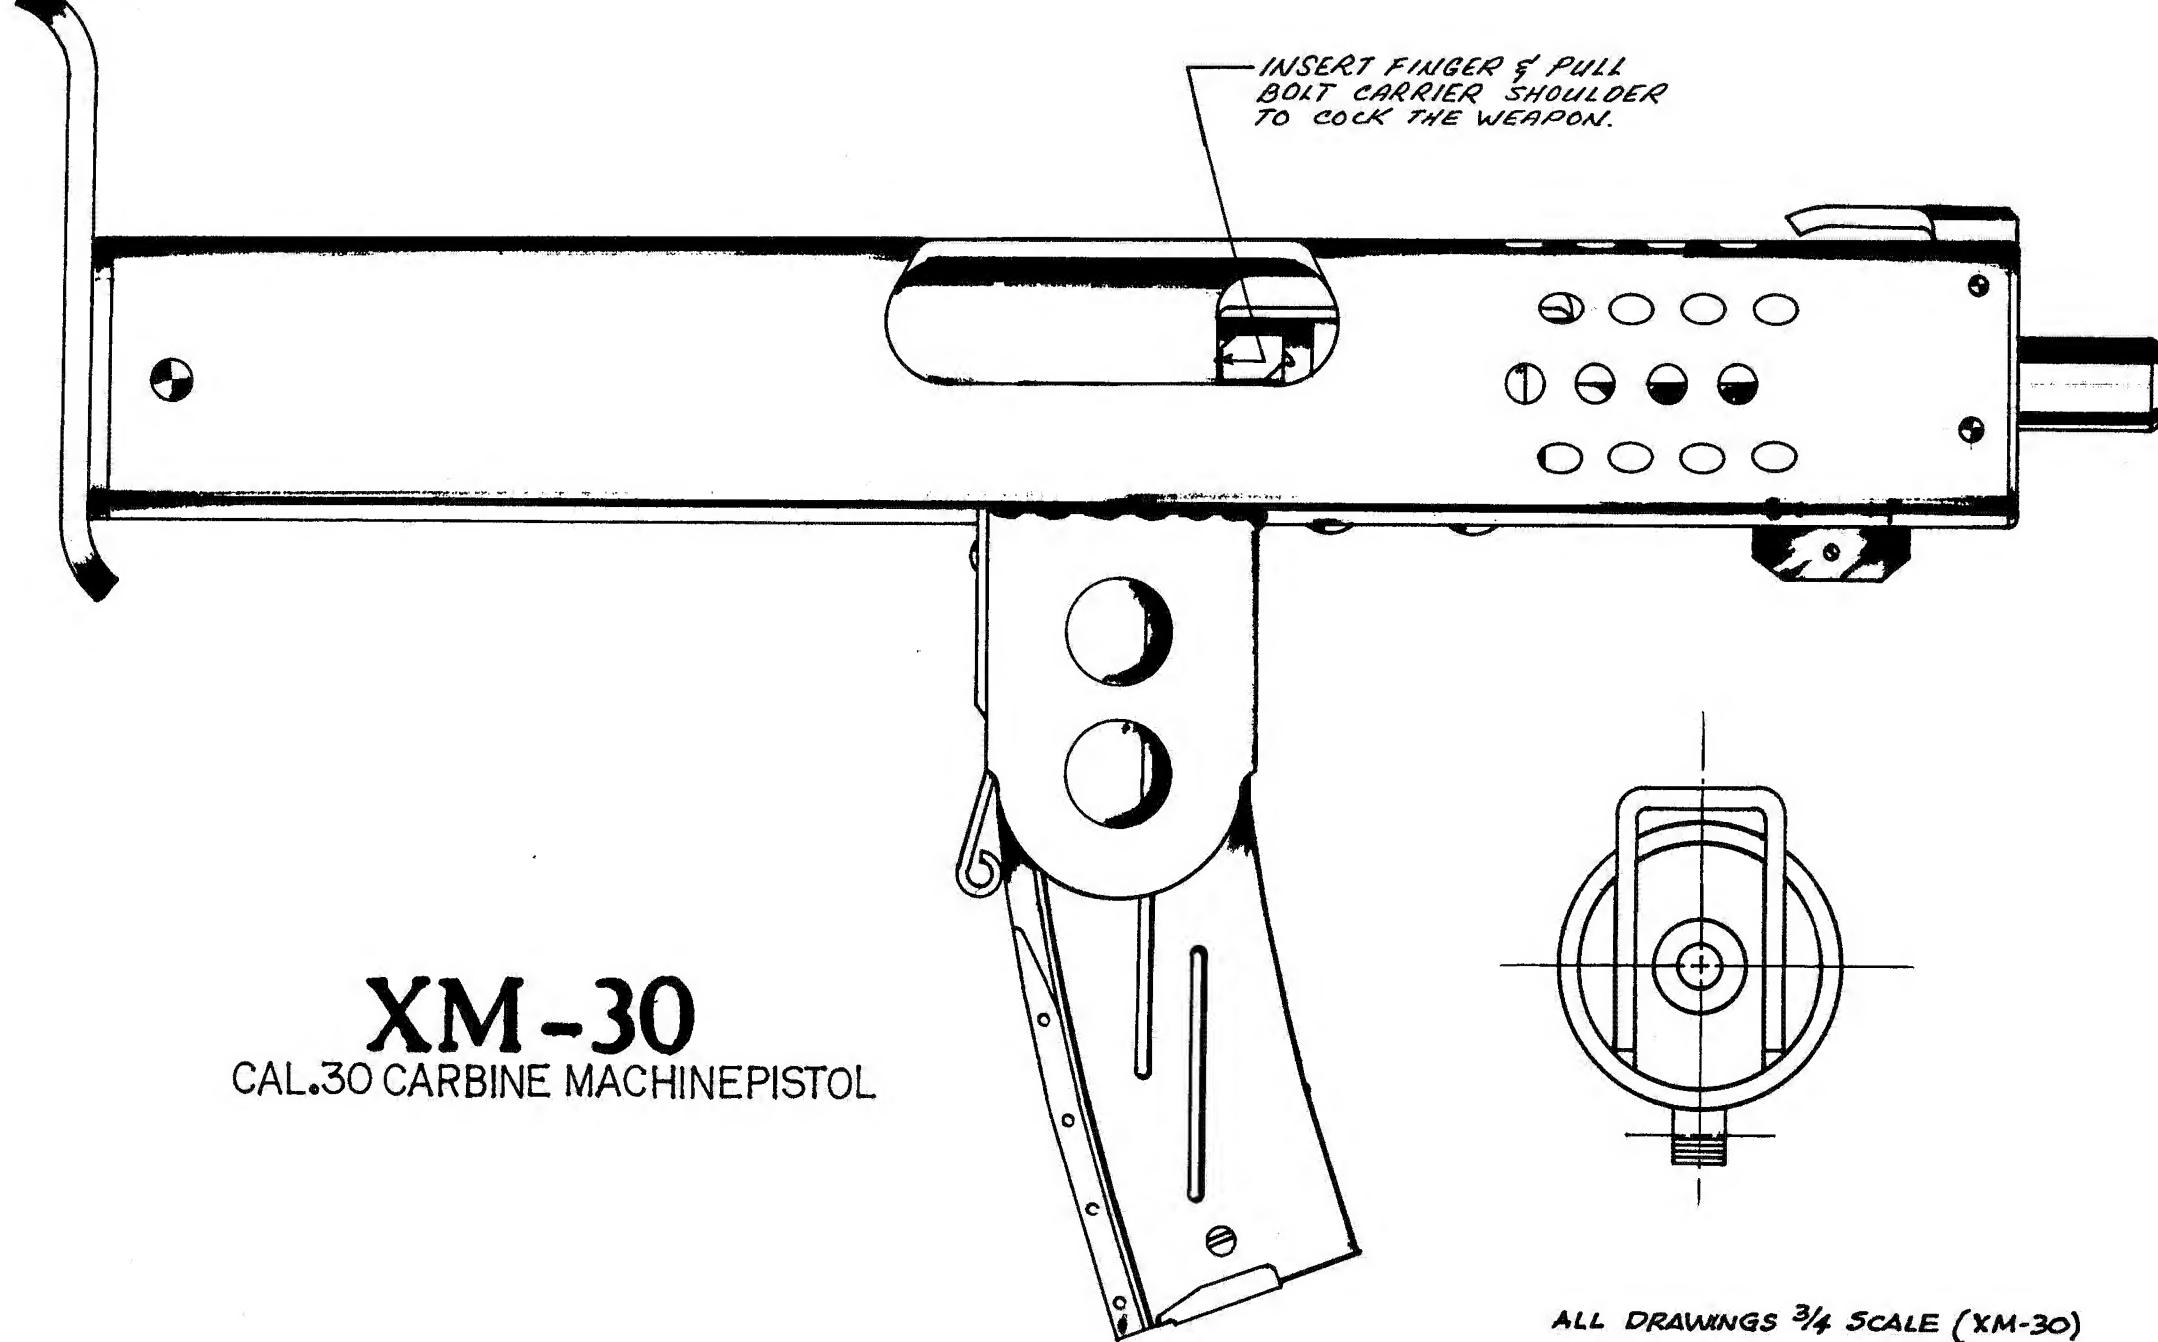


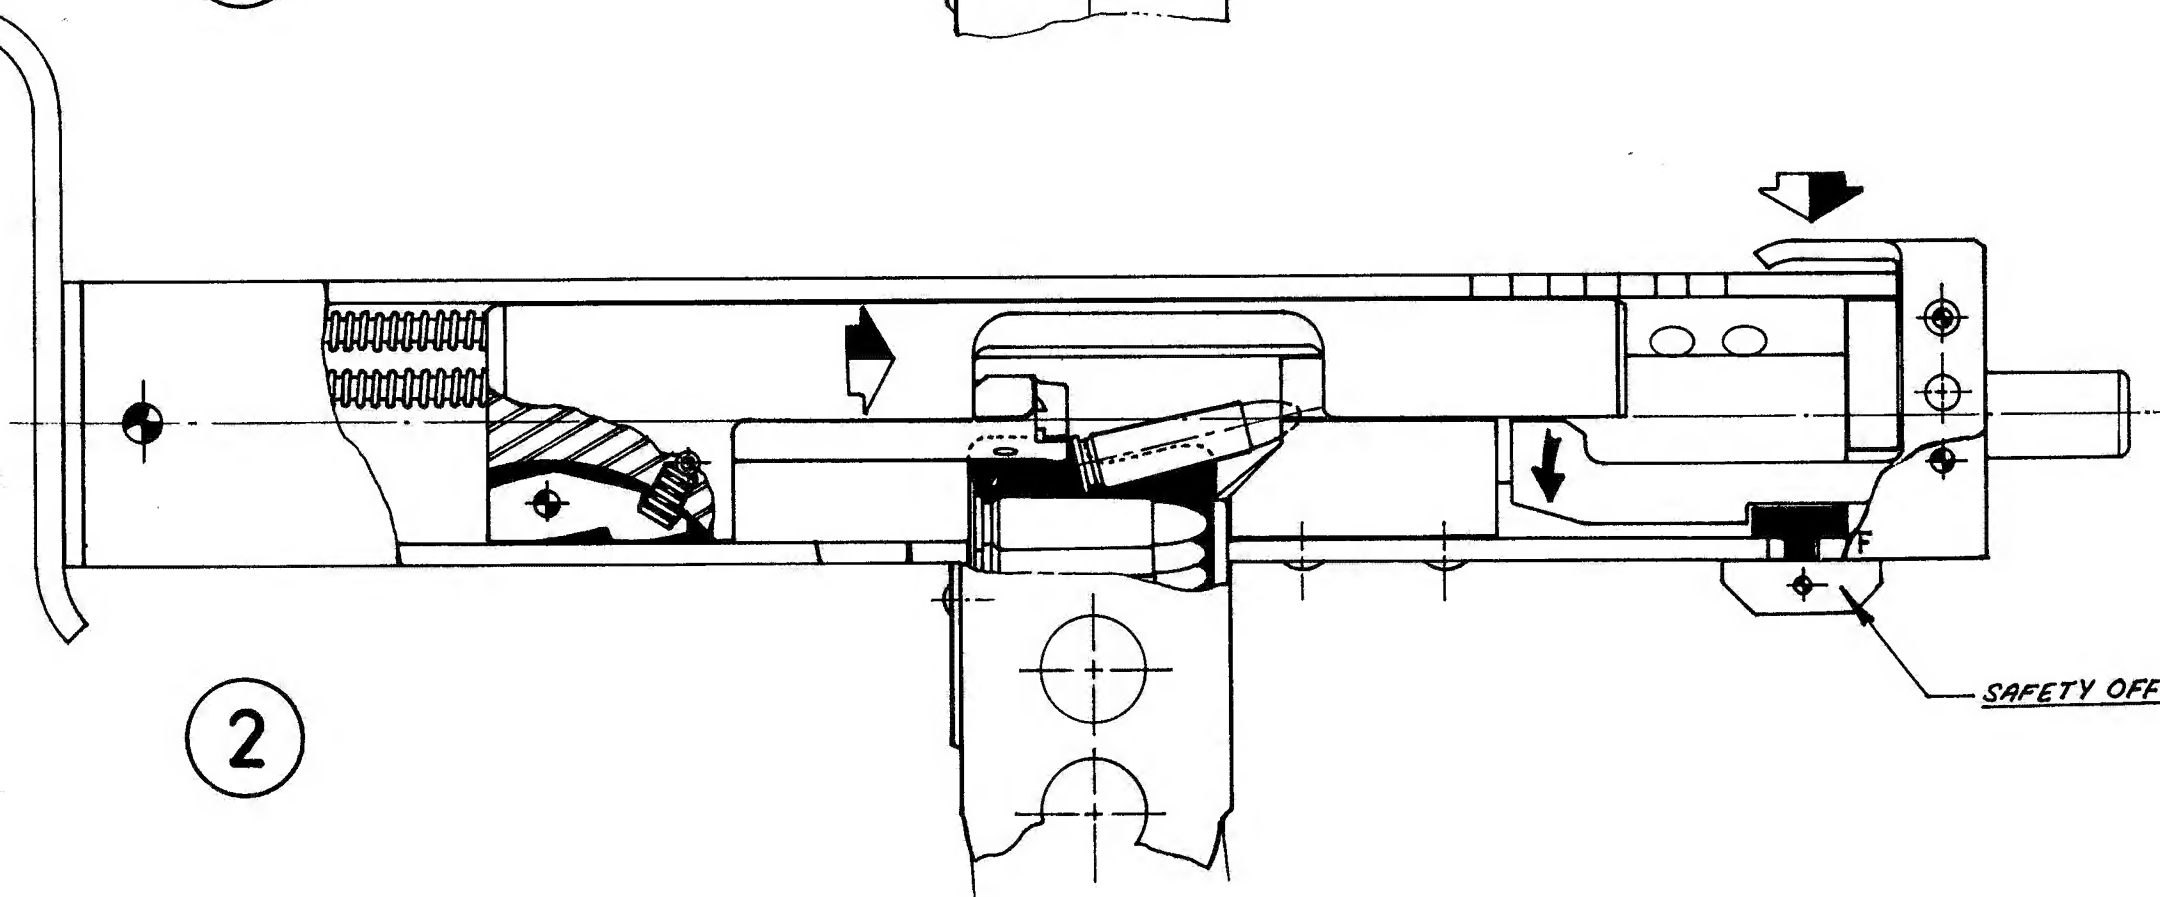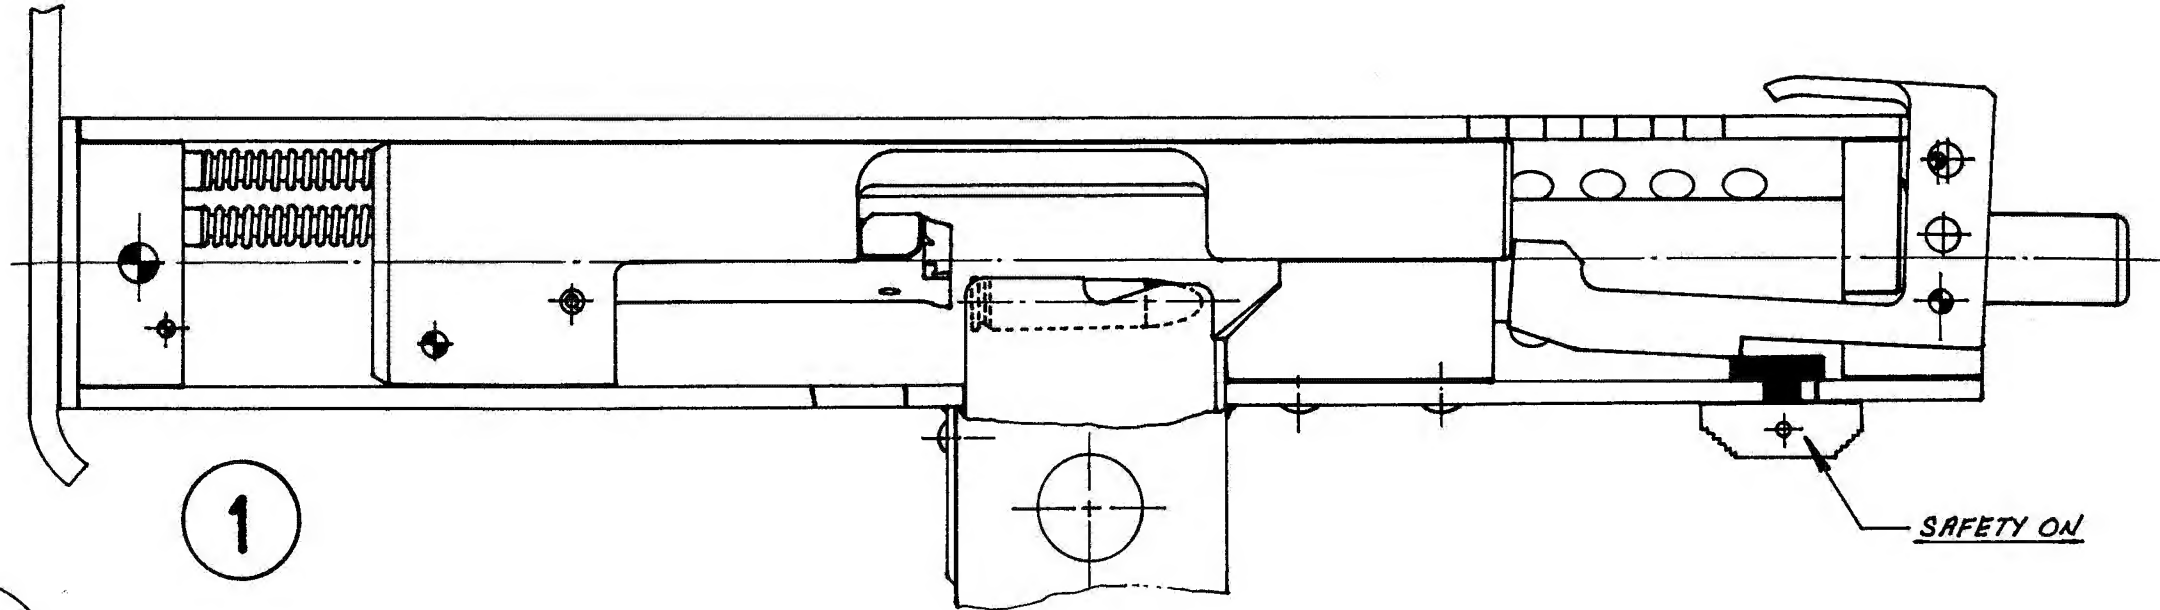

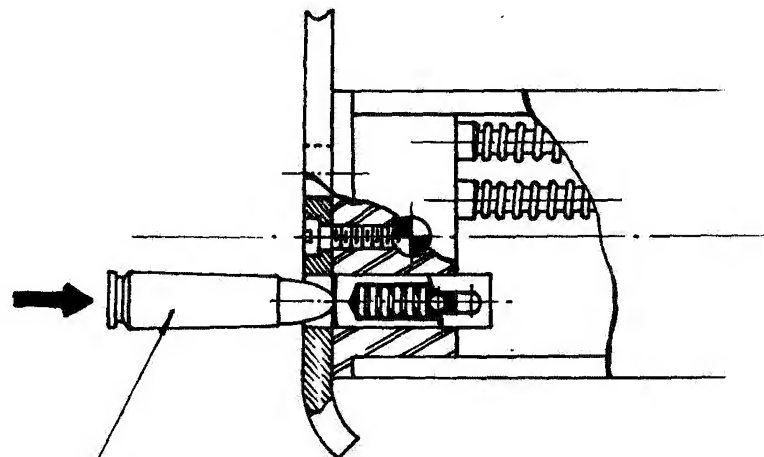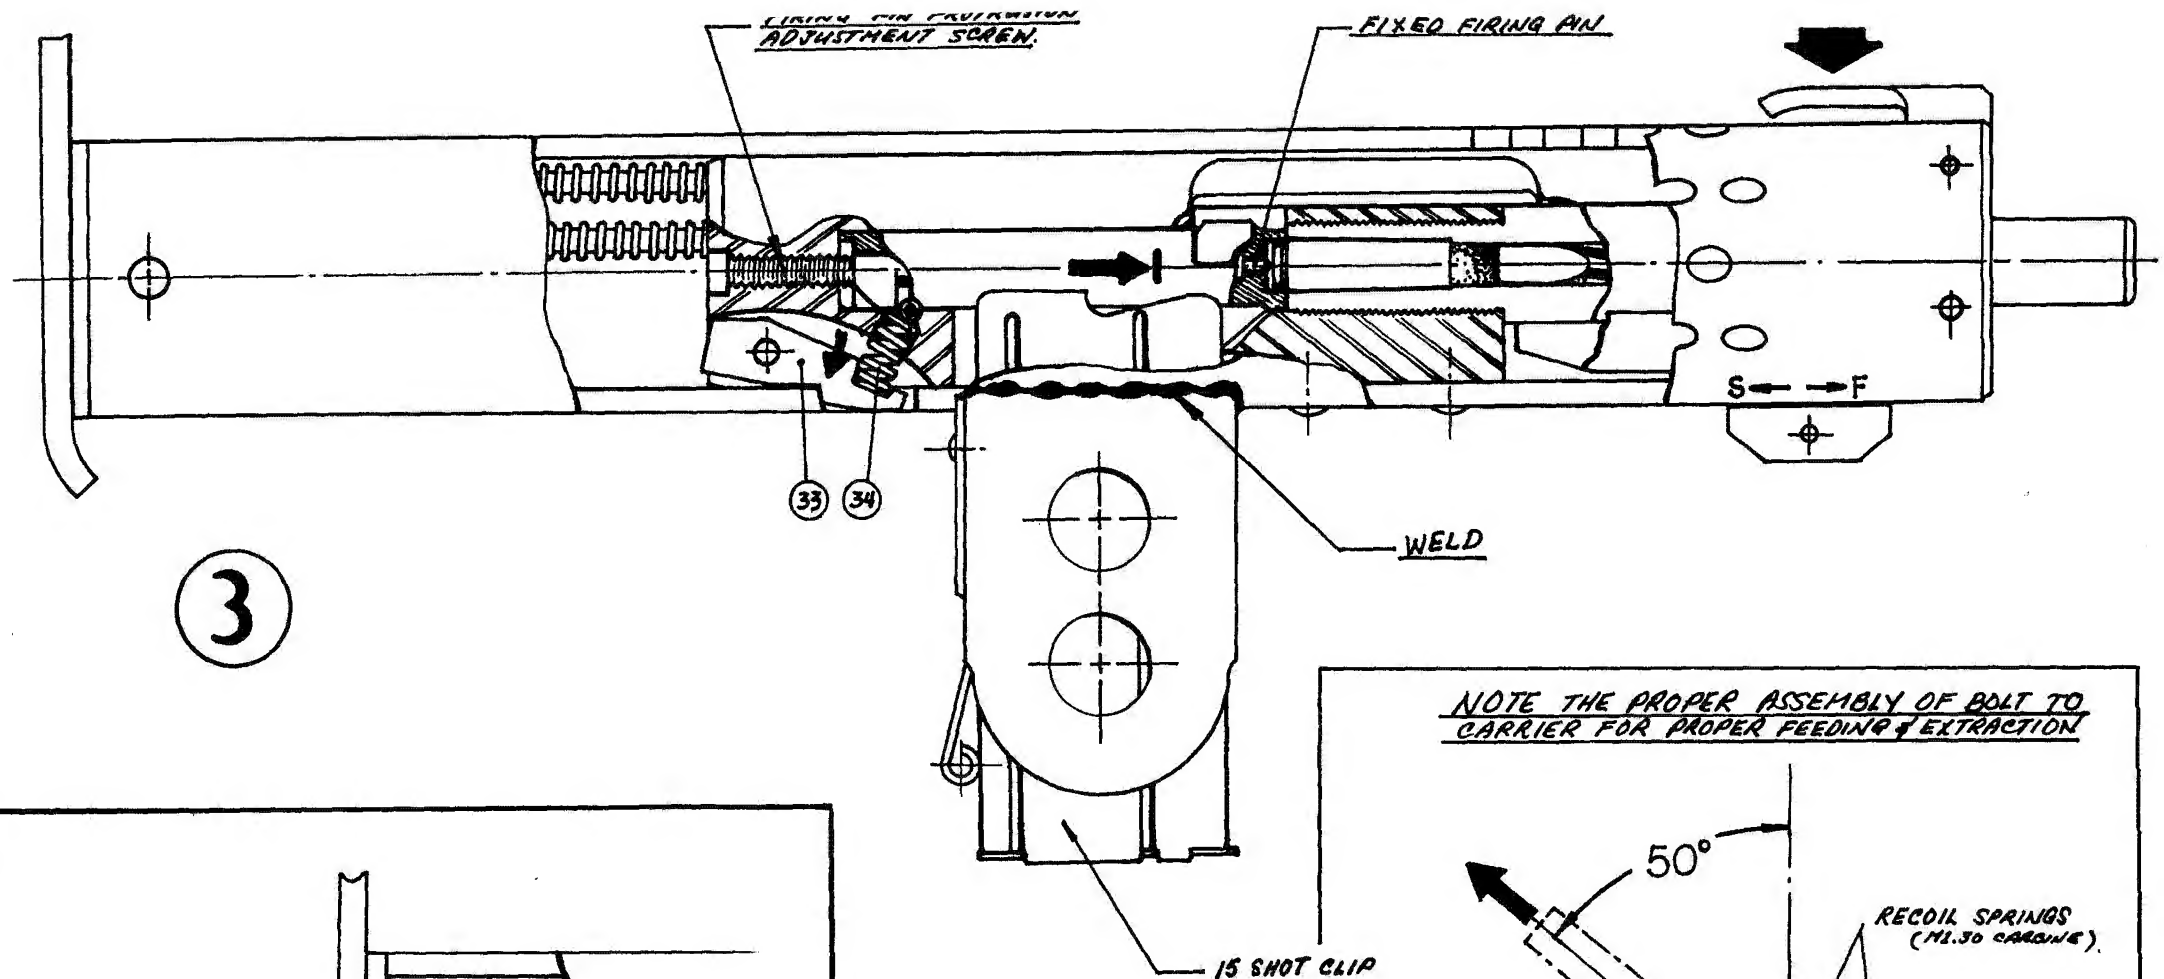

PRESS CARTRIDGE NOSE AGAINST
BOLT LOCK TO DISENGAGE BUTT
PLATE INDEX LOCKING PLATE
CAN NOW BE ROTATED TO LOWER
POSITION AS DESIRED.

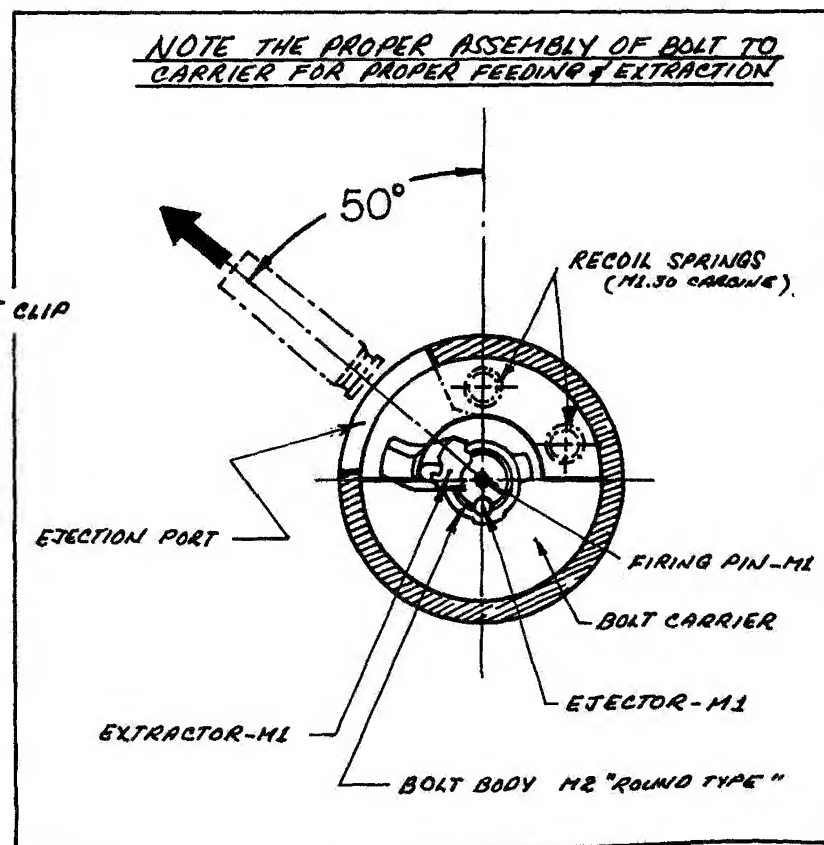


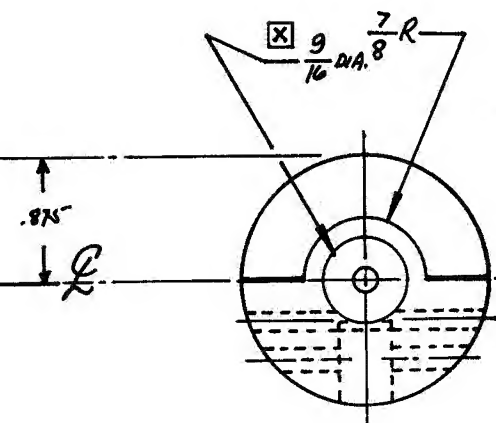
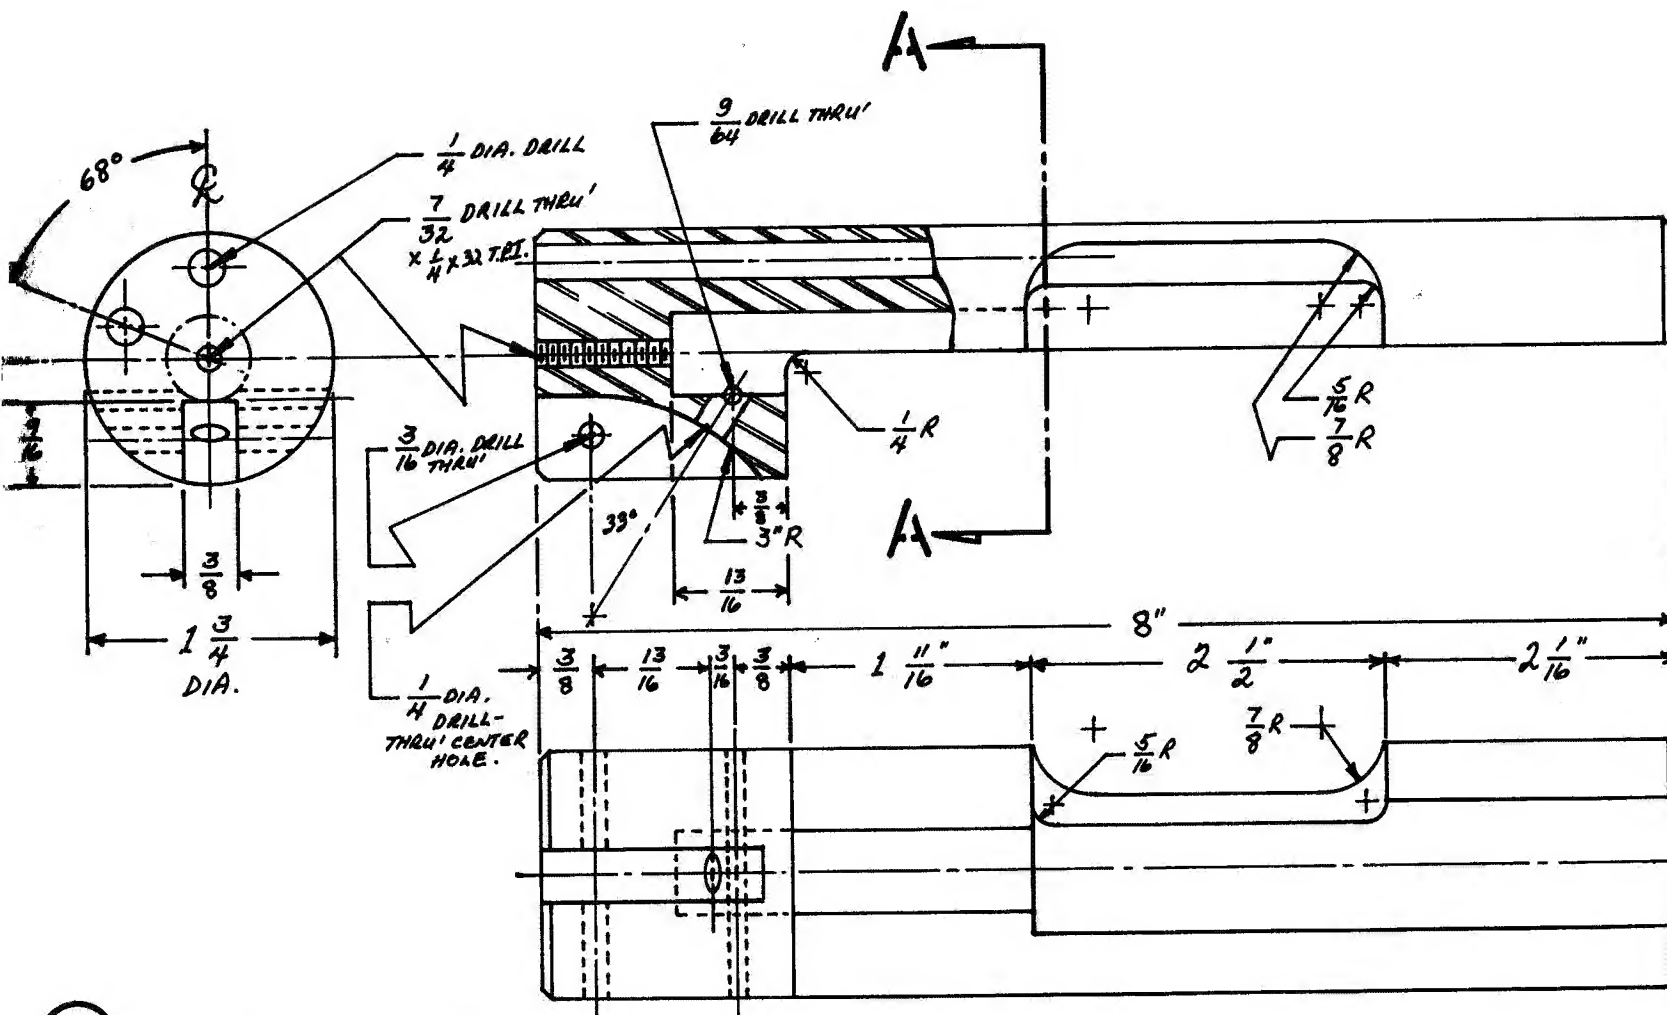
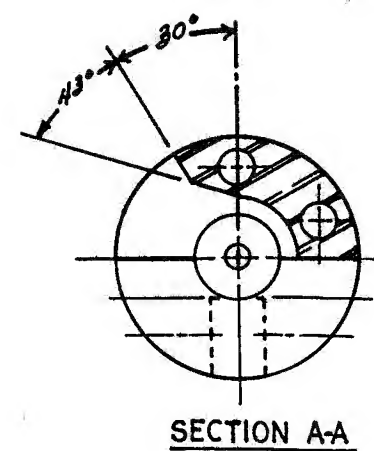
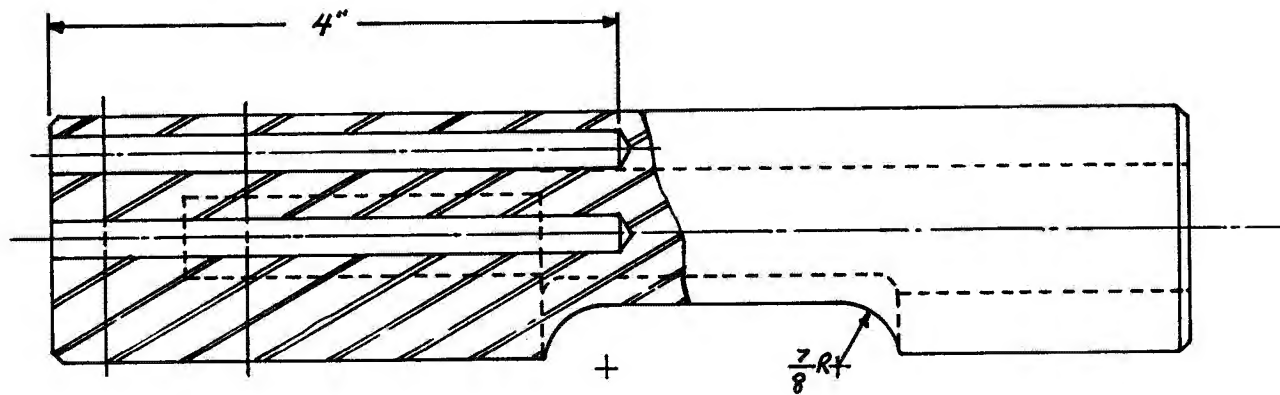


NOTE ON CENTER HOLE

- ⊗ DUE TO PARTS INTERCHANGEABILITY FOR M1 PARTS, THE CENTER HOLE MUST BE APPROXIMATE IN SIZE DIA. OF YOUR ROUND BOLT. IF POSSIBLE MUST BE TIGHTLY FITTED WHEN ASSEMBLED TO CENTER HOLE OF CARRIER.

32

BOLT CARRIER DETAIL

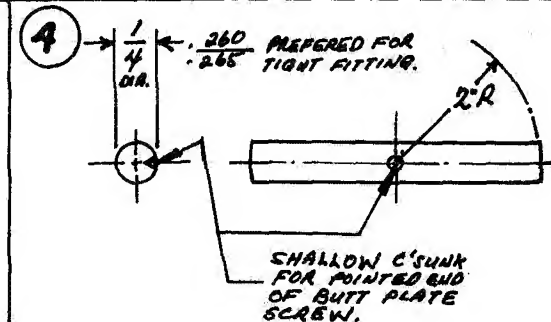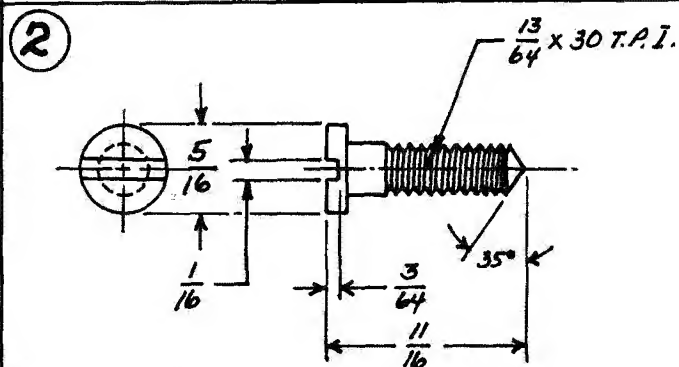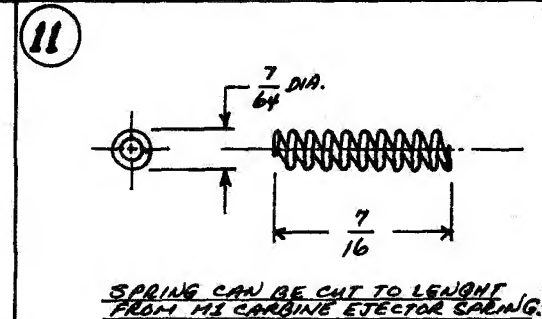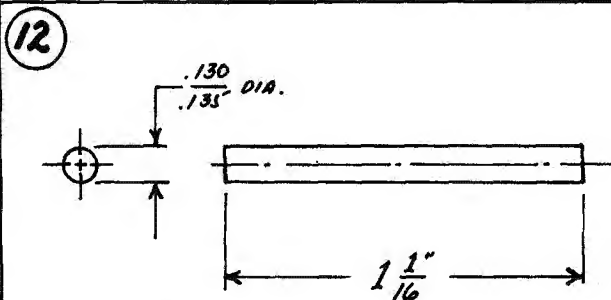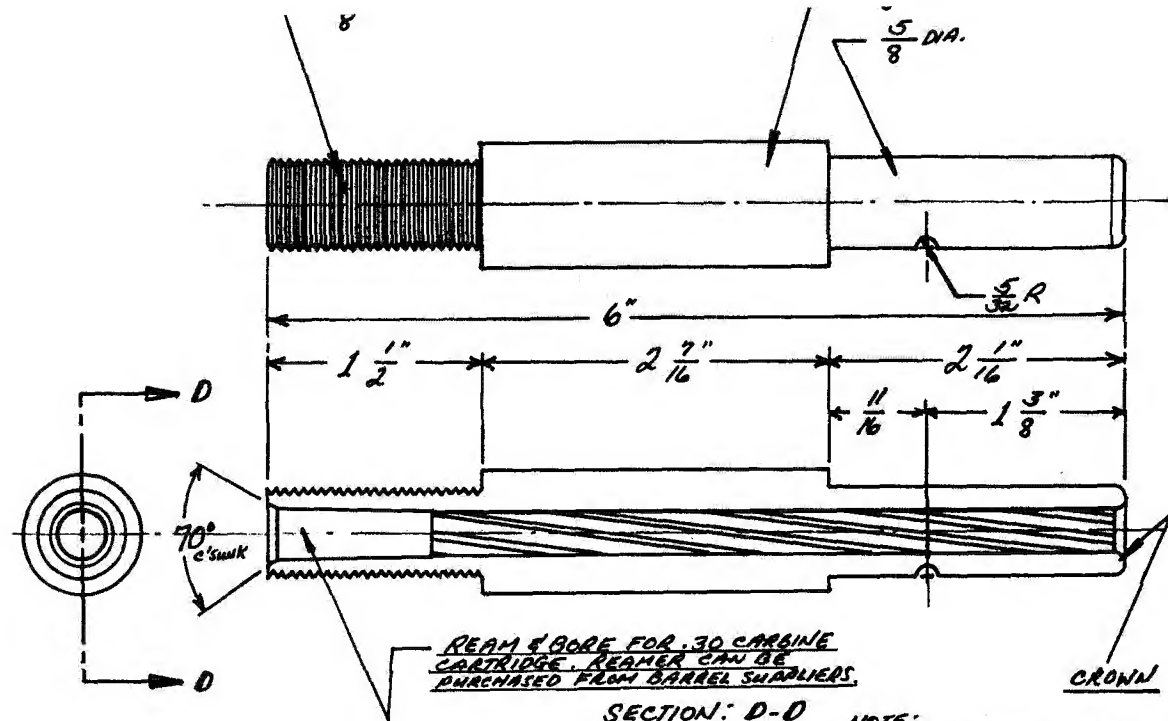

10

STIPPLE OR CHECKER THIS
SURFACE FOR BETTER THUMB GRIP.

$\frac{1}{2}$ DIA. DRILL THRU'

CHAMFER & POLISH SHARP CORNERS

$\frac{5}{32}$ DIA. -
DRL.
THRU

$\frac{1}{4}$ DIA. DRILL THRU'

$\frac{1}{4}$ DIA. DRILL THRU'

Technical drawing of a mechanical part, likely a bracket or support, showing dimensions in inches. The drawing includes a side view and a cross-sectional view.

Side View Dimensions:

- Overall width: $2 \frac{3}{16}$
- Top fillet radius: $1 \frac{3}{8} R$
- Vertical spacing between holes: $\frac{1}{2}$, $\frac{1}{2}$, $\frac{5}{16}$
- Overall height: 2
- Bottom flange thickness: $\frac{1}{8}$
- Horizontal distance from left edge to hole center: $1 \frac{3}{8}$
- Horizontal distance from hole center to right edge: $\frac{5}{16}$
- Overall length: $3 \frac{5}{16}$ REF.

Cross-sectional View Dimensions:


- Top fillet radius: $9 \frac{7}{16}$
- Inner width: $.875$
- Outer width: $.880$
- Overall width: 1.110
- Bottom width: 1.115

14

SPRING IS CUT FROM STANDARD
M1 CARBINE RECOIL SPRING.

Technical drawing of a spring. The left view is a cross-section showing an outer diameter of $\frac{1}{4}$ inch. The right view is a side view showing a length of $1 \frac{1}{4}$ inches.

15


5) 

16

ALLEN HEADLESS
BLOT SCREWTYP E $\frac{1}{4}$ x 32 T.P.I.

(18)

18



1 1/2"

9/64 DIA. ROLL PIN

29

$\frac{1}{8}$ DIA. DRILL THRU'

Technical drawing of a mechanical part showing Section A-A. The part is a rectangular block with a central hole and a smaller hole on the left. Dimensions are given in fractions of an inch. The section A-A is indicated by a vertical line through the center of the block.

Dimensions and features:

- Overall width: $1 \frac{3}{4}$ DIA.
- Overall height: $1 \frac{3}{4}$ DIA.
- Central hole diameter: $\frac{5}{32}$ DIA. DRILL THRU'
- Left hole diameter: $\frac{5}{16}$ DIA. DRILL THRU'
- Section A-A is indicated by a vertical line through the center of the block.





9

$$\frac{.895}{.900} R \text{ (FULL)}$$
 $1\frac{1}{4} R$ —


$\frac{19}{32}$ DIA. DRILL THRU'

SMOOTH POLISH
FEED RAMP


[illegible]

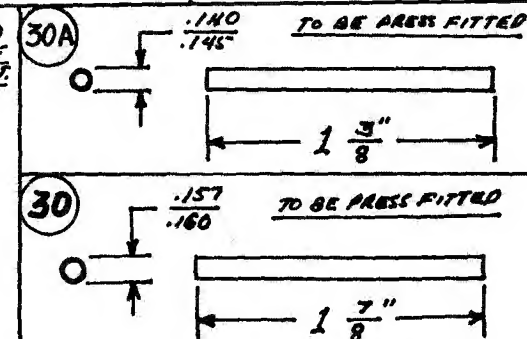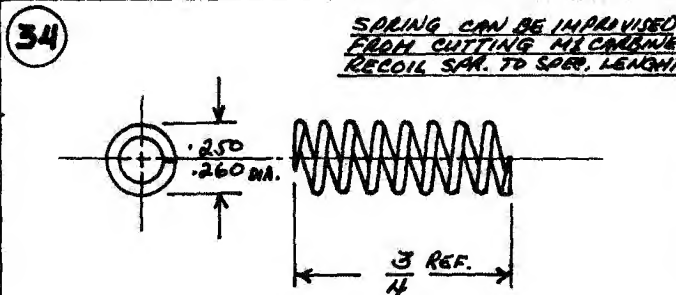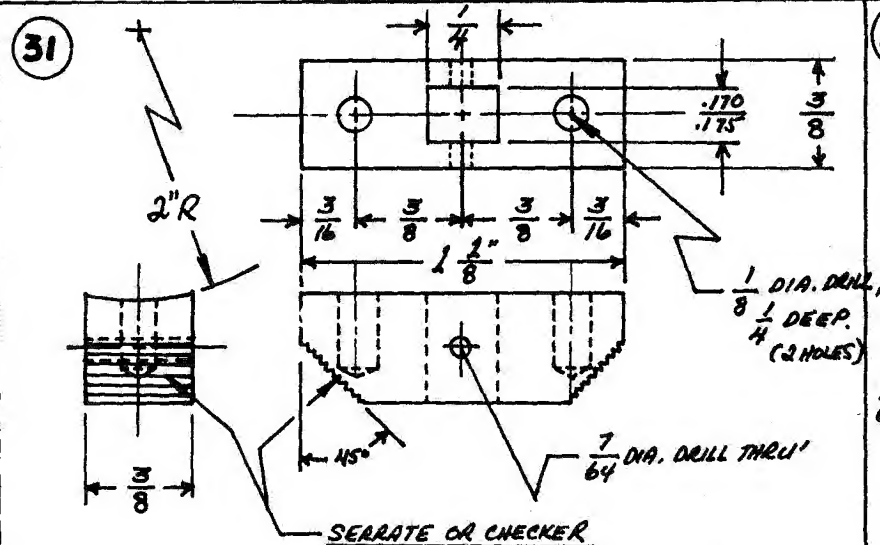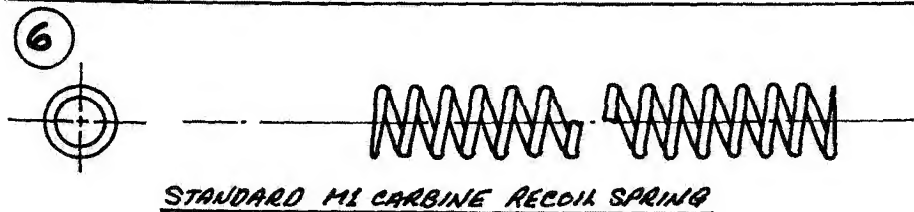


17

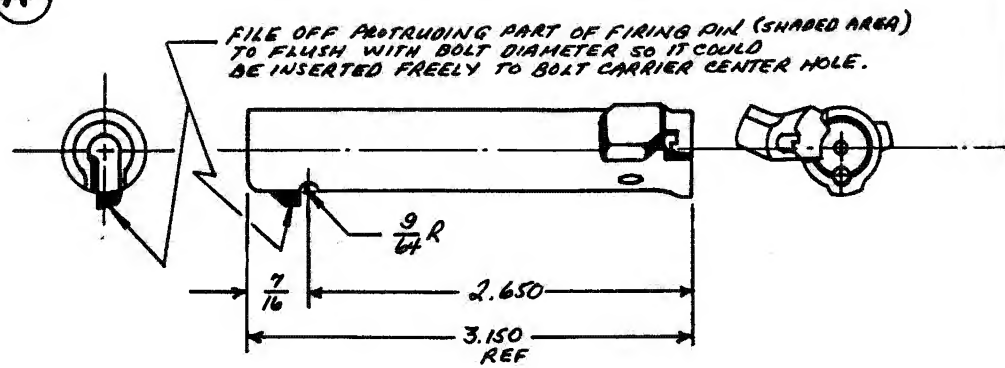


20

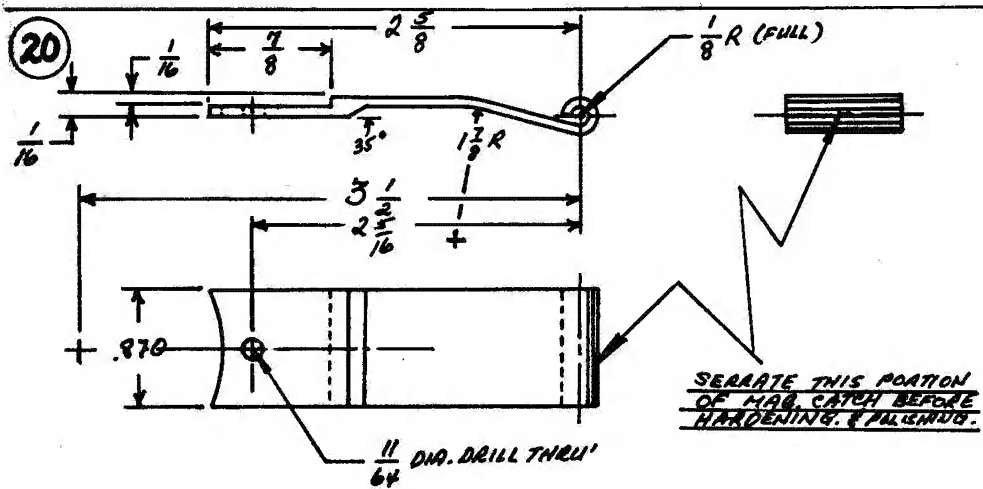


22

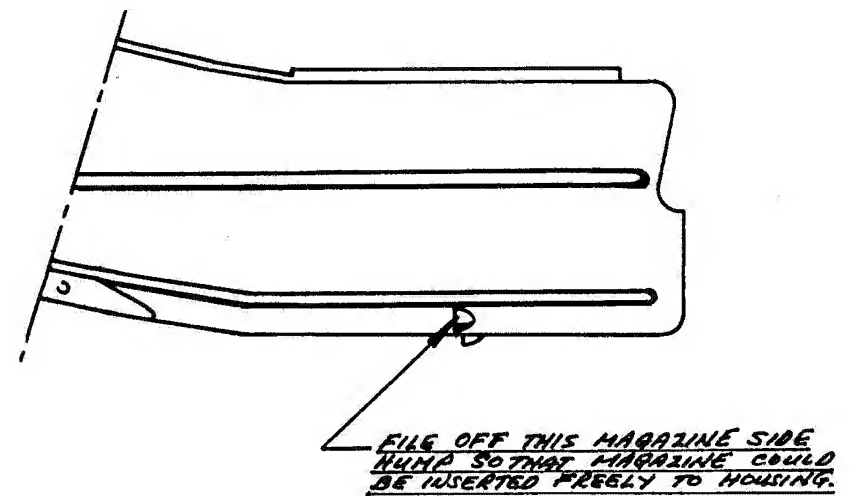

21

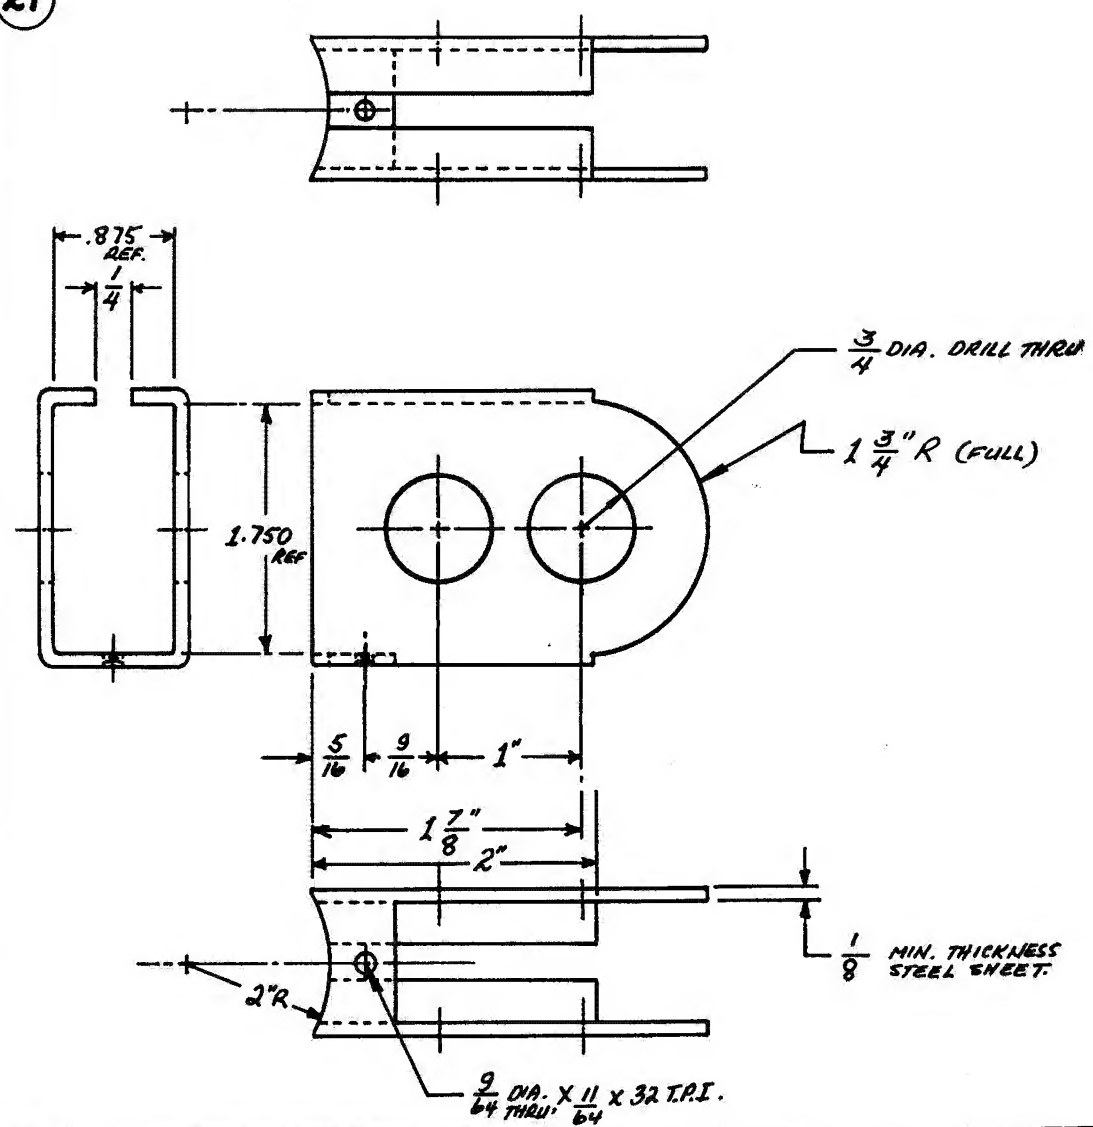

19

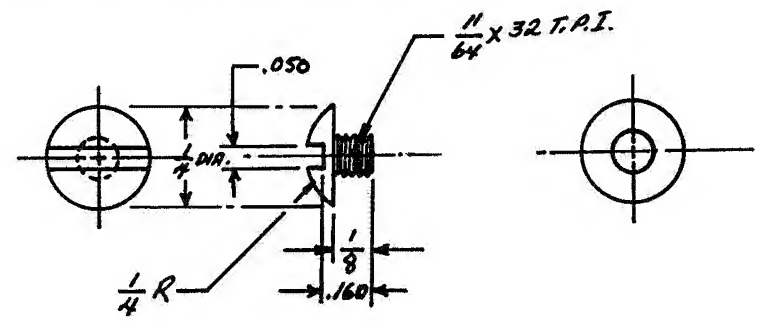



BROWNING HI-POWER MACHINE PISTOL CONVERSION

SPECIFICATIONS:

CATEGORY COMMERCIALLY MANUFACTURED
CALIBER 9 MM PARABELLUM
TYPE OF FIRE SELECTIVE:
SEMI AND FULL AUTO
OPERATION RECOIL-OPEN BOLT SYSTEM
MAGAZINE CAPACITY 13-AND 25-ROUND
MAGAZINES AVAILABLE
BARREL LENGTH 4-3/4- AND 7-INCH AVAILABLE

REMARKS: *THE PORTABILITY AND COMPACTNESS OF THIS WEAPON OFFERS A DEFINITE ADVANTAGE AS A POLICE OR MILITARY SPECIAL-PURPOSE WEAPON REQUIRING UNLIMITED FIREPOWER IN A SMALL PACKAGE. SOME MODELS HAVE TANGENT REAR SIGHTS GRADUATED UP TO 500 YARDS AND DETACHABLE SHOULDER STOCKS. THE ADDITION OF A SHOULDER STOCK, LONGER BARREL, AND AN IMPROVISED MUZZLE BRAKE SIMILAR TO THAT EMPLOYED IN MOST CONVENTIONAL SUBMACHINE GUNS (NOTABLY THE THOMPSON SMG) MAKES THE SYSTEM MORE EFFECTIVE AS A SMG. MAGNA-PORTING THE BARREL ALSO REDUCES THE MUZZLE CLIMB DURING AUTOMATIC FIRING.*

MOST MILITARY-ISSUE GUNS WITH TANGENT REAR SIGHTS HAVE A SLOT AT THE BACK OF THE GRIP FOR A SHOULDER STOCK ATTACHMENT AND ARE READILY CONVERTIBLE TO A VERY ACCURATE, LONG-RANGE PISTOL WITH THE STOCK ATTACHED. COMMERCIAL MODELS WITHOUT SLOTS CAN ALSO BE ADAPTED FOR A STOCK BY SIMPLY PATTERNING A SLOT ON A SMALL FIXTURE AND BRAZING OR SILVER-SOLDERING IT ONTO THE GRIP. A SKELETON-

TYPE DETACHABLE STOCK IS MUCH EASIER TO BUILD THAN THE CONVENTIONAL WOODEN SHOULDER STOCK.

SYSTEM OF OPERATION:

Originally, the Hi-Power pistol was issued and designed as a semiautomatic pistol with variant shoulder stock models. To convert the weapon to selective fire functioning without altering the receiver, it is necessary to improvise a separate trigger mechanism. Since the weapon is impossible to control with only one hand when it is on full automatic fire, it is necessary to add a forward grip to help control the upward motion of the muzzle during its operation. The forward grip contains the auxiliary trigger mechanism necessary to operate the weapon on semi or full automatic mode.

In the full automatic mode, it is advantageous to employ the proven open bolt system to prevent the possibility of "cookoff" or ignition of the cartridge by excessive heat build-up. The system allows the barrel to cool between firing intervals, since there is no ammunition in the chamber when the bolt is held in open position by the auxiliary sear. This will allow continuous ventilation during shooting intervals.

The original sear and sear lever must be replaced to operate the new open bolt system. The new sear must have a projecting lug with enough protrusion to be pressed down by the sear lever hook during the last 1/16-inch of travel by the fully closing slide. This will insure that the slide is fully locked to the barrel lugs before the hammer hits the firing pin to activate the cartridge.

The sear lever must have enough clearance to bypass the protruding lug while fully closing, until it touches the lever hook which forces the sear protrusion down, releases the hammer from cocked position, and ignites the cartridge. This

clearance also insures that the hammer will not be released before the slide is fully locked, causing malfunction or misfire during operation.

CONSTRUCTION DETAILS OF CONVERSION PARTS:

The auxiliary trigger mechanism and trigger housing can be readily built with or without the aid of machining. The trigger housing is steel sheet about 1/16-inch thick. The internal dimension of the housing must conform with the thickness of the Hi-Power's trigger guard where the rear portion of the auxiliary housing is to be mounted.

The auxiliary trigger and sear must also conform with the housing's internal dimension in order to avoid looseness. Hard-ended hex screws are preferable for mounting the auxiliary trigger housing to the Hi-Power's receiver. The receiver must be threaded for mount screws.

The auxiliary safety-selector mechanism can be positioned either to the left or right and is retained by a snap ring. It contains the index ball and spring, as does the conventional-type selector, for type of fire.

The one-piece grip may be either wood or plastic. The grip contains the crossbolt nut that mates with the grip screw in securing the grip to the auxiliary housing. The crossbolt nut contains the trigger return plunger and spring.


CAUTION: NEVER RETRACT THE SLIDE TO LOAD THE CHAMBER IF THE AUXILIARY TRIGGER MECHANISM THAT HOLDS THE SLIDE OPEN IS NOT INSTALLED. THE WEAPON WILL FIRE ON FULL AUTOMATIC UNTIL THE MAGAZINE IS EMPTY EVEN WITHOUT THE TRIGGER BEING PRESSED. This warning applies only if the original sear and sear lever are replaced with the sear and sear lever for automatic functioning. Then the sear is tripped every time the bolt is closed by the sear lever hook.

Note on operating the triggers (front/auxiliary and rear/original): The auxiliary trigger mechanism controls all the func-

tioning in the conversion mode. The original trigger mechanism does not operate after the conversion parts are installed. Pressing the factory-original trigger will not have an effect on the conversion parts since it is completely deactivated once the conversion parts are installed.


The original safety lever and auxiliary safety selector lever can be activated at the same time the slide is retracted on the hold-open position. This insures a double safety system. However, to put the weapon in firing position, both safeties must be disengaged.

BROWNING HI POWER "MACHINEPISTOLE"

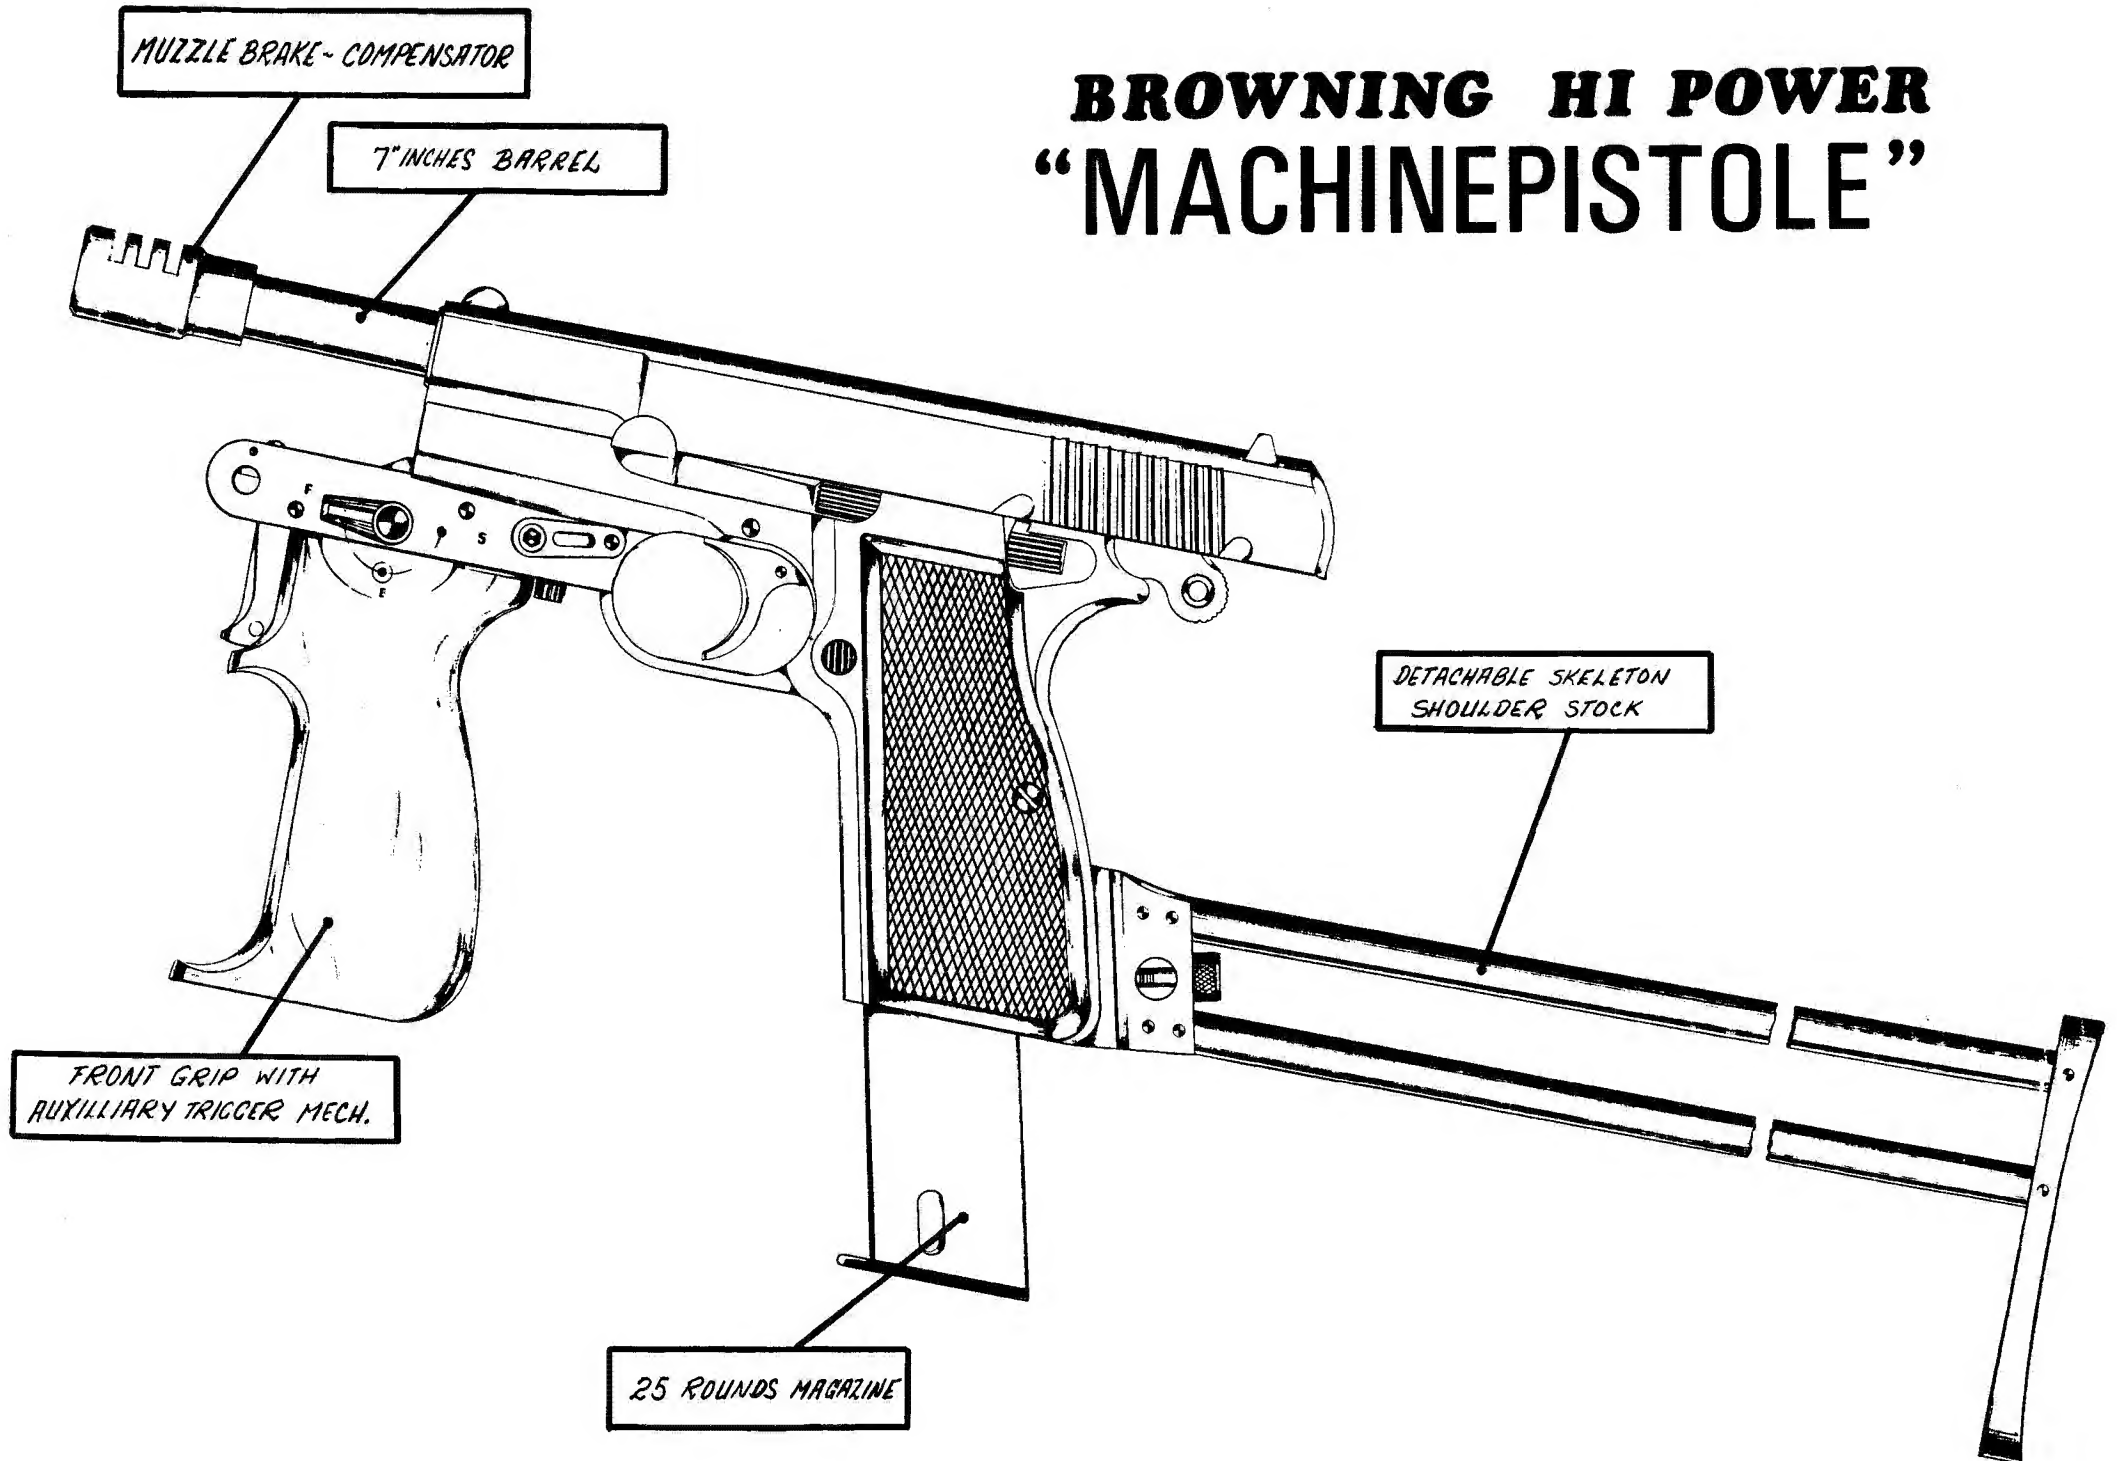

PARTS LIST:

1. *Selector lever pin*
2. *Auxiliary sear stop pin*
3. *Auxiliary trigger housing frame—formed sheet metal*
4. *Auxiliary sear*
5. *Trip*
6. *Trip pin*
7. *Auxiliary trigger pin*
8. *Trip spring plunger*
9. *Trip spring*
10. *Auxiliary trigger*
11. *Trigger spring plunger*
12. *Trigger spring*
13. *Trigger spring and plunger assembly housing tube*
14. *One-piece wood front grip*
15. *Auxiliary sear spring mount*
16. *Auxiliary sear spring*
17. *Auxiliary trigger housing connecting plate screw*
18. *Auxiliary trigger housing assembly screws—two-piece hex type*
19. *Auxiliary sear pin*
20. *Same as #4*
21. *Grip stock/plunger assembly housing tube retaining screw*
22. *Selector index stop notch shoulder—pressed-fitted milled metal rod*
23. *Connecting plate pin*
24. *Auxiliary trigger housing plate insert*
25. *Replacement or modified original tripping shoulder—original sear lever*
26. *Replacement sear*
27. *Selector lever*
28. *C-clip—purchased*
29. *Selector index steel ball*
30. *Same as #27*
31. *Selector index ball spring*
32. *Selector lever/pin rivet*
33. *Auxiliary trigger housing connecting plate*

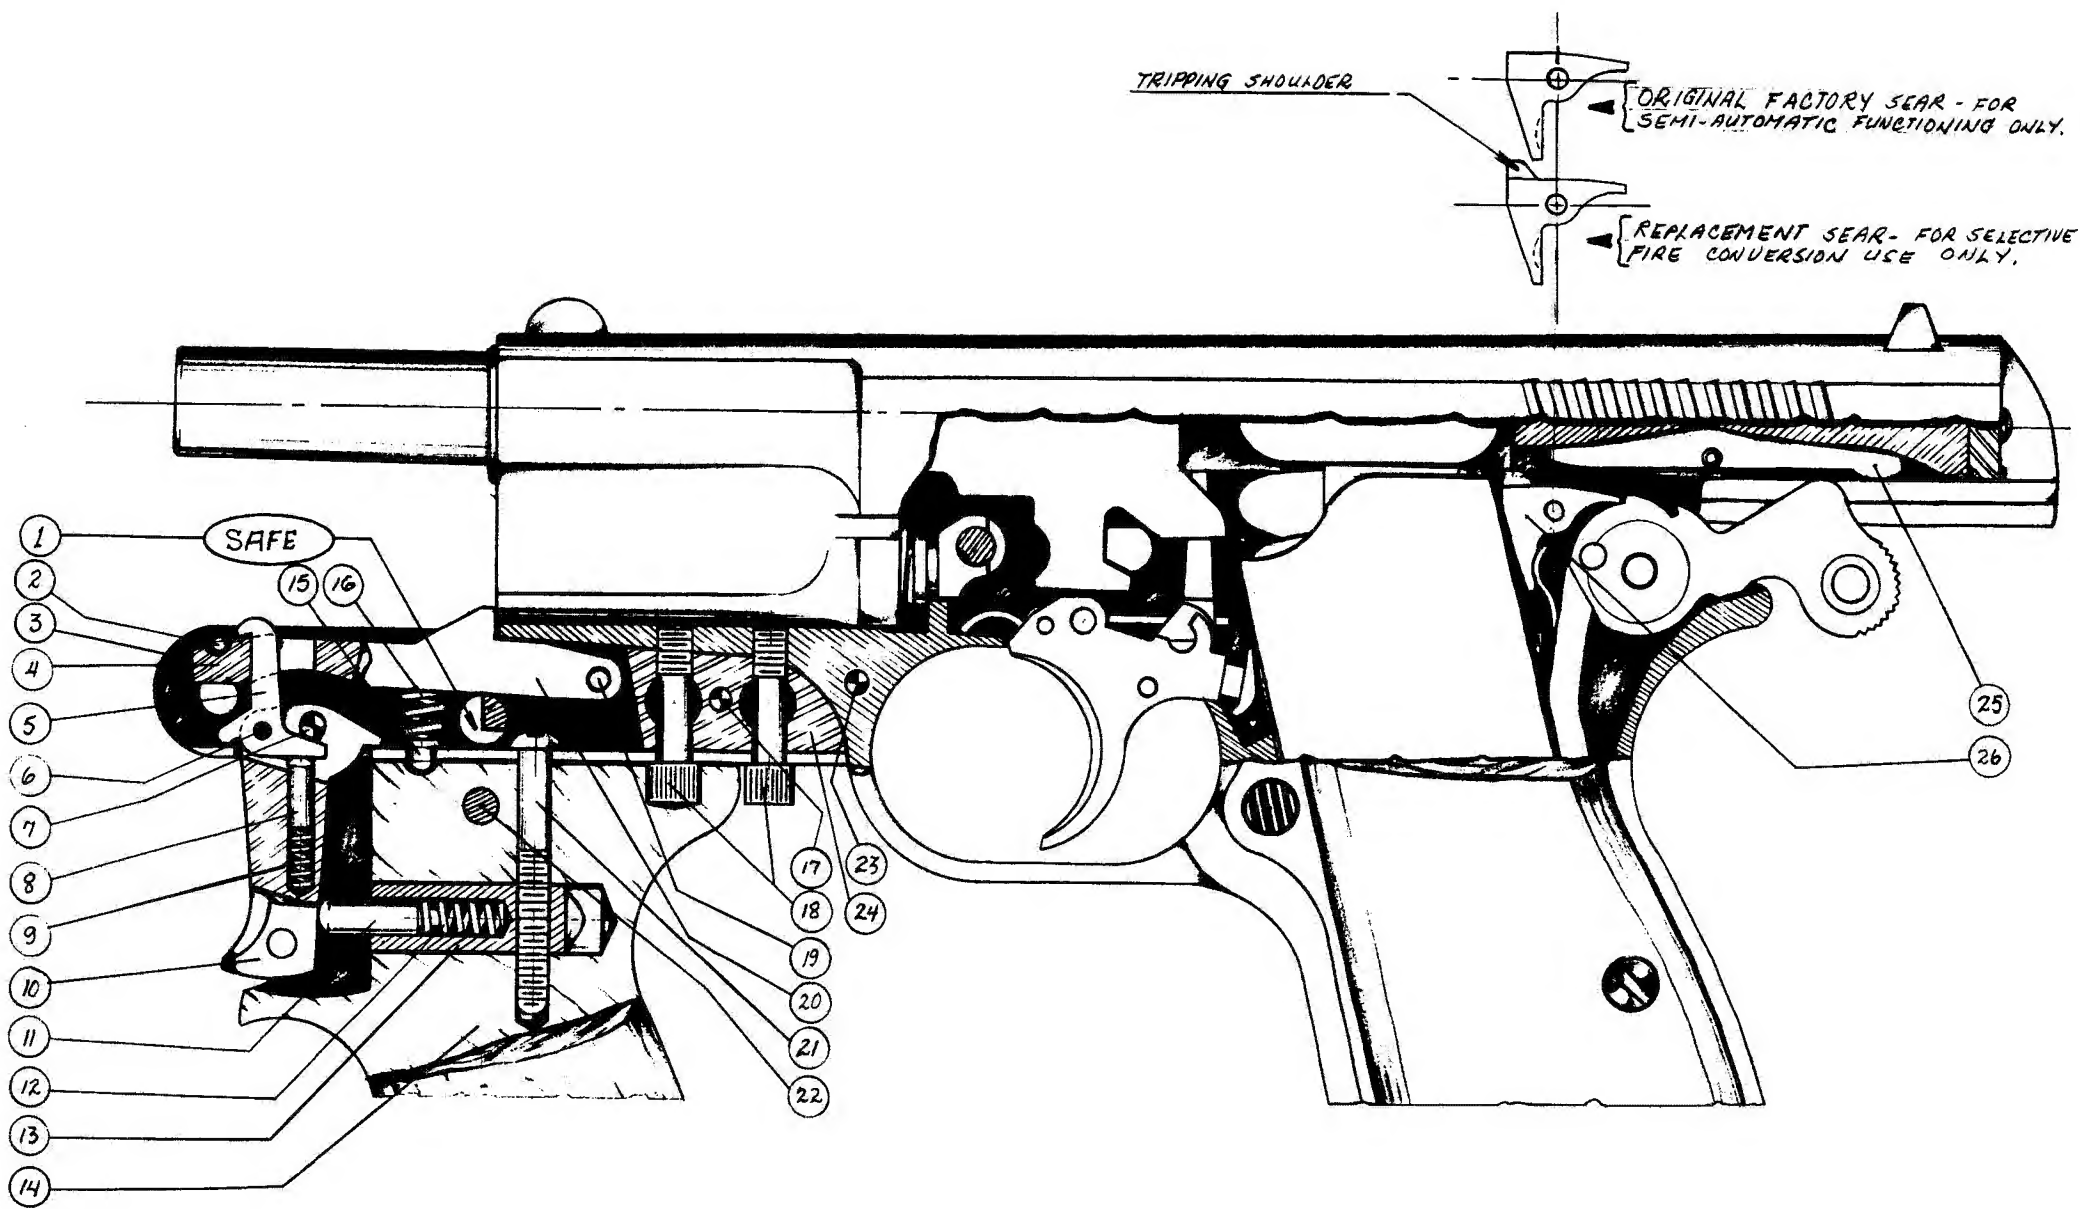

.9mm

BROWNING HI POWER

Selective fire conversion







TRIPPING SHOULDER

ORIGINAL FACTORY SEAR - FOR SEMI-AUTOMATIC FUNCTIONING ONLY.

REPLACEMENT SEAR - FOR SELECTIVE FIRE CONVERSION USE ONLY.

AUXILLARY TRIGGER MECHANISM
~ FOR SELECTIVE FIRE CONVERSION ~

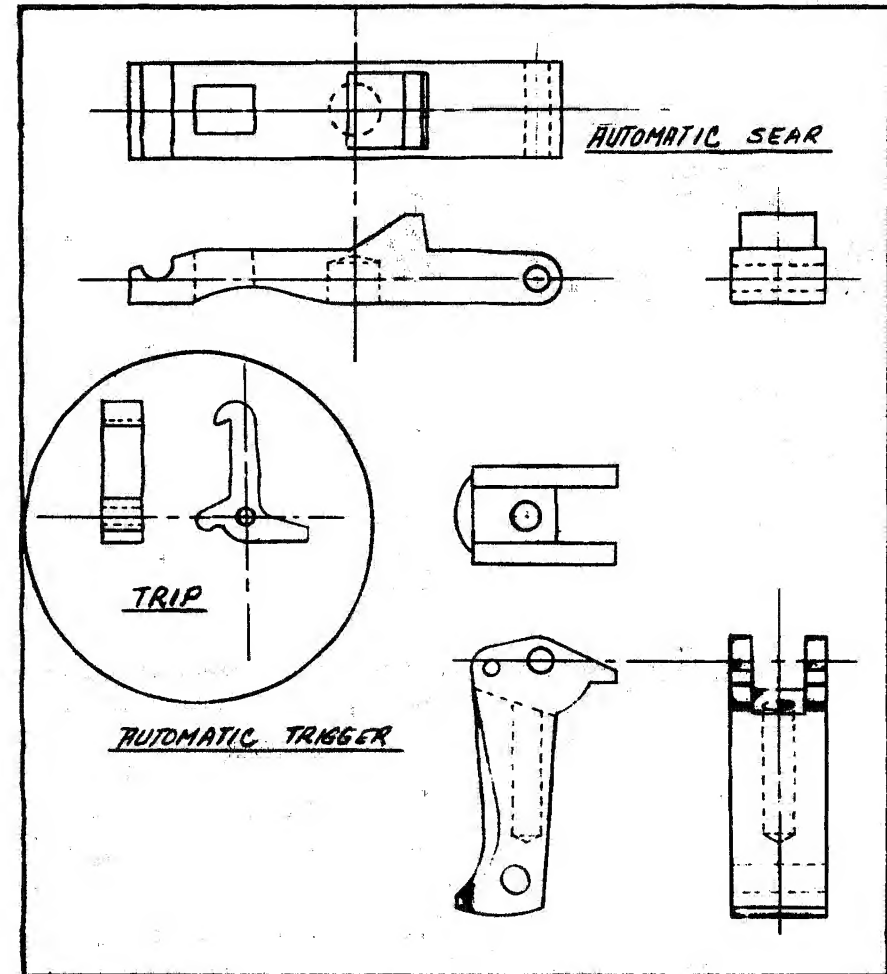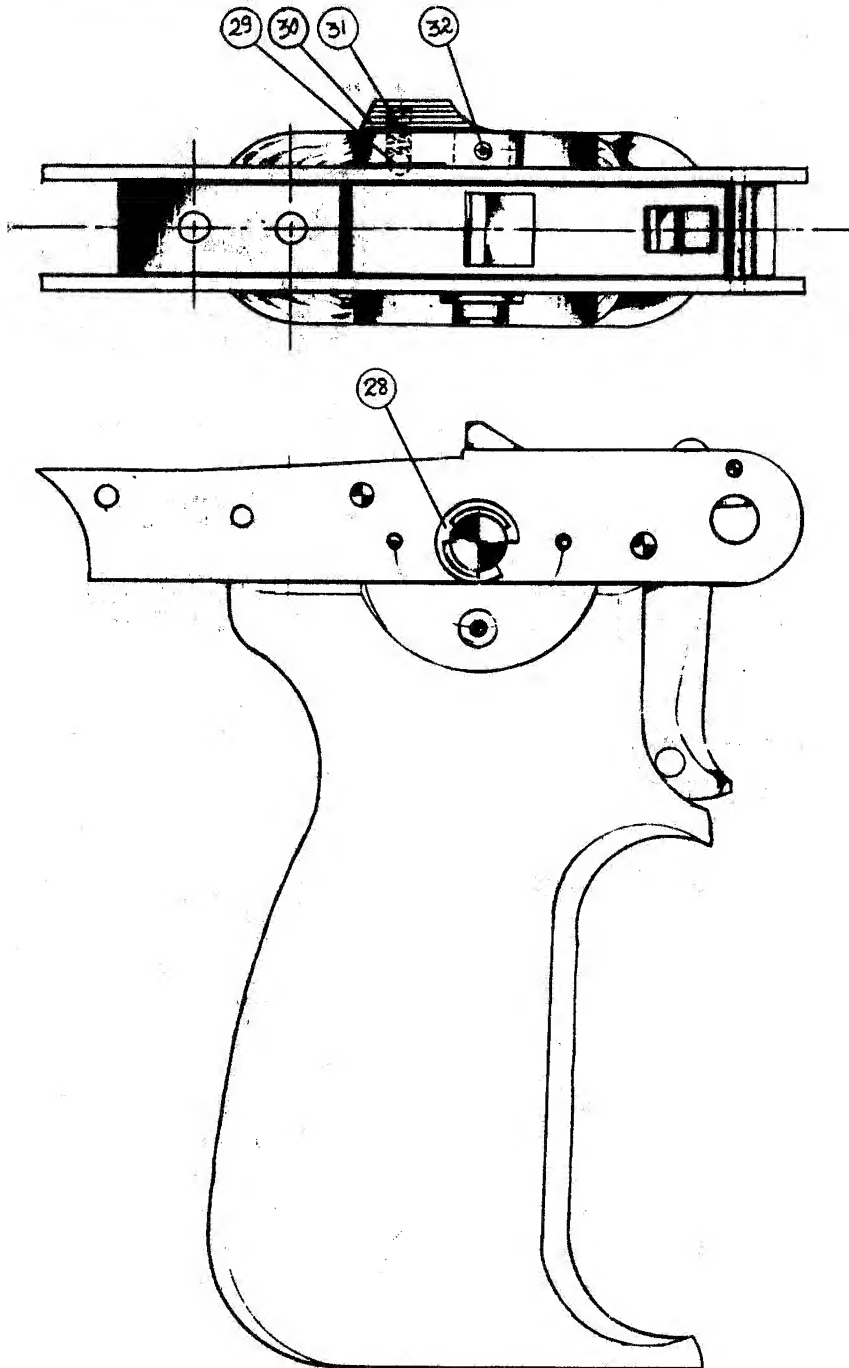


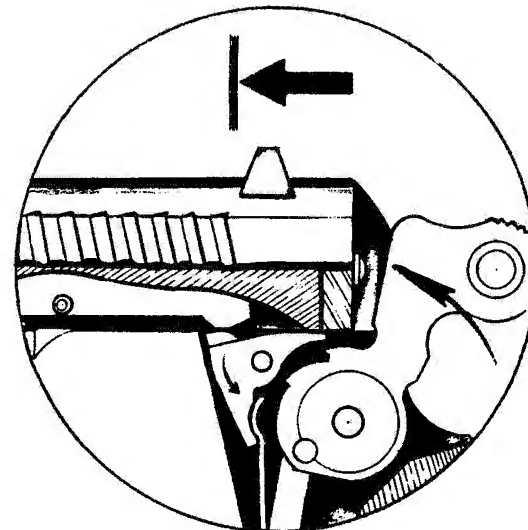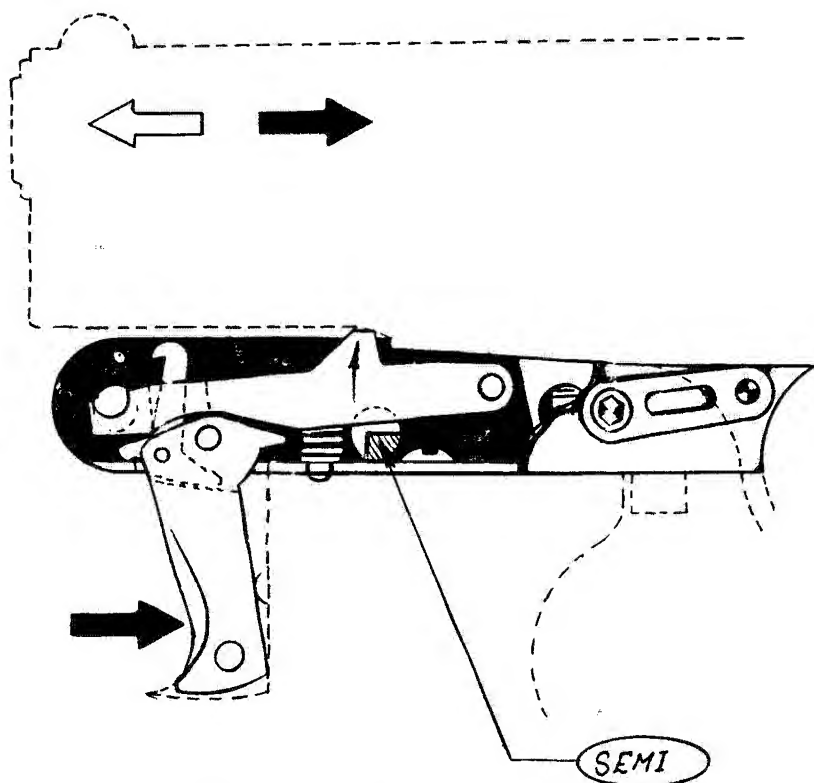

ORIGINAL FACTORY SEAR LEVER ~ SEMI-AUTO. ONLY.

SEAR LEVER HOOK TO PRESS SEAR TRIPPING SHOULDER TO RELEASE HAMMER

CLEARANCE FOR SEAR TRIPPING SHOULDER

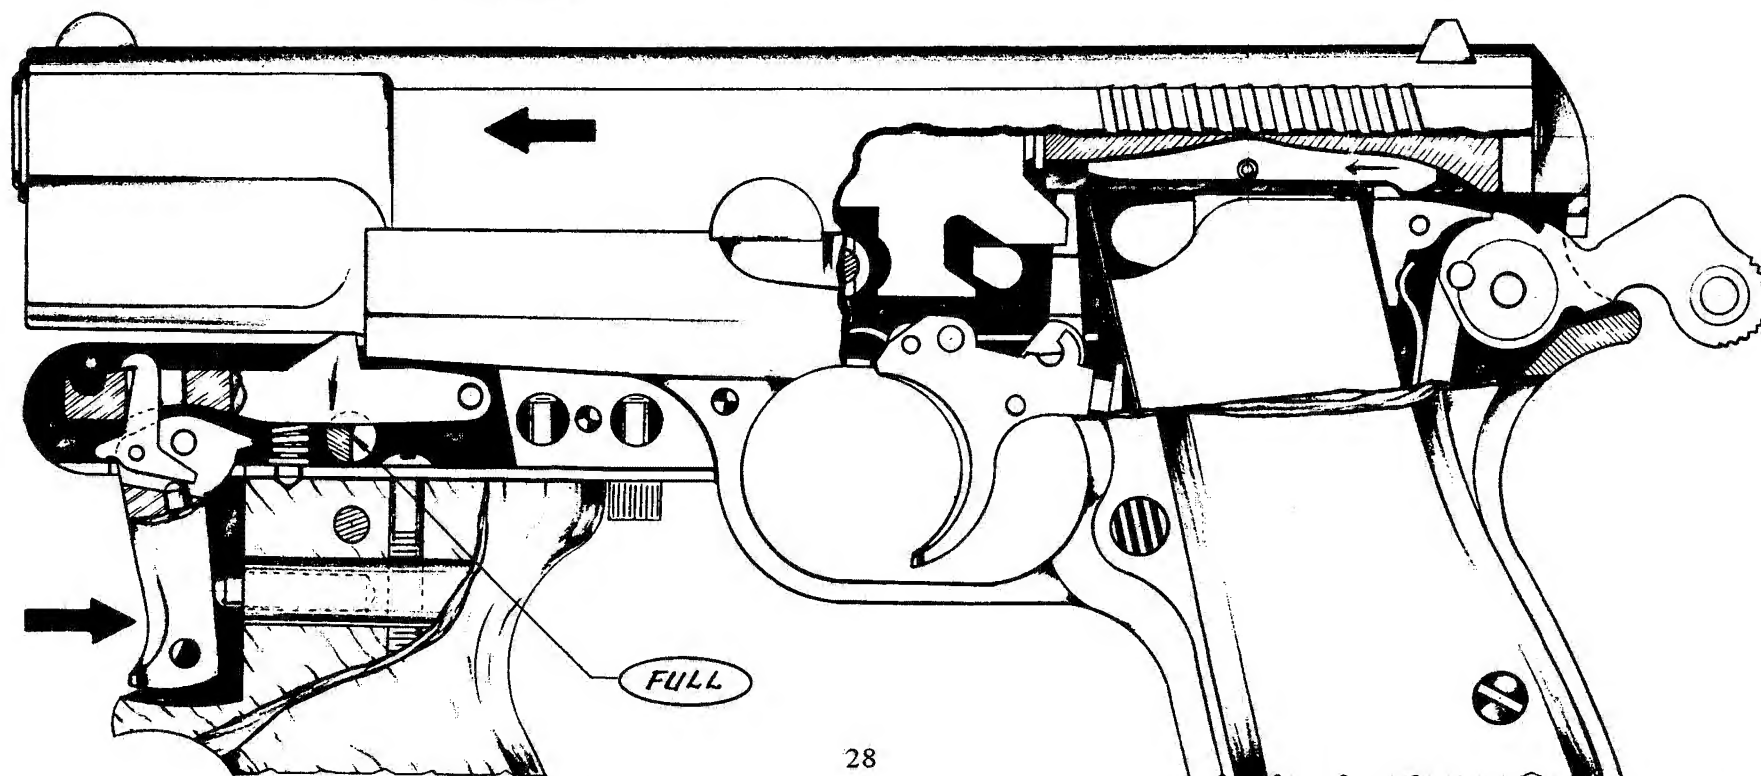

.45 BULPUP SILENCED PISTOL

SPECIFICATIONS:

CATEGORY IMPROVISED-HANDMADE
CALIBER 45 ACP, .32, OR .25 ACP
TYPE OF FIRE SINGLE ACTION
OPERATION BLOWBACK ACTION

REMARKS: *THIS PISTOL DESIGN CONCEPT FULFILLS DUAL REQUIREMENTS THAT THE FAMOUS SLEEVE GUN DOES NOT INCORPORATE. THE WEAPON CAN BE FIRED WHILE CONCEALED UNDER THE OPERATOR'S COAT AND IS ALMOST UNDETECTABLE IN POOR LIGHT. SINCE A FIXED SIGHT IS INCORPORATED, IT ALSO OFFERS THE ADVANTAGE OF BEING ABLE TO BE ACCURATELY AIMED LIKE THE STANDARD WELROD PISTOLS. THE WEAPON SHOWN IS THE .45 CALIBER ACP VERSION ALTHOUGH A MUCH SMALLER VERSION FOR .32 CALIBER AND 25 ACP CHAMBERING IS MUCH MORE CONCEALABLE. THE .45 ROUND, HOWEVER, GIVES BETTER STOPPING POWER THAN THE FIRST TWO CALIBERS MENTIONED.*

CONSTRUCTION DETAIL:

The weapon can be constructed using primarily seamless tubing for its silencer casing. Its silencer system is simple, yet effective. The .45 Bulpup silenced pistol incorporates a single action hammer powered by a coil spring which can be manually cocked and lowered as in conventional single action revolvers or pistols. This feature offers more safety than a striker-operated system, since the striker cannot be lowered unless it is fired without a round in the chamber.

The pistol grip is simply formed from a 5/16-inch-diameter rod of milled steel, or 1/2-inch-thick plate, although 1/4-inch may be used. If the rod material is used, the trigger bar must be mounted offset. A small tube is brazed or soldered below the

silencer casing to house the trigger bar. The skeletonized grip frame is also brazed or spot-welded to the silencer tubing.

The trigger housing is constructed from 1/16-inch-thick sheet metal using 3/8-inch-thick plate as a spacer on the rear part. This spacer is riveted or permanently brazed between the two sheet metal forms serving as the trigger housing frame.


The breechblock is a solid metal rod the same diameter as the inside diameter of the silencer tubing. The breechblock has a front face counterbore to accommodate the rim of the cartridge used. The metal block is spot-welded or permanently brazed to the front of the trigger housing frame. A spring-loaded extractor and ejector is assembled to the breechblock while the free-floating firing pin is secured in place by the breechblock connecting pin. The barrel can be either pinned or permanently brazed to the silencer tubing.


The barrel is ported and an expansion chamber surrounds it. The front portion of the barrel has a bleed hole on it to vent gasses to the front baffle channels while the pressure peak is still in the barrel. In the front of the barrel is the baffle channel where sets of metal spacers and a rubber disk are assembled. An extended false muzzle, which acts as an end cap, is screwed to the front end of the silencer casing.

To load the weapon, turn the trigger housing 35 degrees upward until the breechblock connecting pin clears the slot. Then pull it out from the silencer tubing. Load the barrel chamber then snap back the breechblock inside the silencer tubing until the connecting pin is parallel to its seat. Turn the trigger housing down 34 degrees so the connecting pin will seat on its locking slot to the silencer casing.

To fire the weapon, simply cock the hammer until it snaps with the sear. The sear and hammer are powered by a single spring. The hammer can be cocked and uncocked under the sleeve or inside a coat. The weapon is ideal for special operations and can be fired either concealed or as an accurate, short-range, silenced pistol.

BULPUP SILENCED PISTOL CAL. 45 A.C.P.

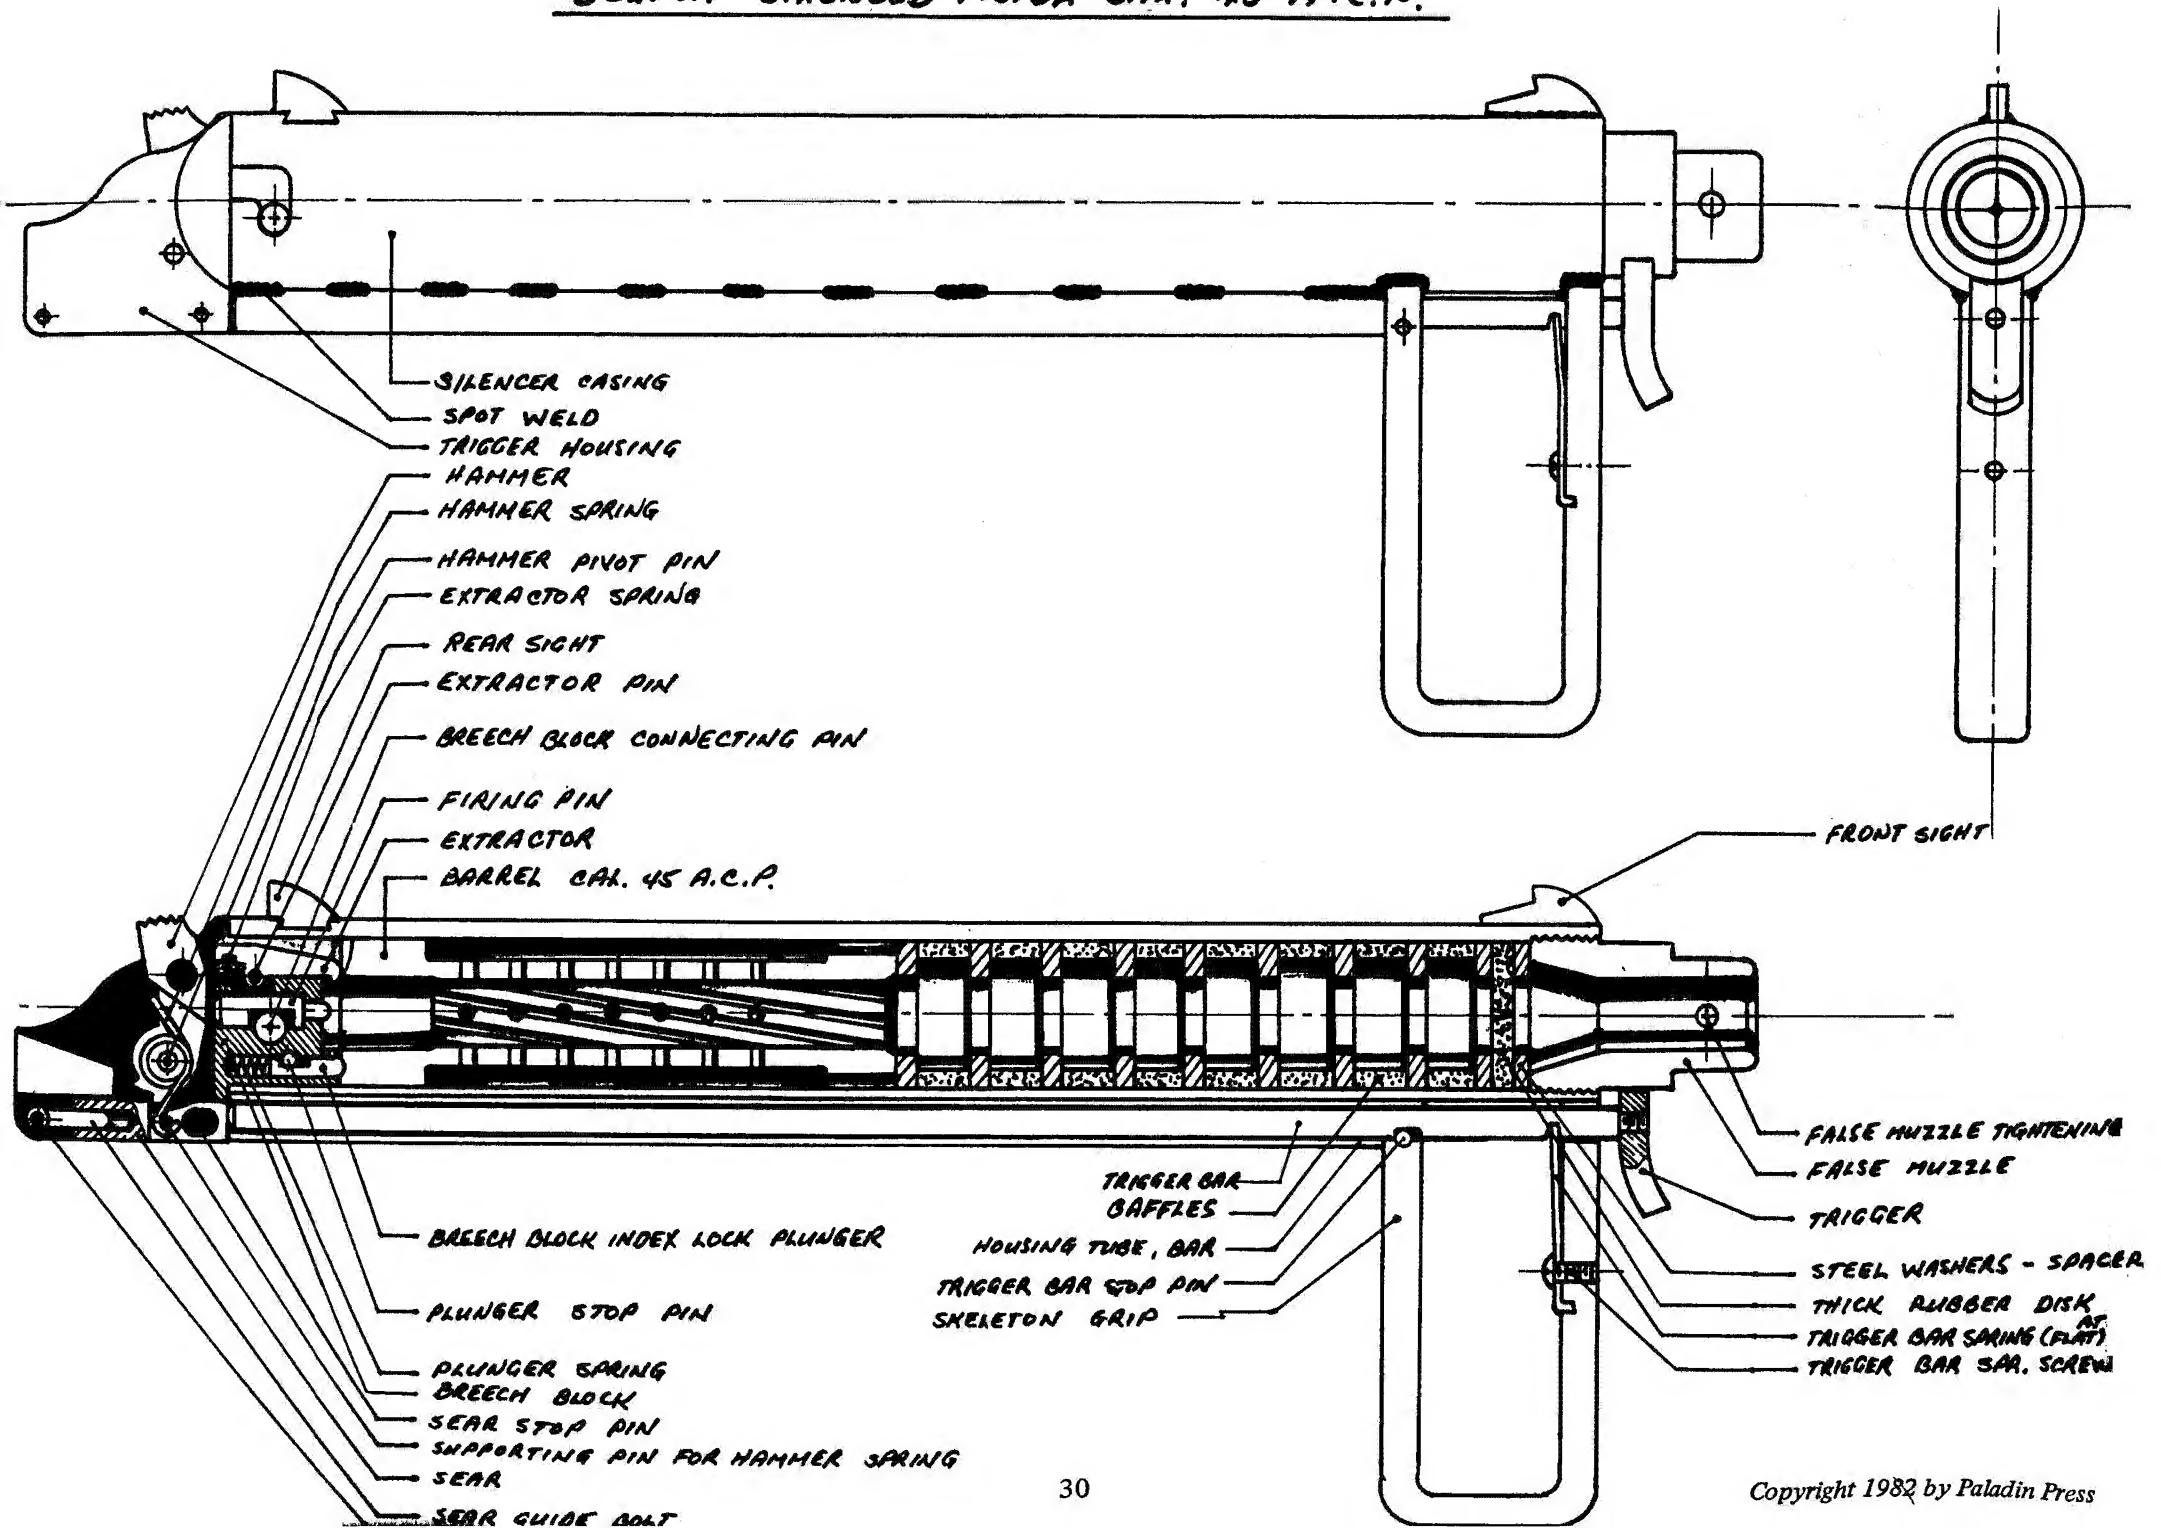


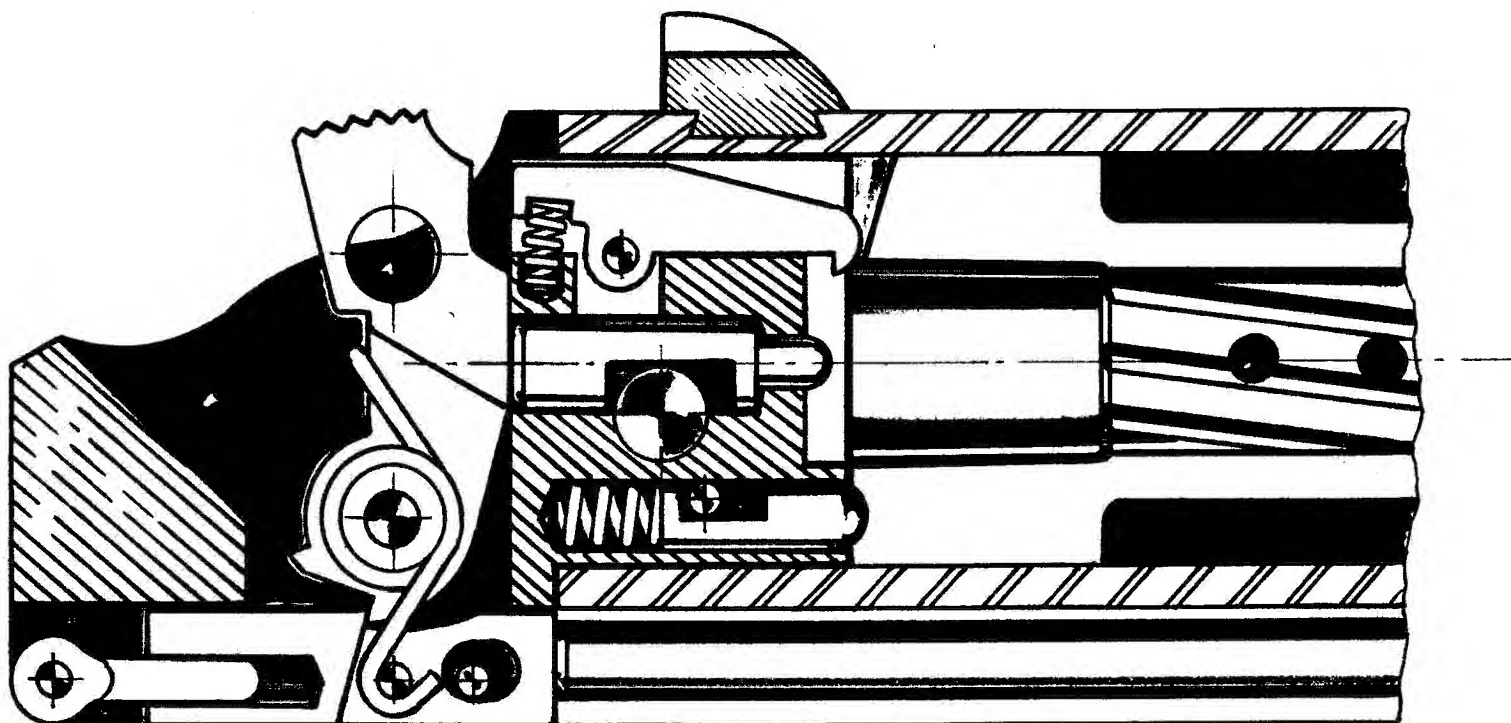

Detail: TRIGGER MECHANISM

HAMMER BEING
COCKED HALFWAY


HAMMER ON ITS
FULL COCKED POSITION

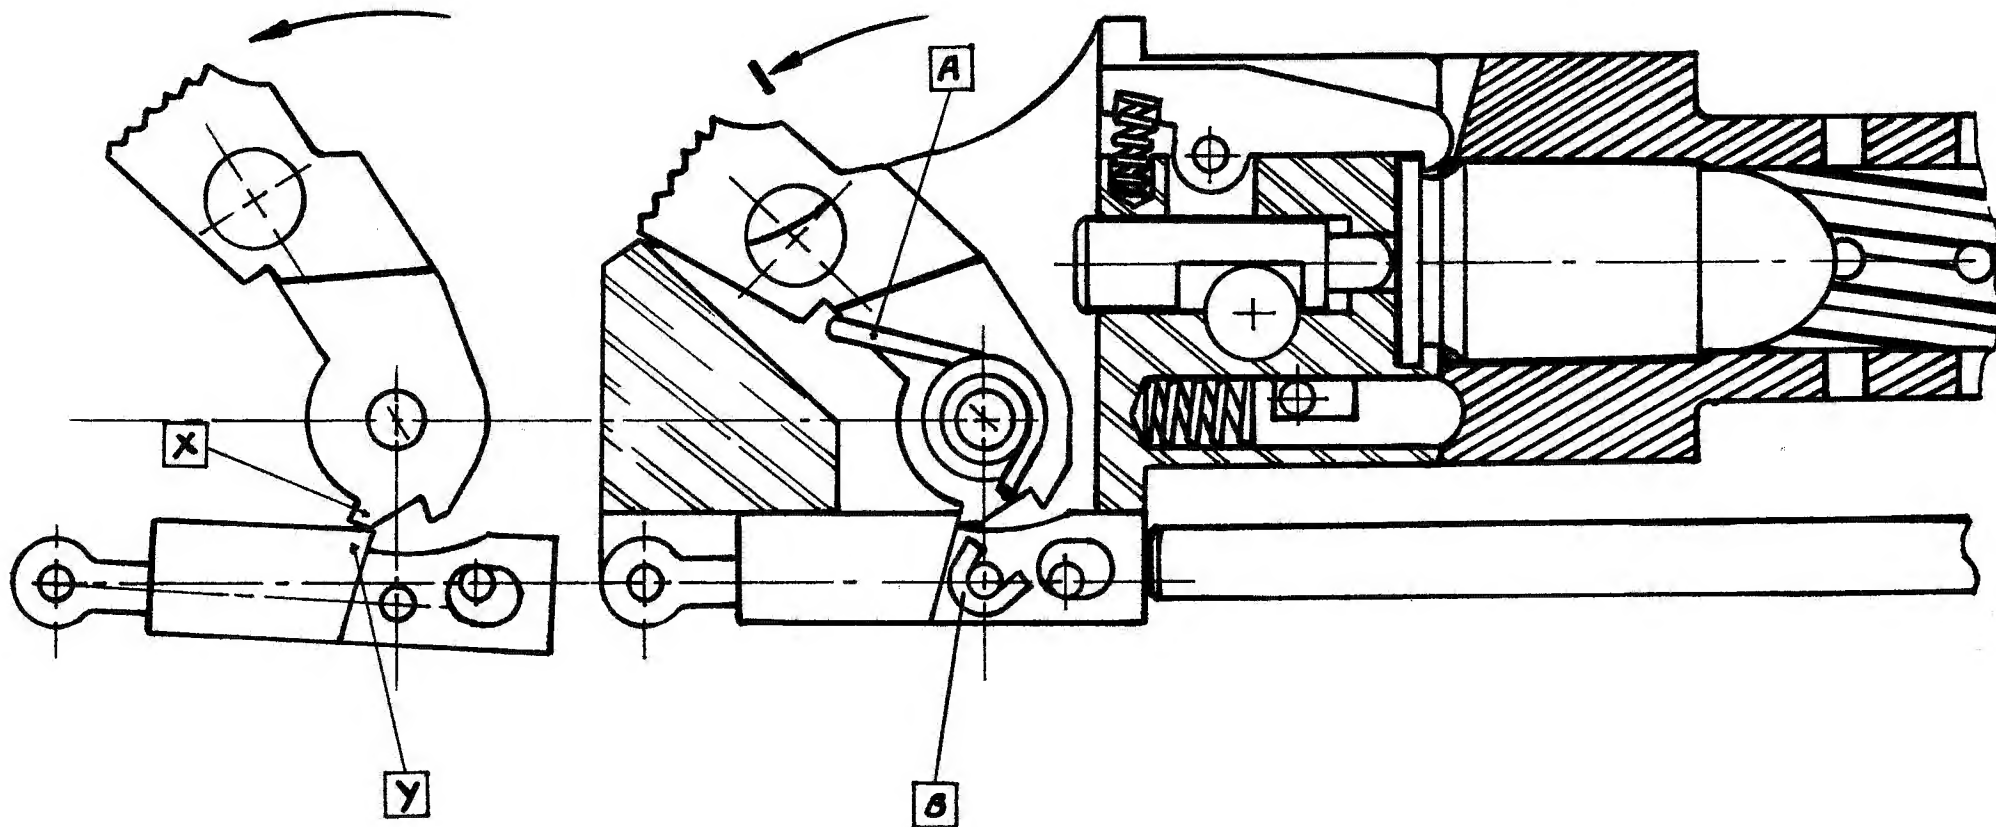


NOTES:

1. PART **X** OF HAMMER PUSHES PART **Y** OF SEAR WHILE HAMMER IS BEING COCKED TO ENGAGE WITH SEAR.
2. PART **A** OF HAMMER SPRING TENSION IS OPPOSED TO PART **B** TENSION OPERATING SEAR.


HAMMER

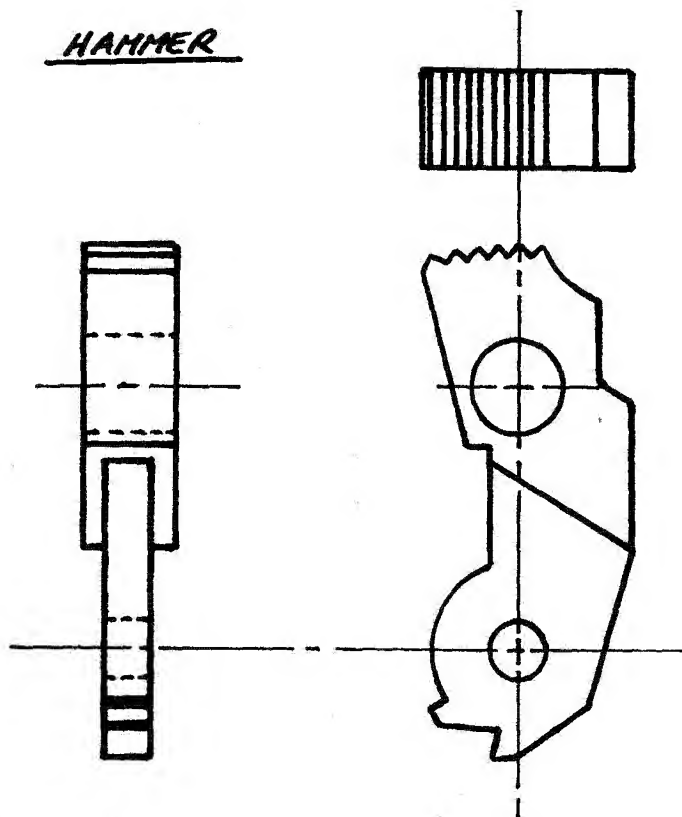


HAMMER SPRING

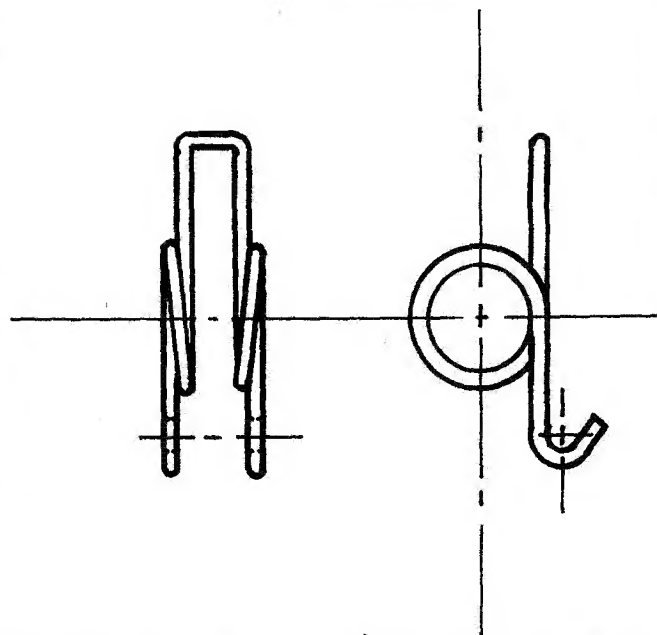


FIRING PIN

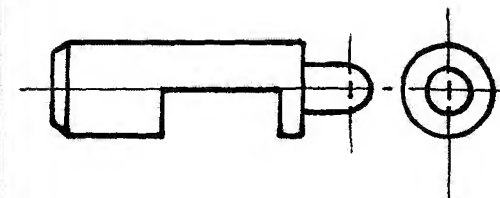

SEAR GUIDE ROD

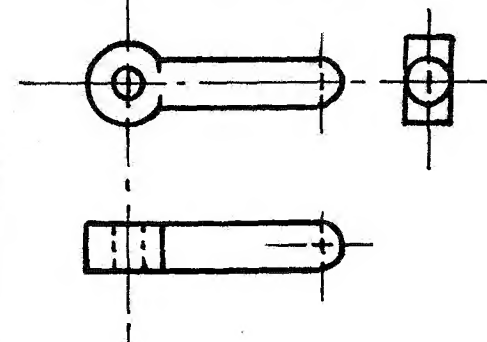


SEAR

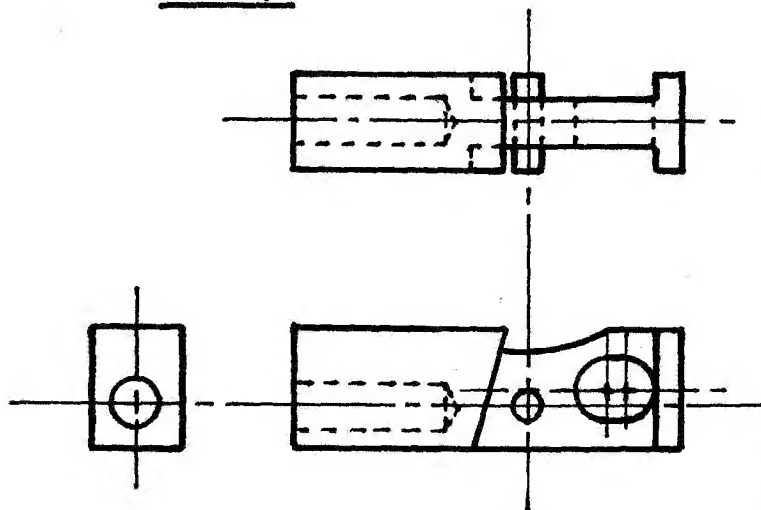


EXTRACTOR SPRING



EXTRACTOR

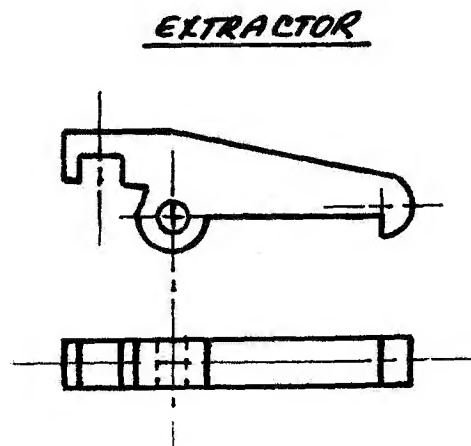


LOCKING BOLT INDEXER

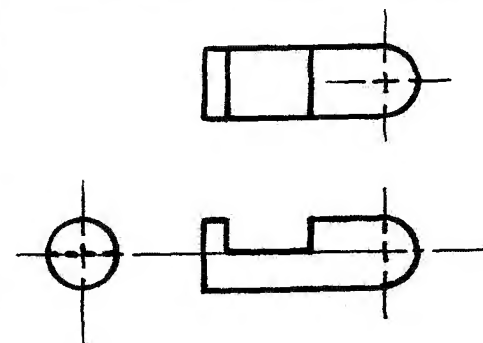


Scales: 2X

EXTRACTION DETAIL

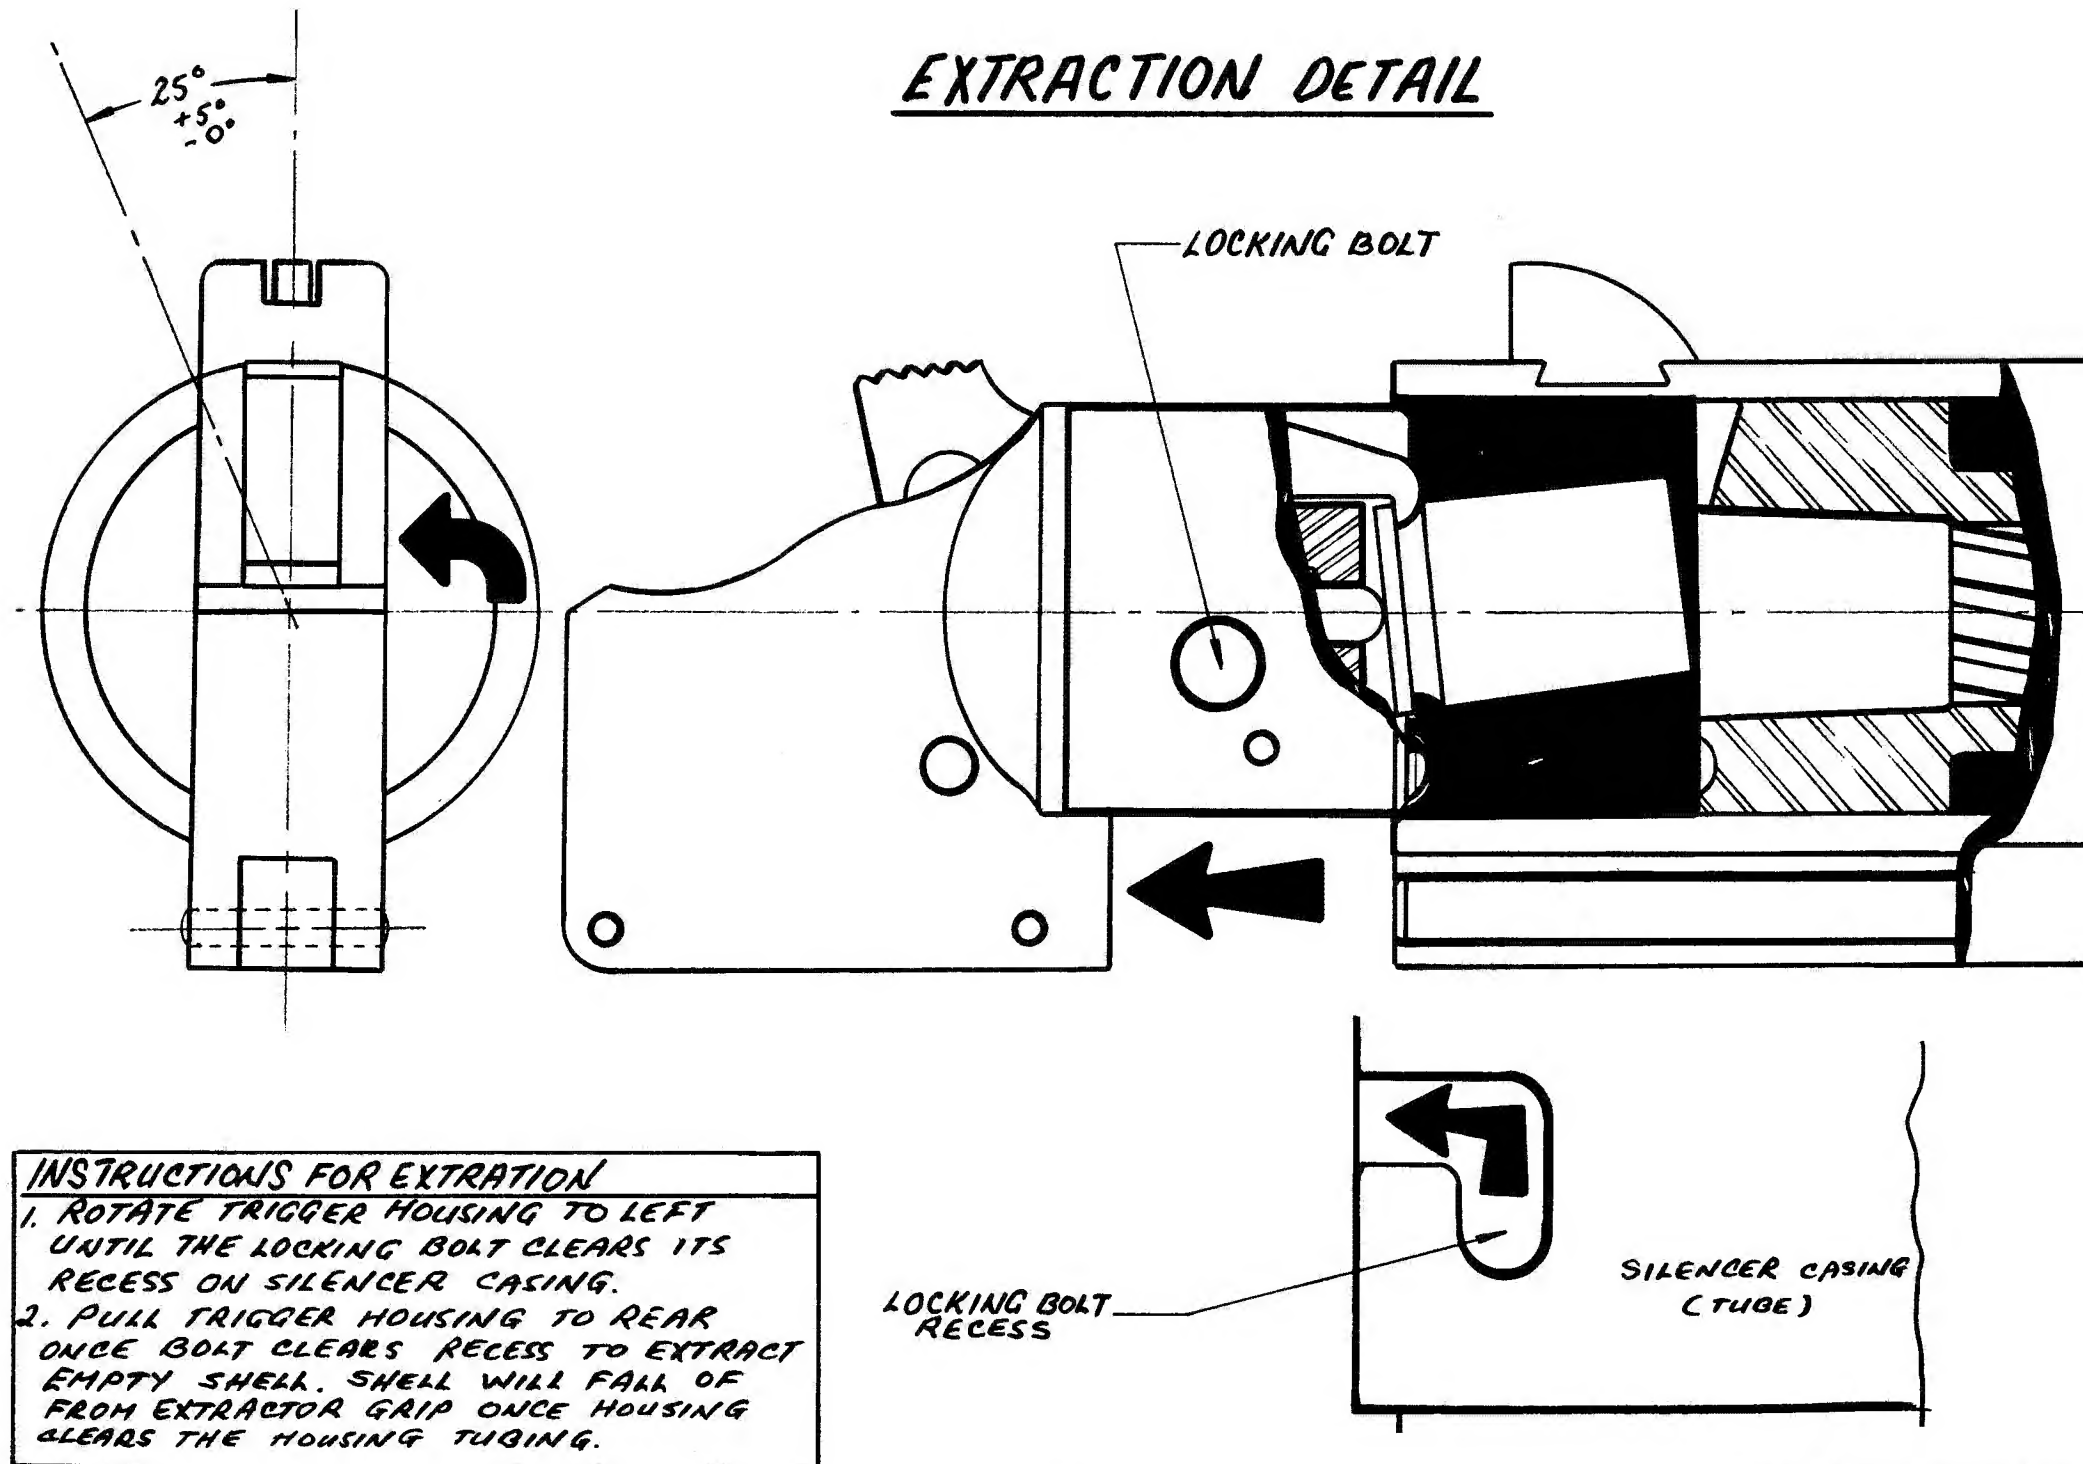


Detail : BREECH BLOCK-TRIGGER HOUSING

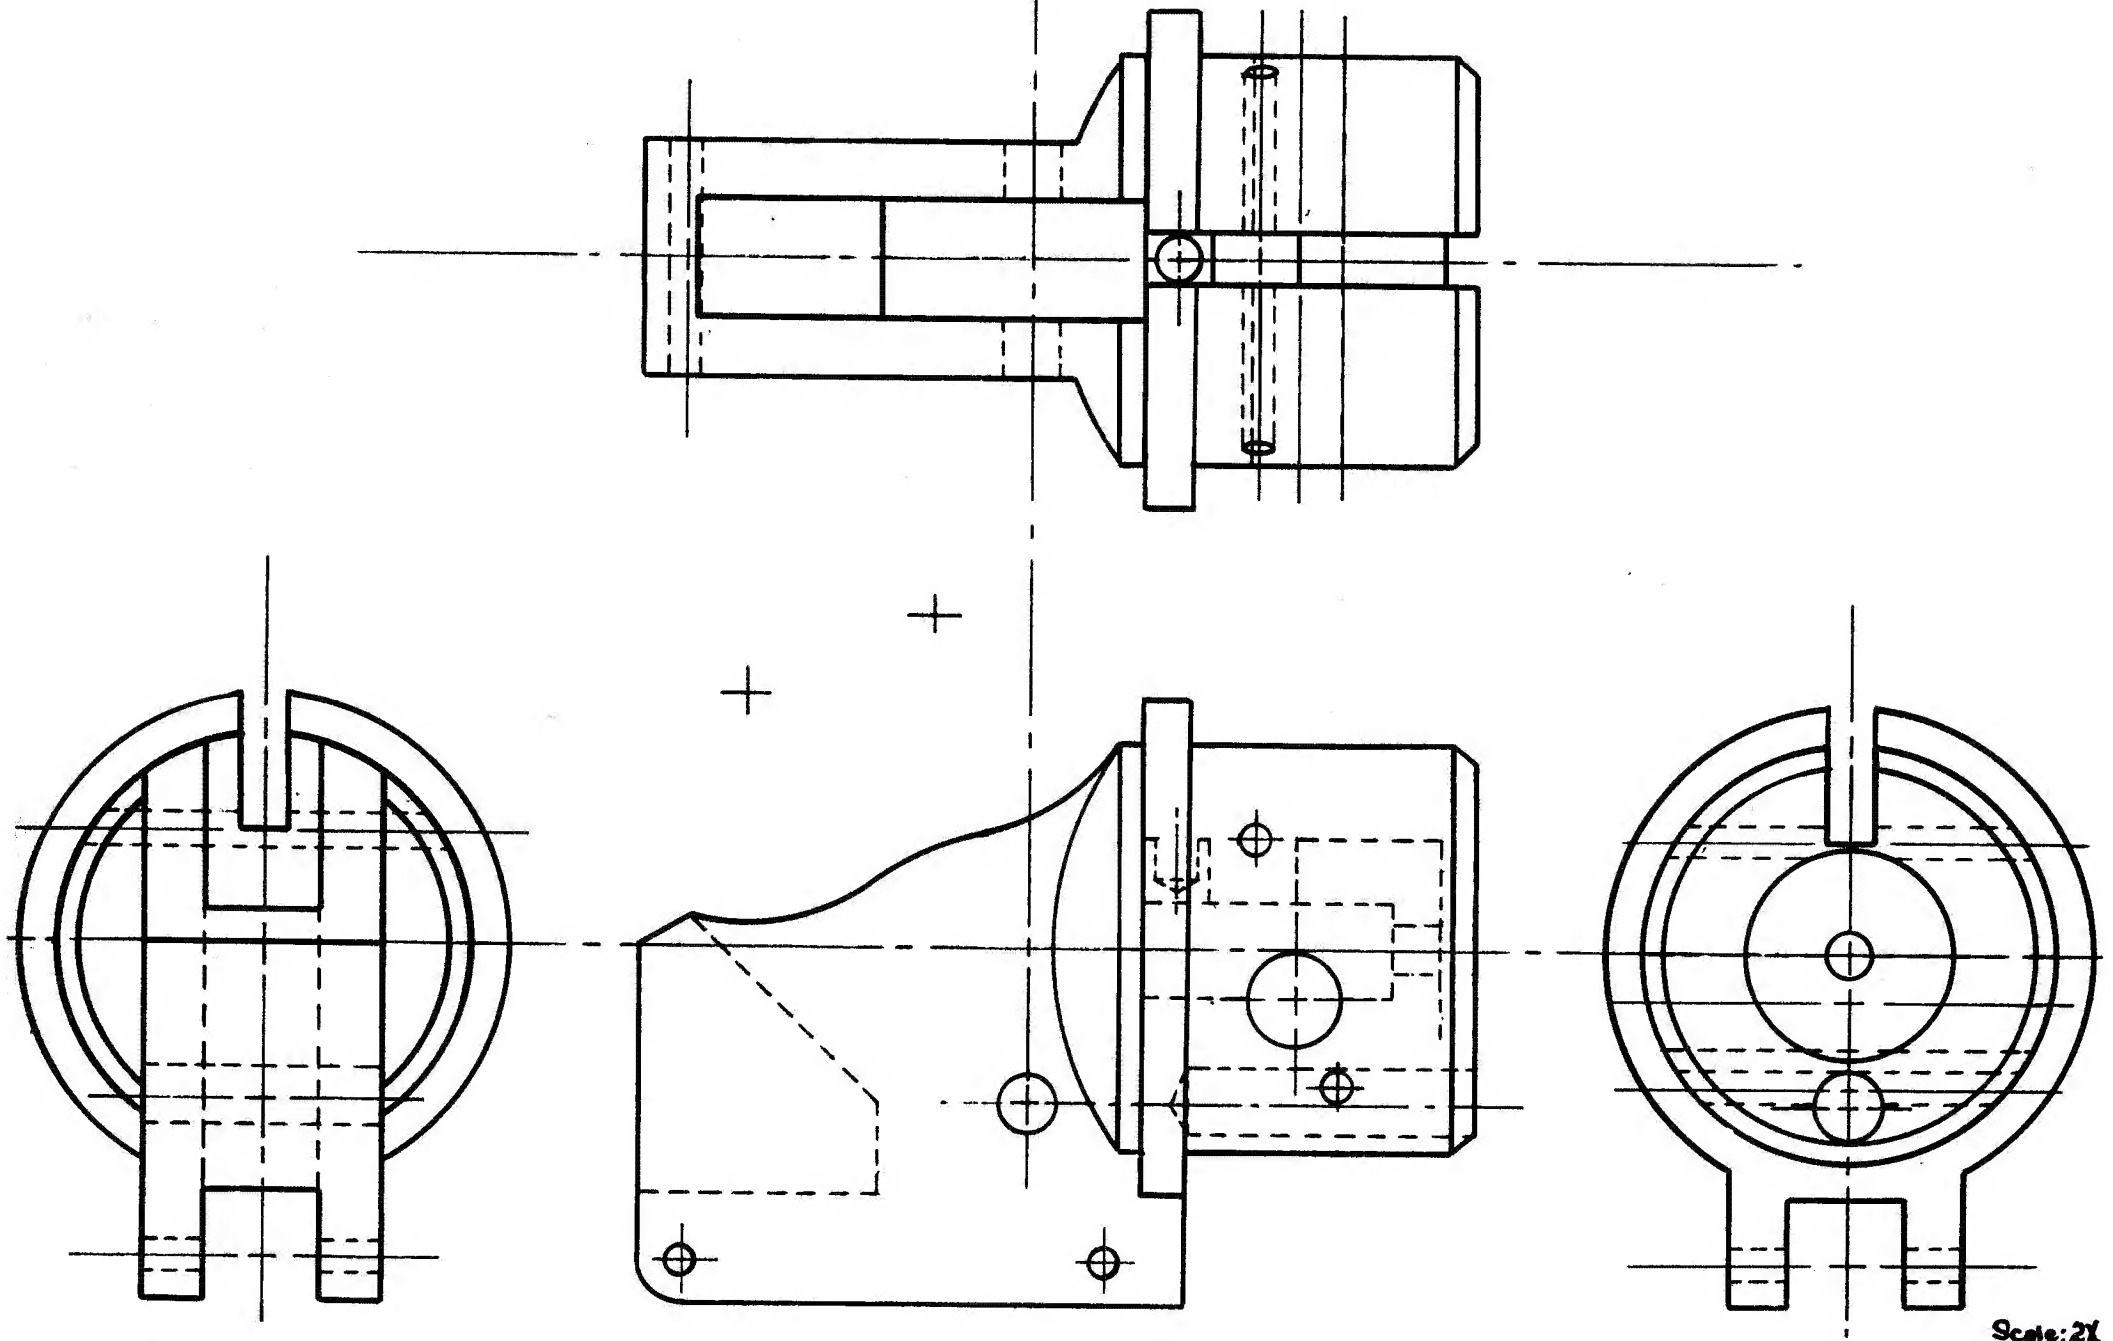



Scale: 2X

Detail : BARREL .45 ACP

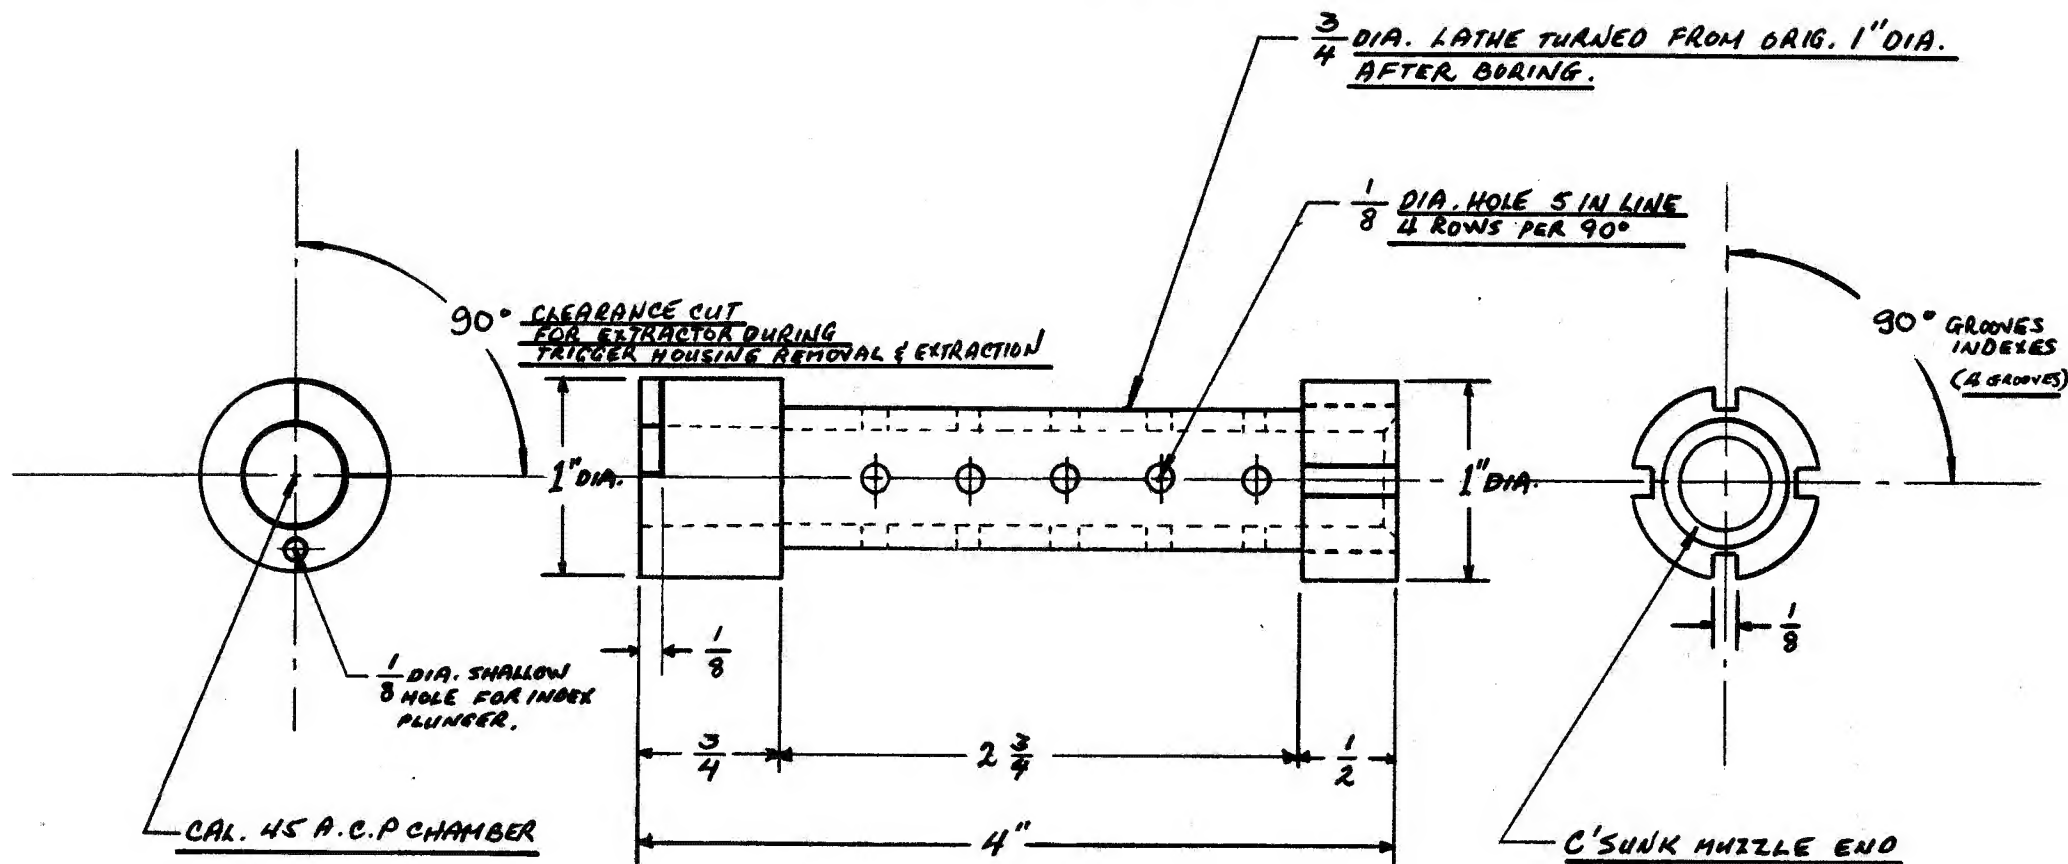


NOTES:

1. BARREL IS TO BE ASSEMBLED TO SILENCER TUBE BY PRESSED FITTING METHOD. THE REAR CHAMBER AREA MATED WITH TUBING IS TO BE BRAZED AROUND BARREL DIA. TO PREVENT GAS ESCAPE.
2. THE SILENCING & TRIGGER SYSTEM ARRANGEMENT IS ADAPTABLE TO CALS. 45 ACP, 380 ACP, 32 ACP & .25 A.C.P. PISTOL AMMUNITIONS.

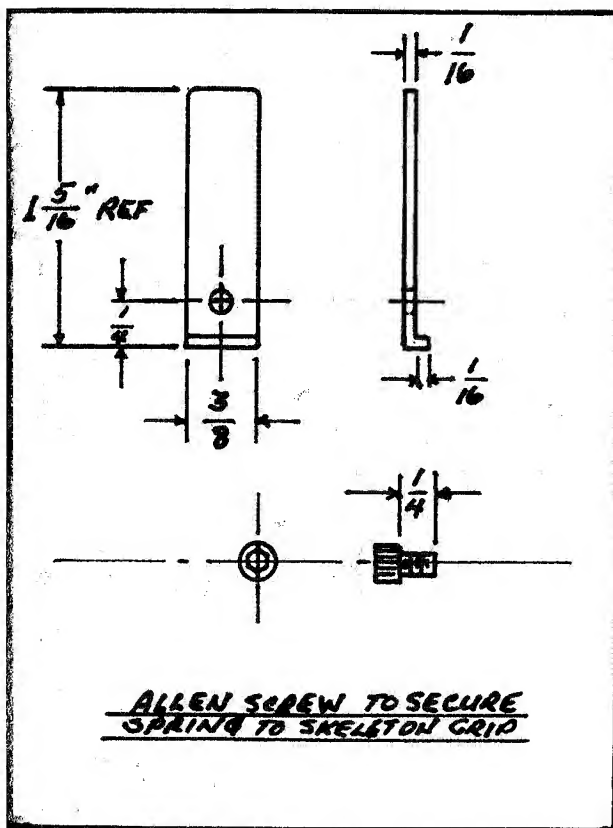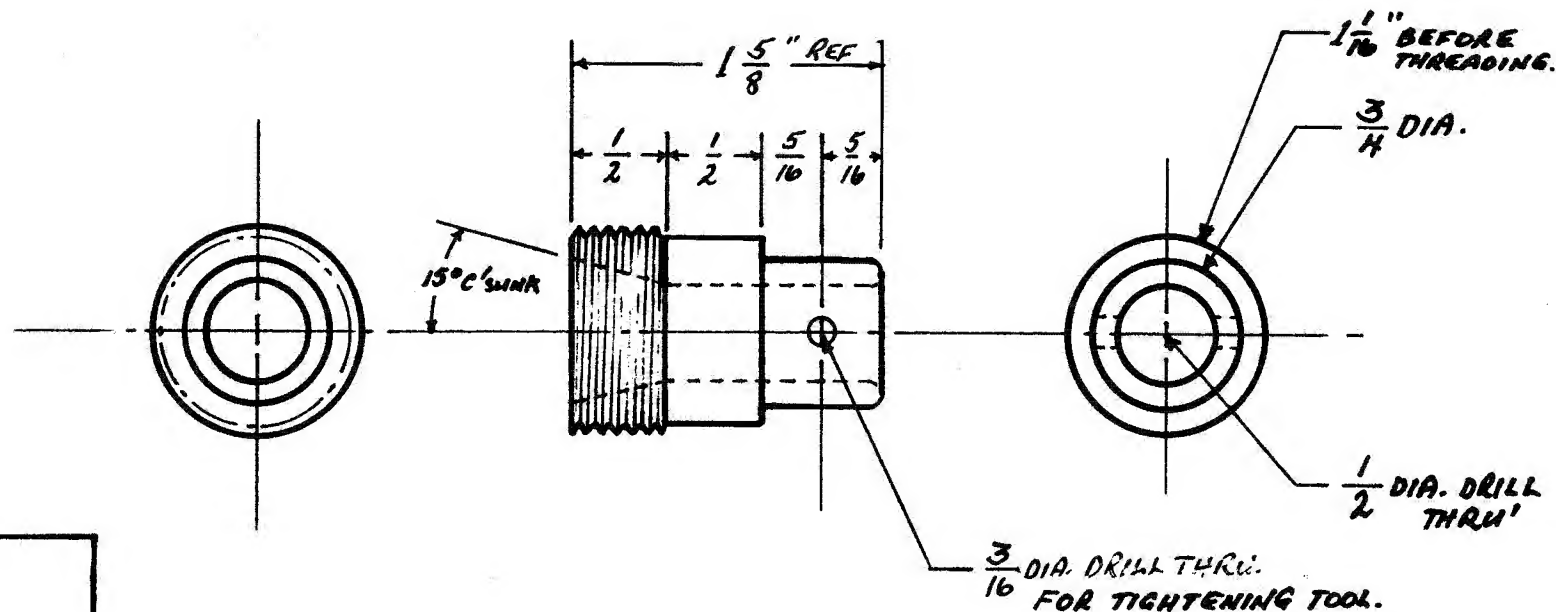

PART NAME	Scale:
FALSE MUZZLE & TRIGGER ROD SPRING & SCREW	FULL

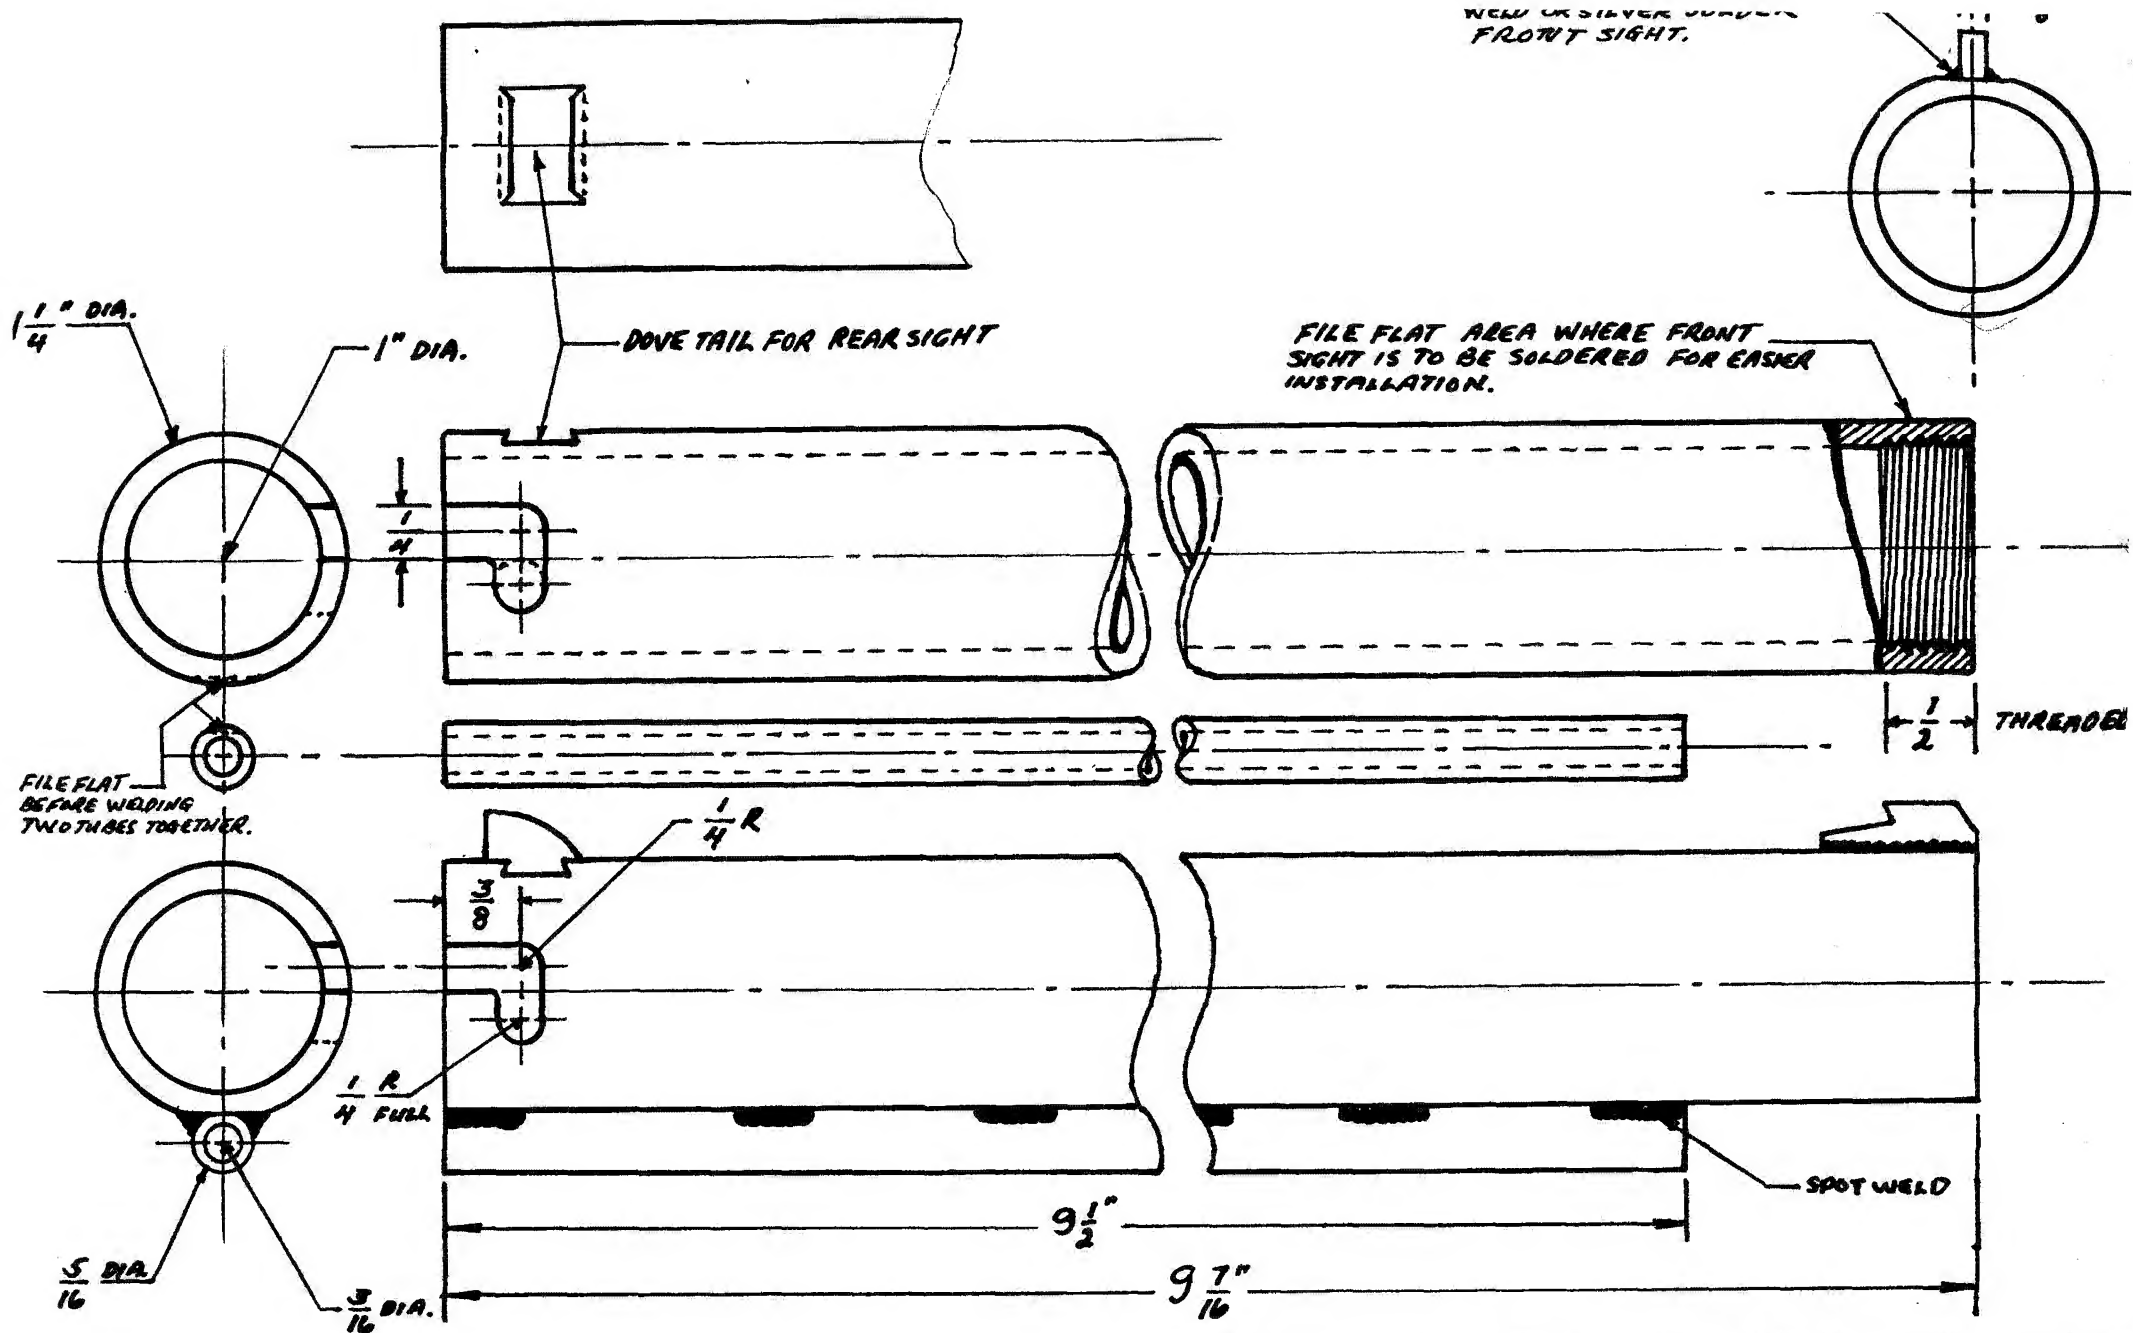

PART NAME	Scale:
SILENCER CASING & TRIGGER BAR HOUSING TUBE	FULL

FUTURE ASSAULT SHOTGUN

SPECIFICATIONS: K1

CATEGORY IMPROVISED-HANDMADE
CALIBER 12 GAUGE, 2½-INCH SHELL MAX.
TYPE OF FIRE SELECTIVE, SEMIFULL AUTO.
BARREL LENGTH 15-INCH WITHOUT
MUZZLE BRAKE
OVERALL LENGTH 27-INCH WITHOUT
MUZZLE BRAKE
OPERATION DIRECT GAS
FEED 5, 10, 15-SHOT MAGAZINE

SPECIFICATIONS: K2

CATEGORY IMPROVISED-HANDMADE
CALIBER 12 GAUGE, 2½-INCH SHELL MAX.
TYPE OF FIRE FULL AUTO
BARREL LENGTH 8¾-INCH (9-INCH MAX.)
OVERALL LENGTH 20-INCH
OPERATION DIRECT GAS
FEED 5, 10, 15-SHOT MAGAZINE

REMARKS: *THE CONCEPT OF THIS SYSTEM IS TO CREATE A FAST-FIRING COMPACT WEAPON THE SIZE OF A STANDARD SUBMACHINE GUN THAT USES CONVENTIONAL CARTRIDGES AND DELIVERS A VOLUME OF FIRE MANY TIMES GREATER THAN ANY FAST-FIRING SUBMACHINE GUN NOW IN EXISTENCE.*

THE BASIC ADVANTAGE CAN BE EMPLOYED IN CLOSE-QUARTERS ENCOUNTERS IN TRENCHES, AND SURPRISE ATTACKS WHEN A LARGE VOLUME OF INSTANT FIREPOWER IS REQUIRED. A CONVENTIONAL FAST-FIRING SUBMACHINE GUN OR A MACHINE PISTOL HAS A THEORETICAL FIRING RATE FROM 600 TO 1,200 ROUNDS PER MINUTE AS ON THE MAC M11. THE F.A.S. K1 OR K2 ASSAULT SHOTGUNS CAN

DELIVER UP TO TWENTY TIMES MORE FIREPOWER WHEN LOADED WITH 00 BUCKSHOT.

SYSTEM OF OPERATION:

A modified Browning B.A.R. magazine can be used to take five 12-gauge, 2½-inch shells. The magazine is about three inches in loading length. The remaining one-half-inch in front of the magazine follower will act as the feed ramp. A long semicurved 10-15 shot, single row magazine can be manufactured if you can make a magazine-forming die.

The weapon fires from the open bolt position as do most conventional submachine guns. It does, however, use a simple locking system of direct gas to operate the locking plate. During the moment of discharge, the gasses from the shell are bled off to the gas port on top of the chamber area just past the front of the shell immediately after being released. The escaping gasses then push the locking plate upward onto the top slot of the barrel boss in line with the hump of the locking plate. This engagement of the locking plate to the top-slotted shoulder of the barrel boss by gas pressure prevents the bolt from rapid opening while pressure is at its peak.

The locking plate moves down under spring tension once pressure has dropped thus permitting the bolt to recoil, extract, eject, and reengage with the sear if the selector lever is set on semiautomatic (FAS-K1 model). The gun is then ready for the next shot.


The bolt face utilizes a fixed firing pin. The bolt is under heavy recoil spring tension necessary for positive stripping and loading of cartridges to chamber. The weapon fires as soon as the bolt fully closes on a round loaded in the chamber.

To keep at a minimum the weight of this somewhat bulky, but short weapon, sheet metal stamping is ideal for the receiver frame using light alloy inserts in areas of limited stress. The sight-base/carrying handle combination is aluminum casting.


The balance of the weapon is placed on center of gravity. The straight stock configuration of the butt is well-placed to the center of the bore axis and will insure a positive reduction of muzzle climb during full automatic firing. In addition to this feature, a solid-front grip is also incorporated for steady control on full auto or long-burst periods. The FAS-K1 uses a sophisticated muzzle brake for excellent handling that makes this weapon the ultimate fighting shotgun in its class.


PARTS LIST: FAS-K2 ASSAULT SHOTGUN

1. *Rear barrel pins*
2. *Cocking handle*
3. *Tubing insert*
4. *Front sight elevation screw—headless type*
5. *Front sight*
6. *Sight base/carrying handle front screw*
7. *Locking plate spring*
8. *Locking plate pin*
9. *Locking plate*
10. *Gas port*
11. *Tubing insert pin*
12. *Barrel for 12 gauge shotgun*
13. *Barrel pins—press-fitted and riveted to barrel boss and receiver frame*
14. *Carrying handle/sight base frame—aluminum cast or machined*
15. *Locking plate insert tubing*
16. *Tubing pins—to permanently secure tubing to bolt body*
17. *Carrying handle rear screw*
18. *Receiver frame—formed sheet metal*
19. *Magazine catch*
20. *Magazine catch pin*
21. *Magazine catch spring*
22. *Bolt catch—square plate press-fitted horizontally to bolt with sear on cocking*
23. *Recoil spring—heavy type*
24. *Recoil spring guide*
25. *Sear pin*
26. *Sear*
27. *Ejector*
28. *Buttstock pins*
29. *Buttstock plate*
30. *Recoil pad—rubber*
31. *Magazine catch spring base pins—riveted permanently to receiver frame*
32. *Lower receiver cover screw*
33. *Sear spring*
34. *Sear stop pin*
35. *Lower receiver body*
36. *Ejector sort*
37. *Extractor spring*
38. *Extractor pin*
39. *Safety lever pin*
40. *Trigger bar and linkage pins*
41. *Extractor*
42. *Linkage pivot pin*
43. *Linkage rear pin—pushing rear of sear down when lower part of linkage is pulled by trigger bar*
44. *Rear sling swivel retaining pin*
45. *Rear sling swivel pin*
46. *Front barrel support*
47. *Front grip—wood or plastic wrap-around type*
48. *Front grip screws*
49. *Trigger guard*
50. *Trigger*
51. *Trigger pin*
52. *Trigger bar link pin*
53. *Grip stock—two-piece wood or plastic*
54. *Grip frame—welded to receiver and lower support*
55. *Grip stock screws*
56. *Trigger bar link*
57. *Trigger bar link pin*
58. *Firing pin—fixed type*
59. *Firing pin retaining pin—roll pin preferred*
60. *Modified Browning B.A.R. magazine—four or five round capacity*

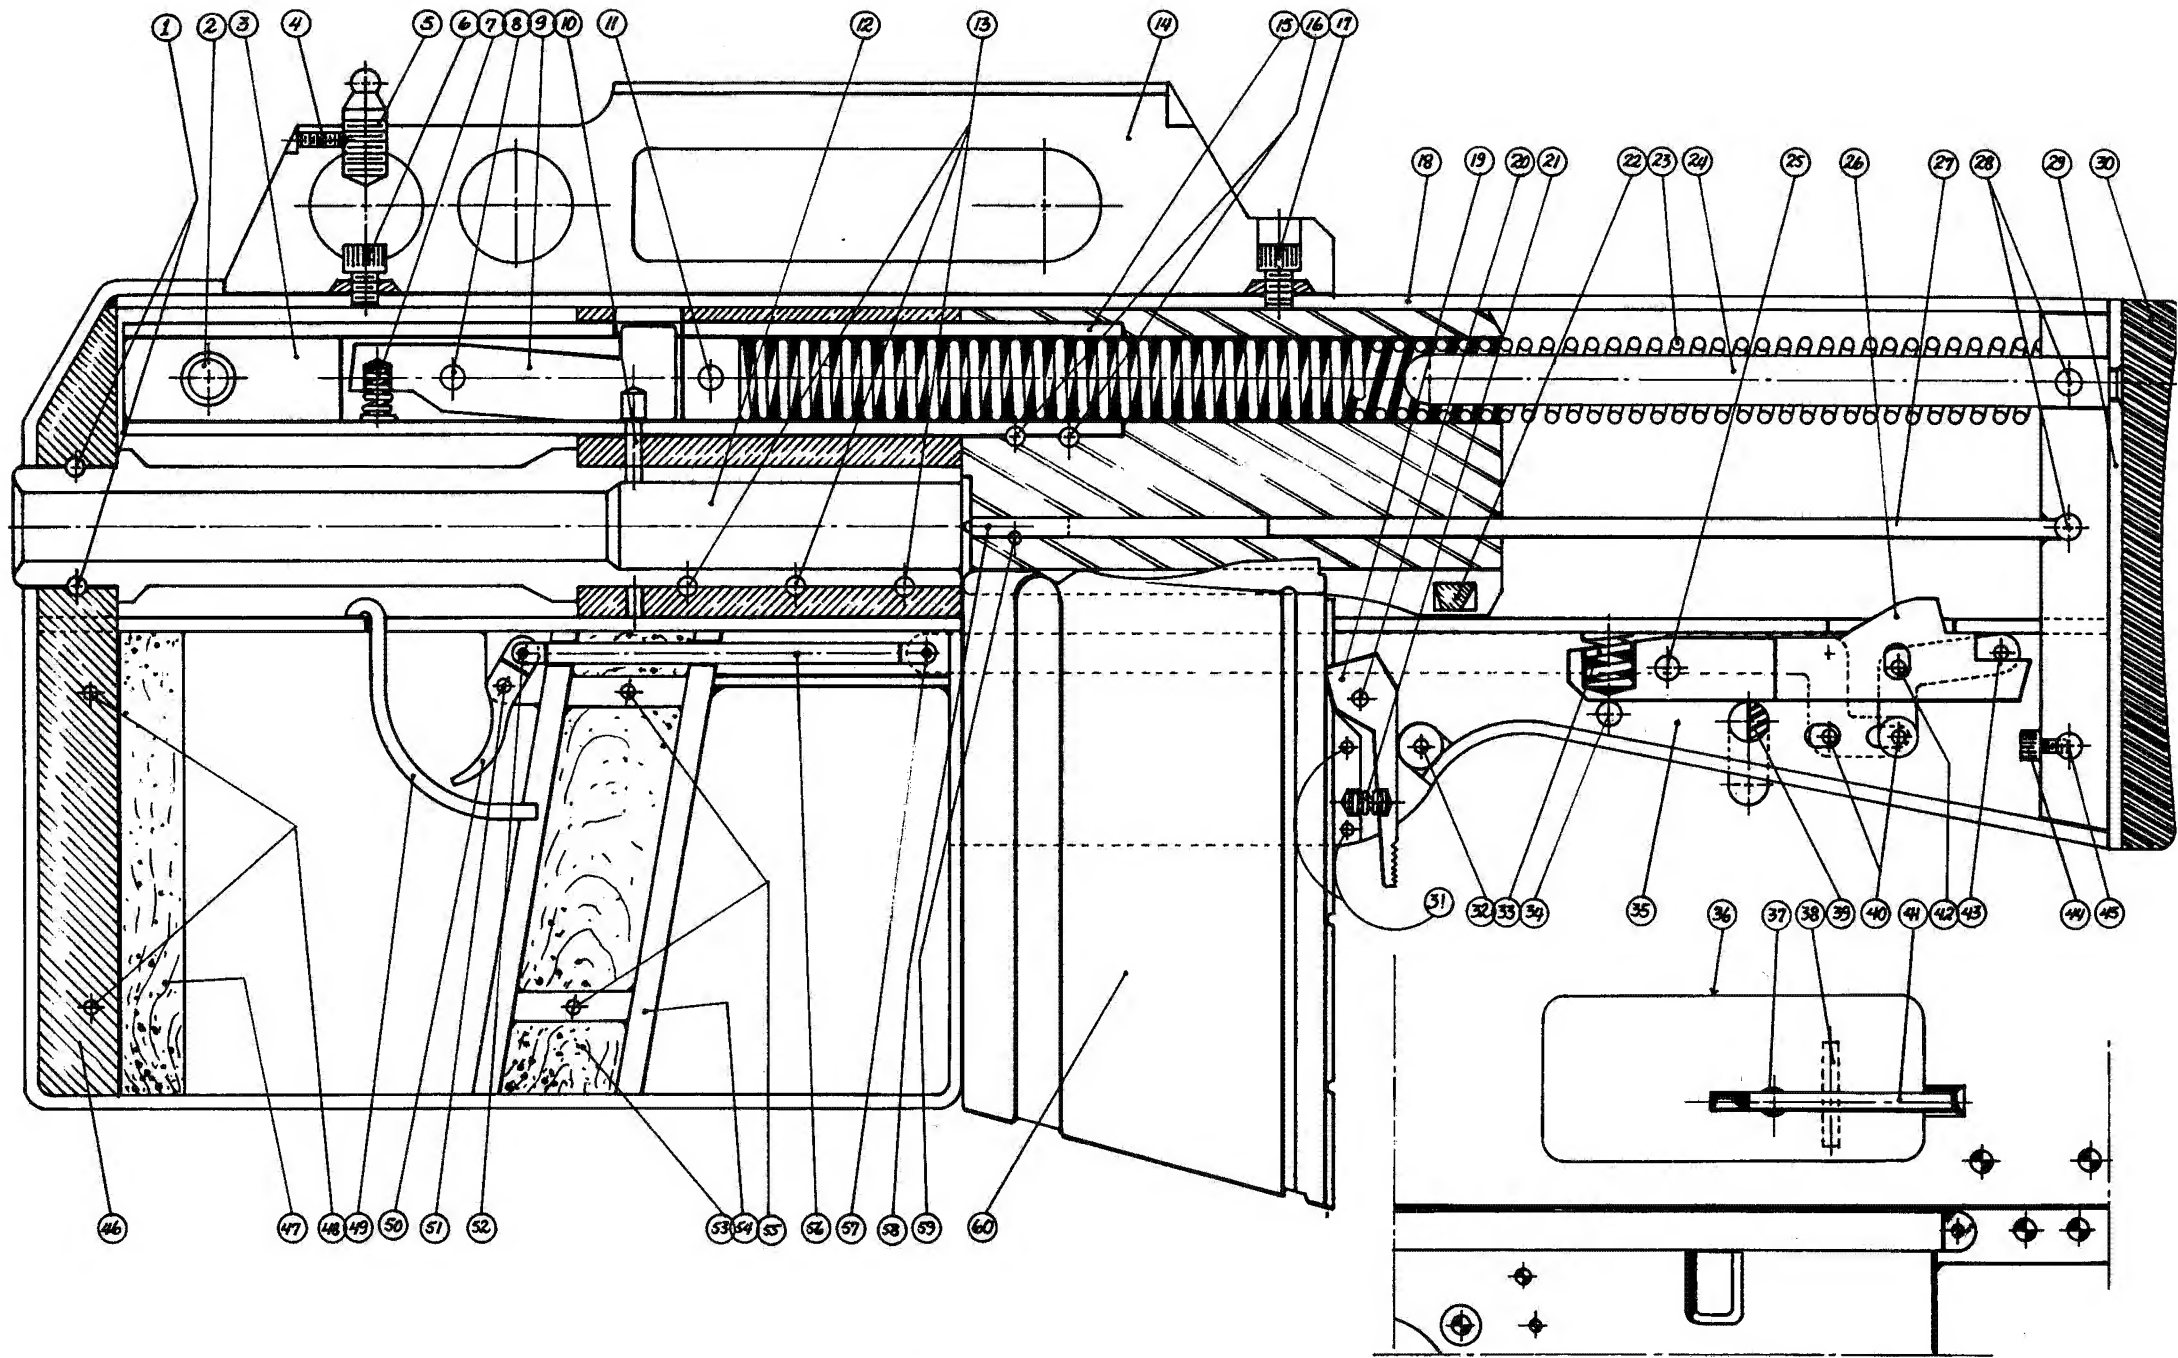


WEAPON COCKED - "READY TO FIRE"

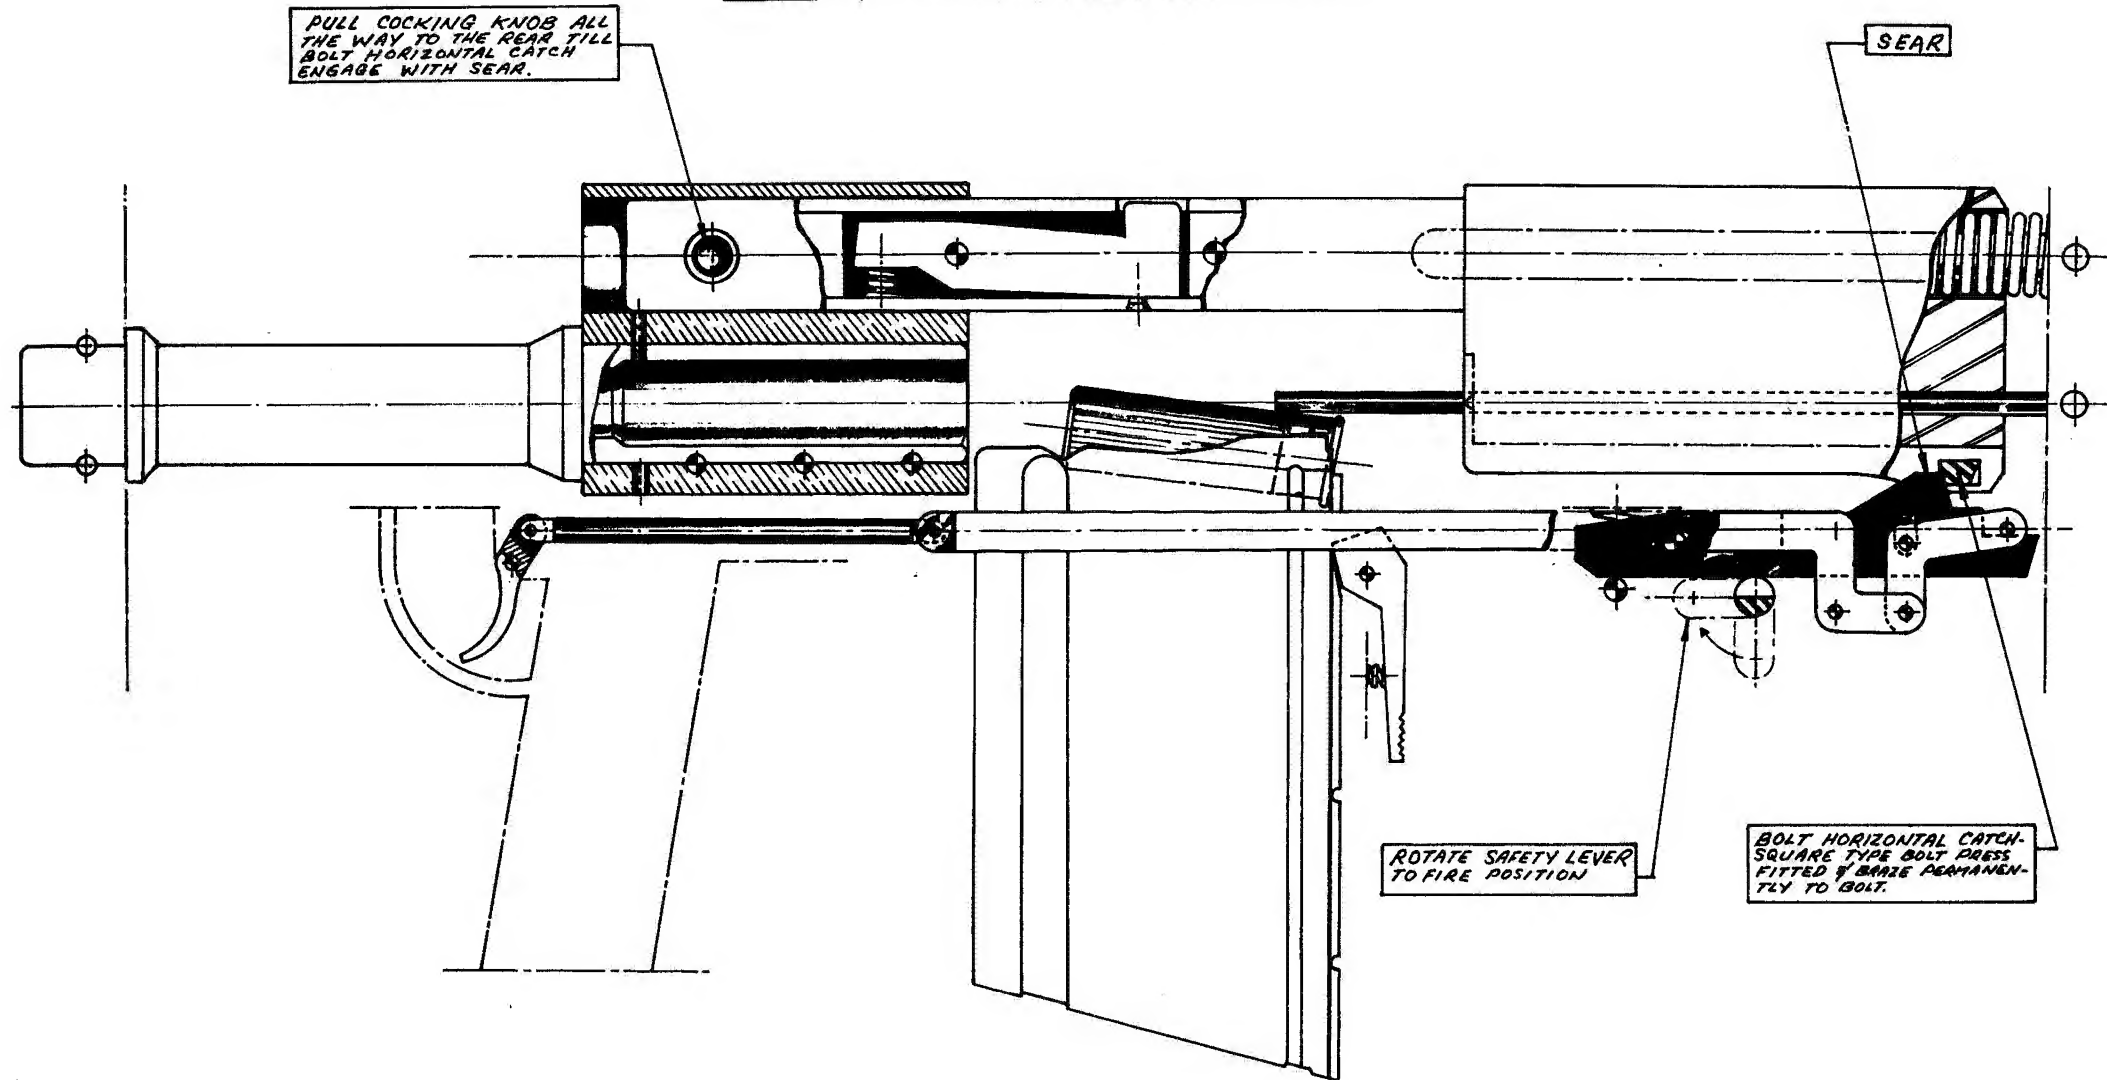

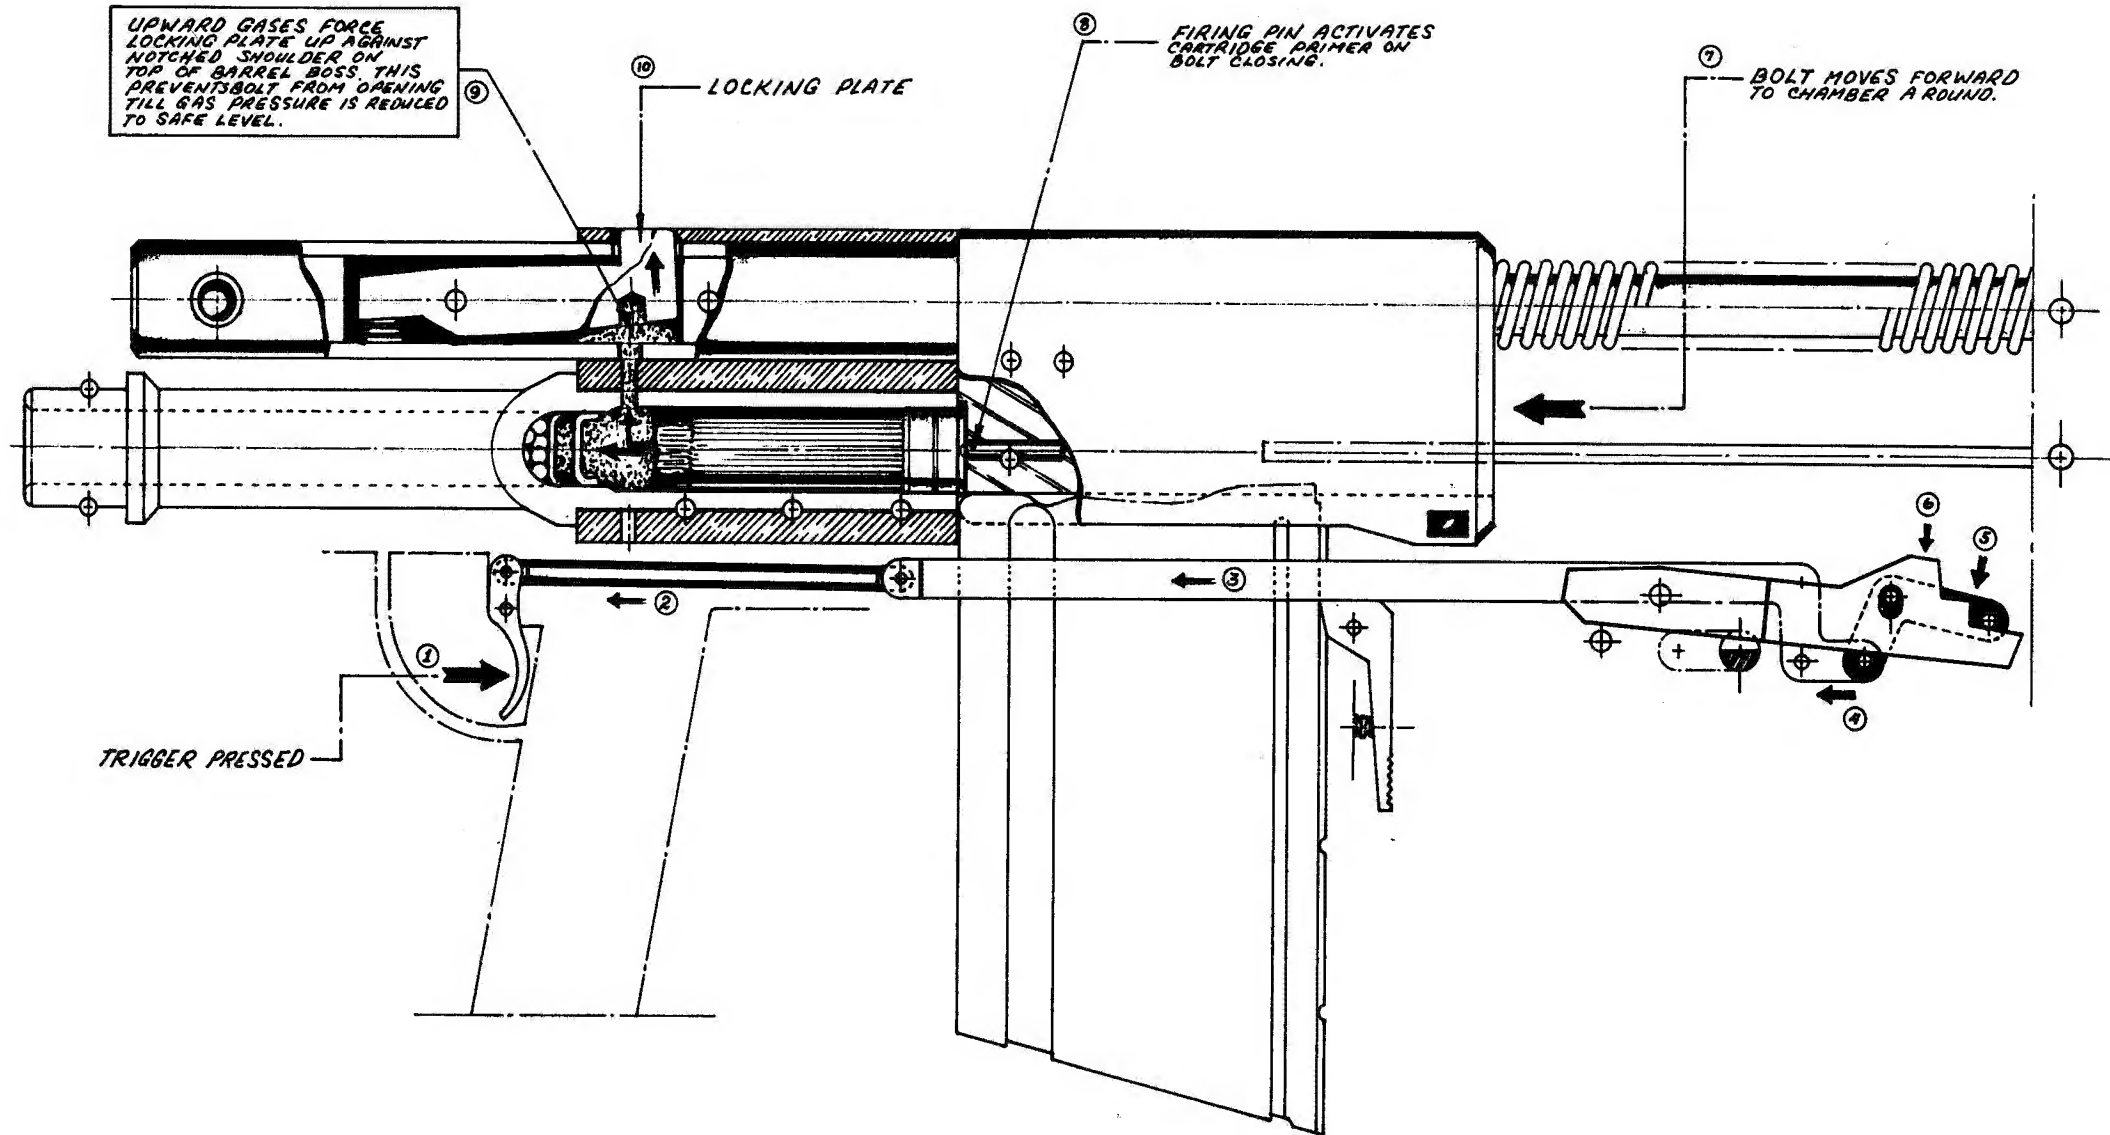

MOMENT OF FIRING

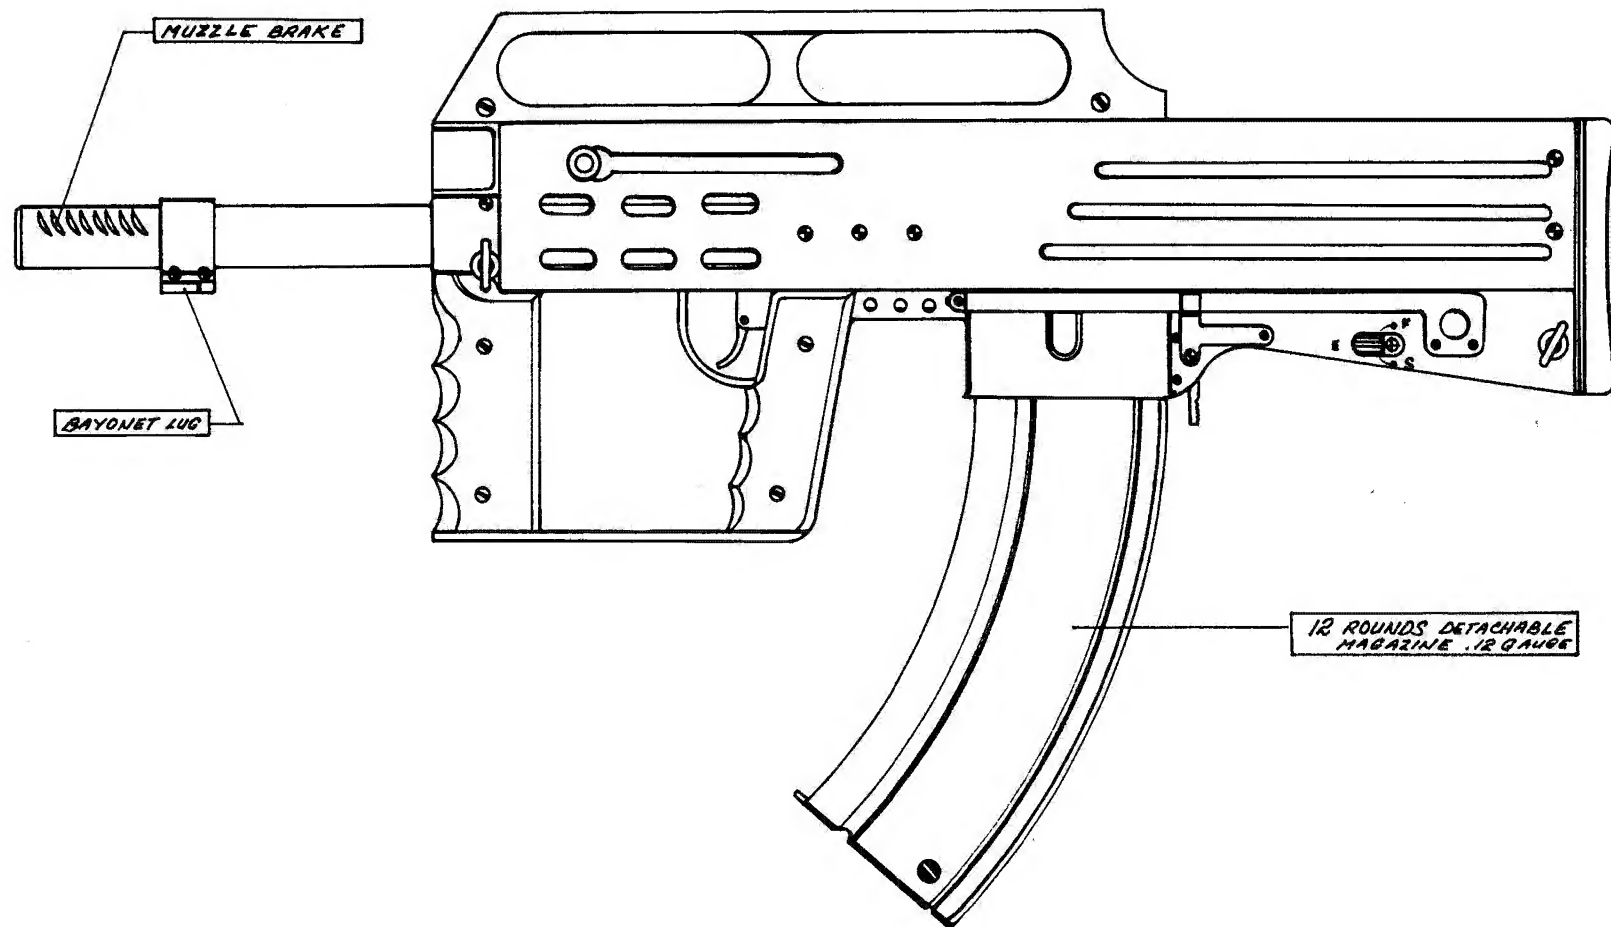

TRIAD PROTECTION SYSTEM

SPECIFICATIONS:

CATEGORY IMPROVISED-HANDMADE
CALIBER 410, 12 or 16 GAUGE
OPERATION BLOWBACK IGNITION
TYPE OF FIRE SINGLE SHOT

REMARKS: *THE TRIAD WEAPON IS DESIGNED TO PERFORM THREE FUNCTIONS AS A CLOSE-QUARTER DEFENSE WEAPON. IT IS USED AS A PALM-SIZE SCATTER-GUN; AS A WHIP (THE BREECHBLOCK DANGLING AT THE END OF A CORD IS HEAVY ENOUGH TO INFLICT PARALYZING BLOWS TO THE HEAD OR OTHER VITAL POINTS); OR AS A KNUCKLE DUSTER USING EITHER A ROUND- OR SPIKE-TYPE END.*

SYSTEM OF OPERATION:

LOADING:

To load the weapon, simply lower the unloading lever like the Winchester lever-operated rifles to disengage both the upper and lower lock bolt of the breechblock. Now pull out the breechblock by pulling the cord or chain attached to it to clear it out from the receiver tubing. The chamber is then ready to be loaded.

After loading the cartridge in the chamber, insert the breechblock in the receiver and pull the lever back against the receiver tubing to lock the breechblock to the receiver tubing. Make sure that the bolt lock is aligned with its corresponding hole in the receiver tubing. Note: Before inserting the breechblock into the receiver tubing once a cartridge has been loaded, make sure that the firing pin tip is not protruding on the breech face. This may cause accidental discharge when you close the breech.

To put the weapon on "safe" during loading and unloading, simply turn the firing pin screw head counter clockwise until

the tip clears the surface of the breechblock. When the tip of the firing pin is not protruding, the weapon can be carried loaded.

To fire the weapon, simply pull the cocking ring screwed at the front end of the barrel. As soon as the distance of pull clears the length of the sear tip, push the end of the receiver tubing. The weapon is now cocked so that the tip will protrude to a precise length on the breech face surface.

The unloading lever hook must be gripped firmly against the receiver tube to give the breech lock bolt rigid connection to the receiver tubing before the trigger is pressed to fire. The heavy spring surrounding the barrel will slam back the barrel causing the cartridge to be fired once it hits the firing pin.

EXTRACTION:

When cleaning the breechblock after unloading the weapon, simply push the empty shell with your finger. The weapon is now ready to be reloaded.

NOTE ON MATERIALS AND CRITICAL POINTS:

If possible, use only the best materials. The barrel especially must be fully machined and heat-treated according to load standards.

Noting that the weapon uses a shotgun shell, bear in mind that safety must come first. The system is a blowback ignition system and has no positive lock during ignition. Therefore it is necessary that parts, especially the breechblock, must fit firmly inside the receiver tubing. This will prevent sparks coming out the rear of the weapon.

Both breechblock lock bolts must be heat-treated since they hold the breechblock against the backward pressure of the shell during ignition.


Never use magnum loads in this weapon. If practical to handload, use lower loads only since this weapon is designed

purely as a close-quarter scattergun. The .410 caliber shell is safer to use than the big 12 or 16 gauge shell.

Remember, good materials, a good fit, and good heat treatment of all parts is required to get a reasonably good piece of equipment.




PARTS LIST:

1. *Breechblock—upper lock bolt*
2. *Firing pin*
3. *Barrel—machined-type*
4. *Barrel thrust spring—heavy-type*
5. *Front receiver tube nut*
6. *Cocking ring for barrel*
7. *Cord or fine chain mount*
8. *Upper lock bolt spring*
9. *Spring stop pin*
10. *Breechblock—lower lock*
11. *Lower lock pin*
12. *Pair for Part #7*
13. *Unloading lever*
14. *Sear pin—roll pin-type*
15. *Tripper*
16. *Sear*
17. *Trip pin*
18. *Unloading lever axis pin*
19. *Knuckle duster spike—or round-type*
20. *Unloading lever base mount—screwed on and brazed or silver-soldered permanently*
21. *Receiver tubing*

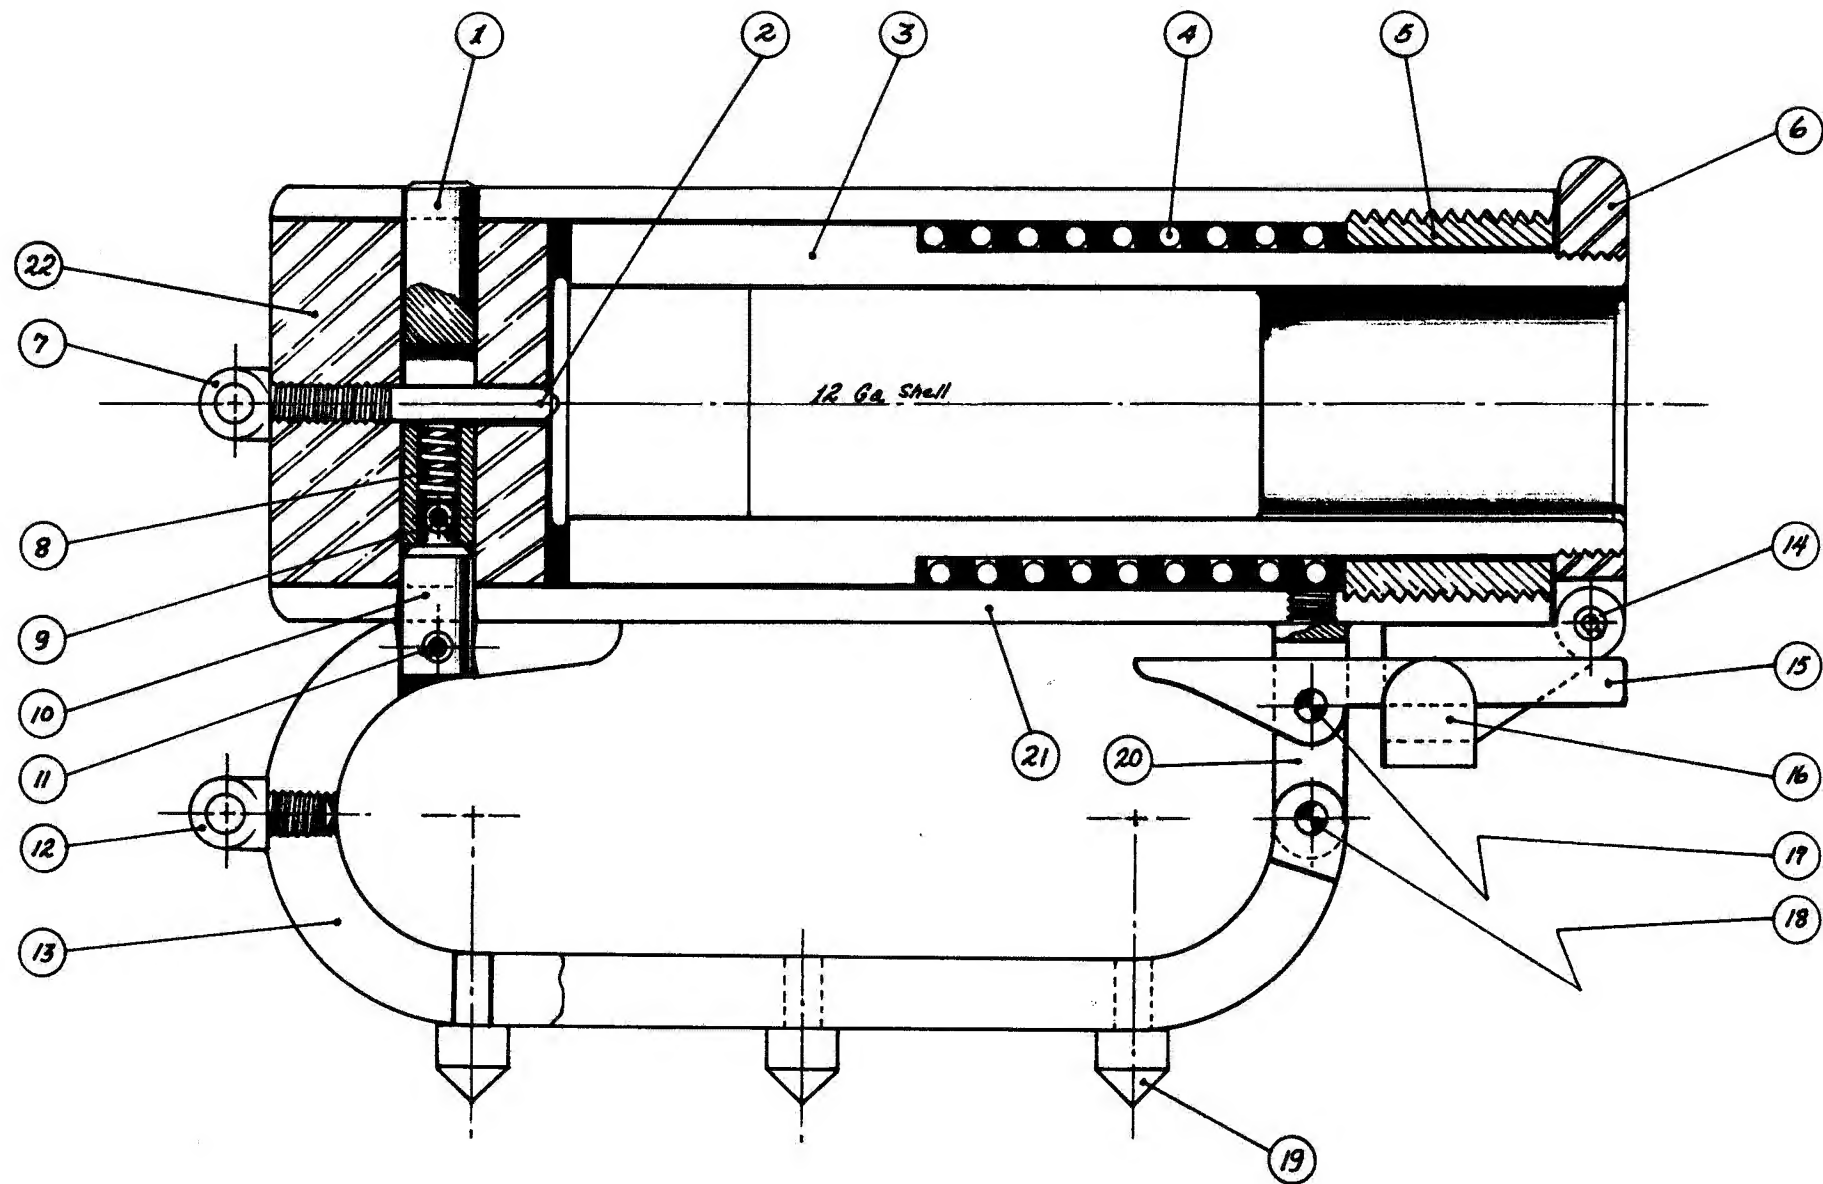

CUTAWAY DIAGRAM


Scale: 2X

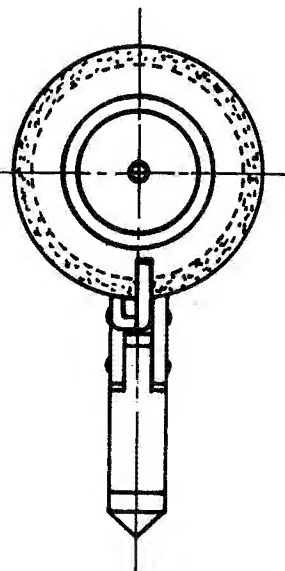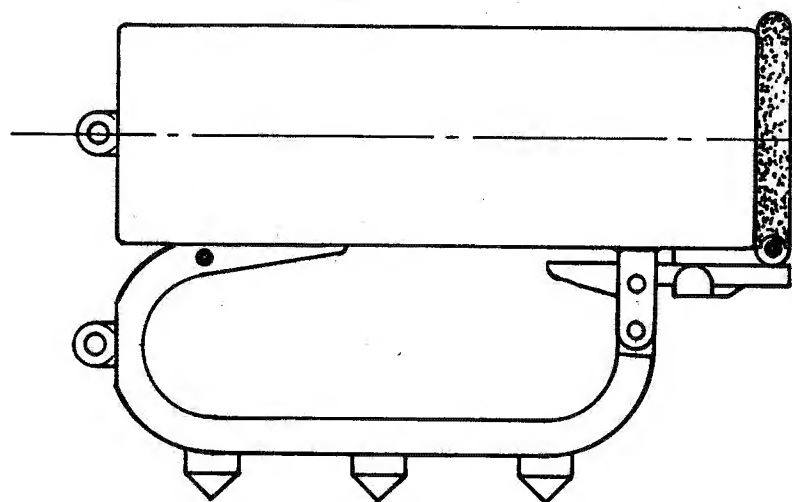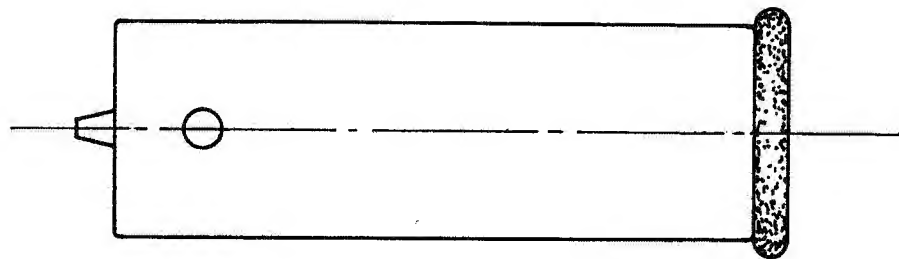



TRIAD SYSTEM

Scale: FULL

AS A BLASTER SHOTGUN

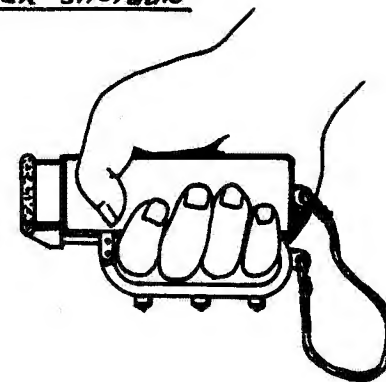


AS A WHIP

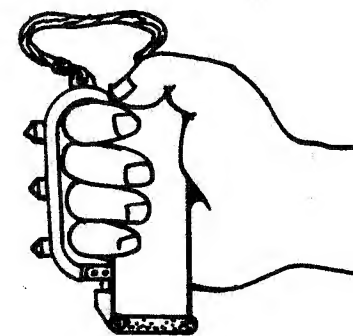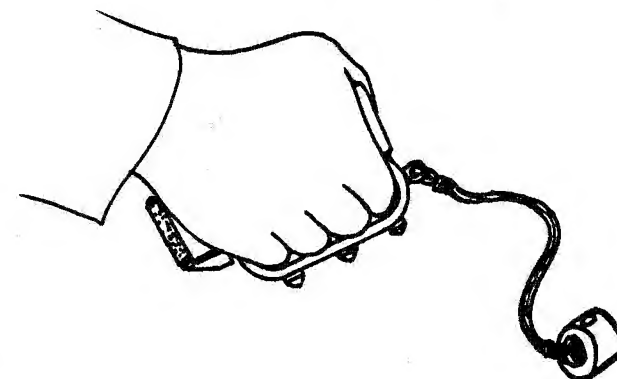

AS A KNUCKLE DUSTER



③

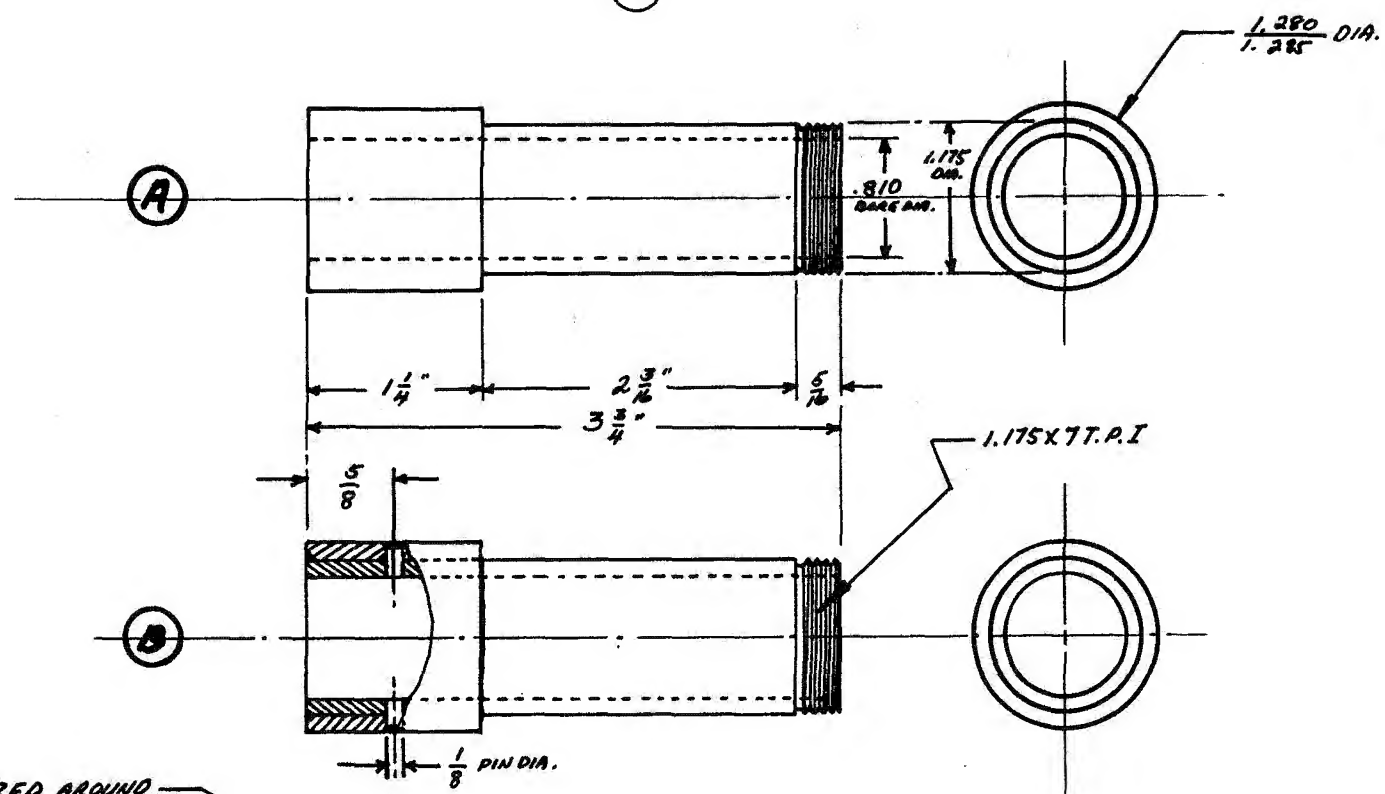

"A" IS FULLY MACHINED BARREL
"B" IMPROVISED BARREL FROM SEAMLESS TUBING.

NOTE: BORE MUST BE SMOOTH POLISH & HEAT TREATED PROPERLY.


⑥

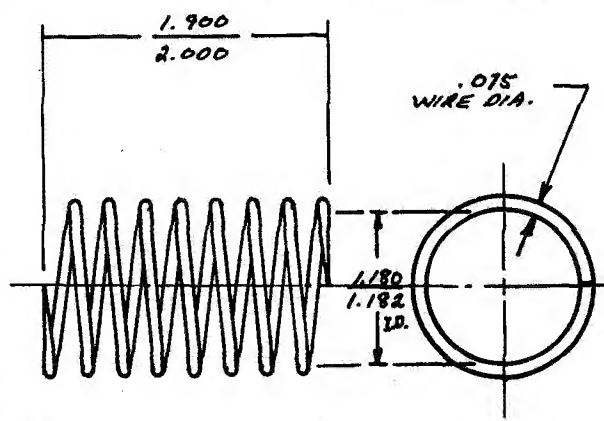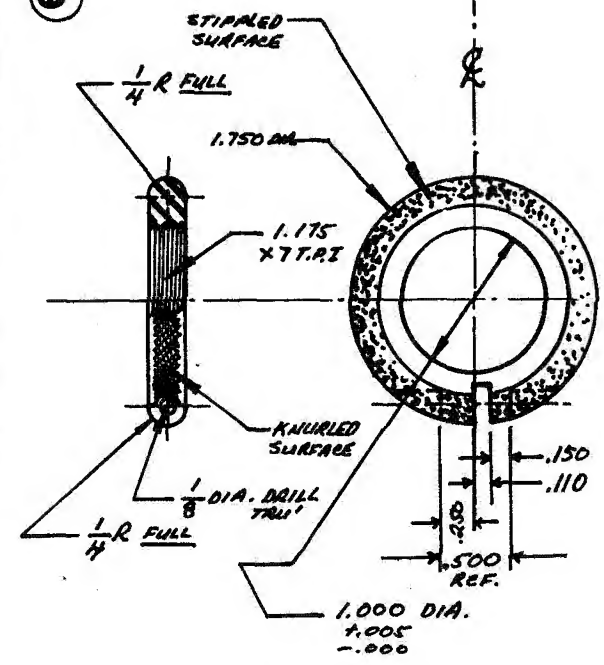


④

MUSIC WIRE SPRING - STRESS RELIEVE AFTER FORMING.


21

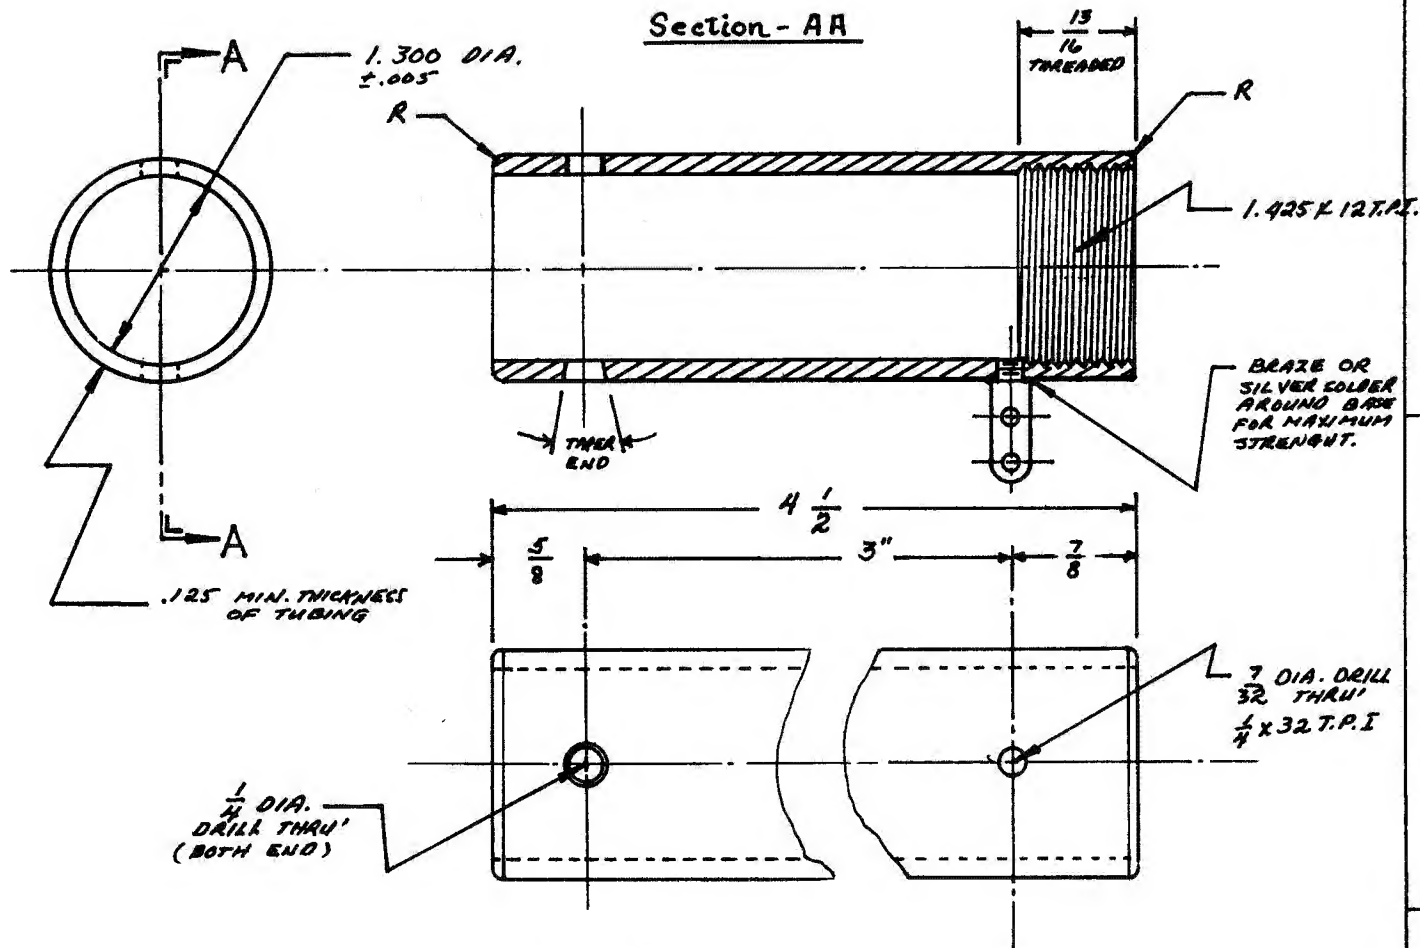


22

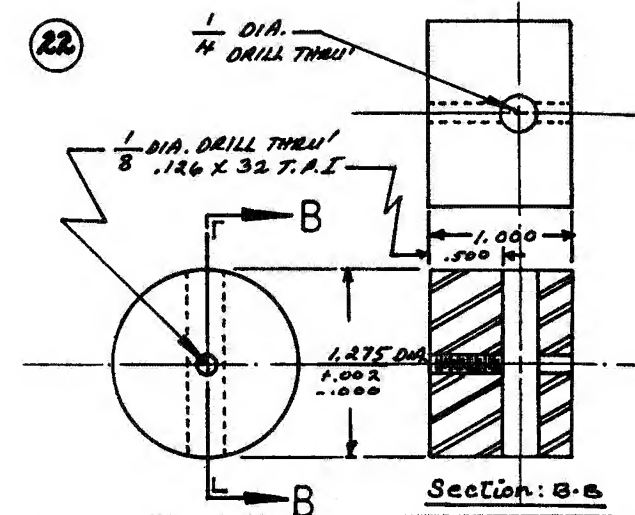


5

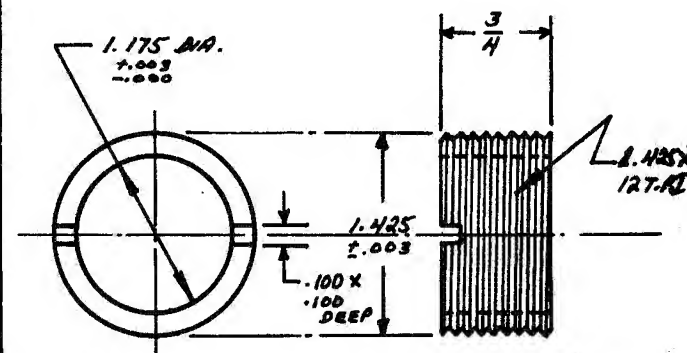


1

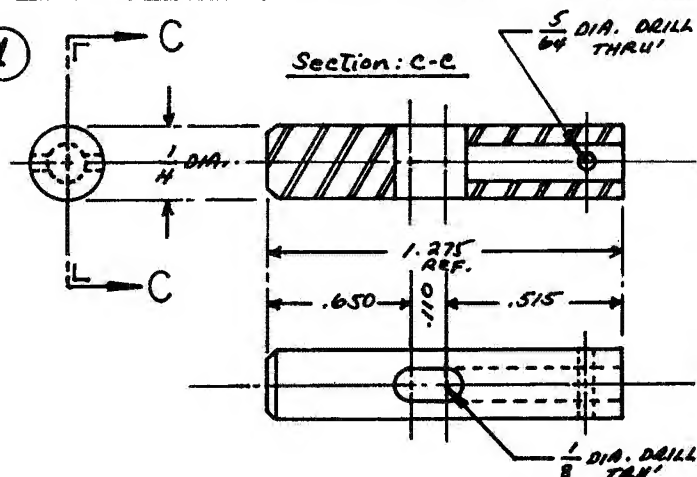


8

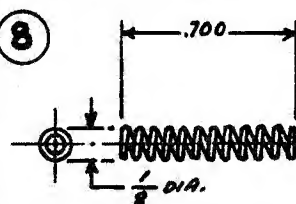


9

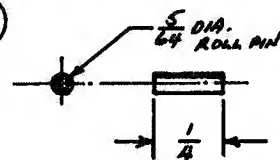

10

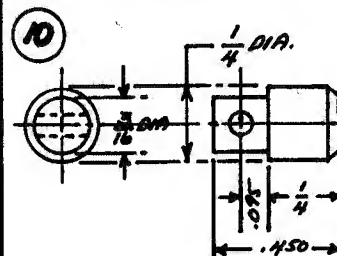


11

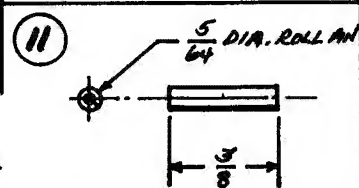


54


2

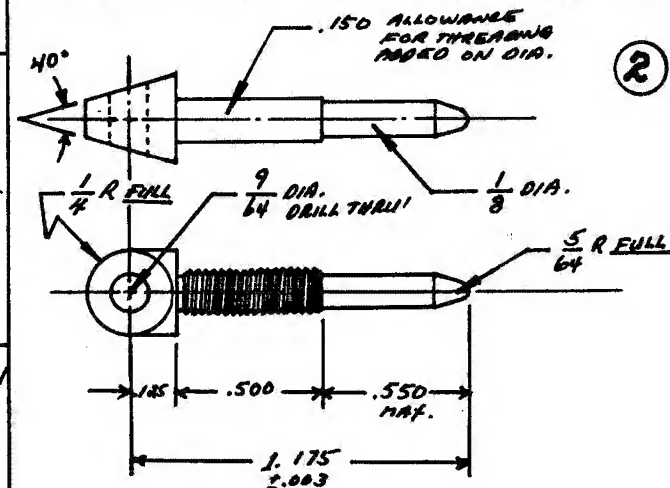


13

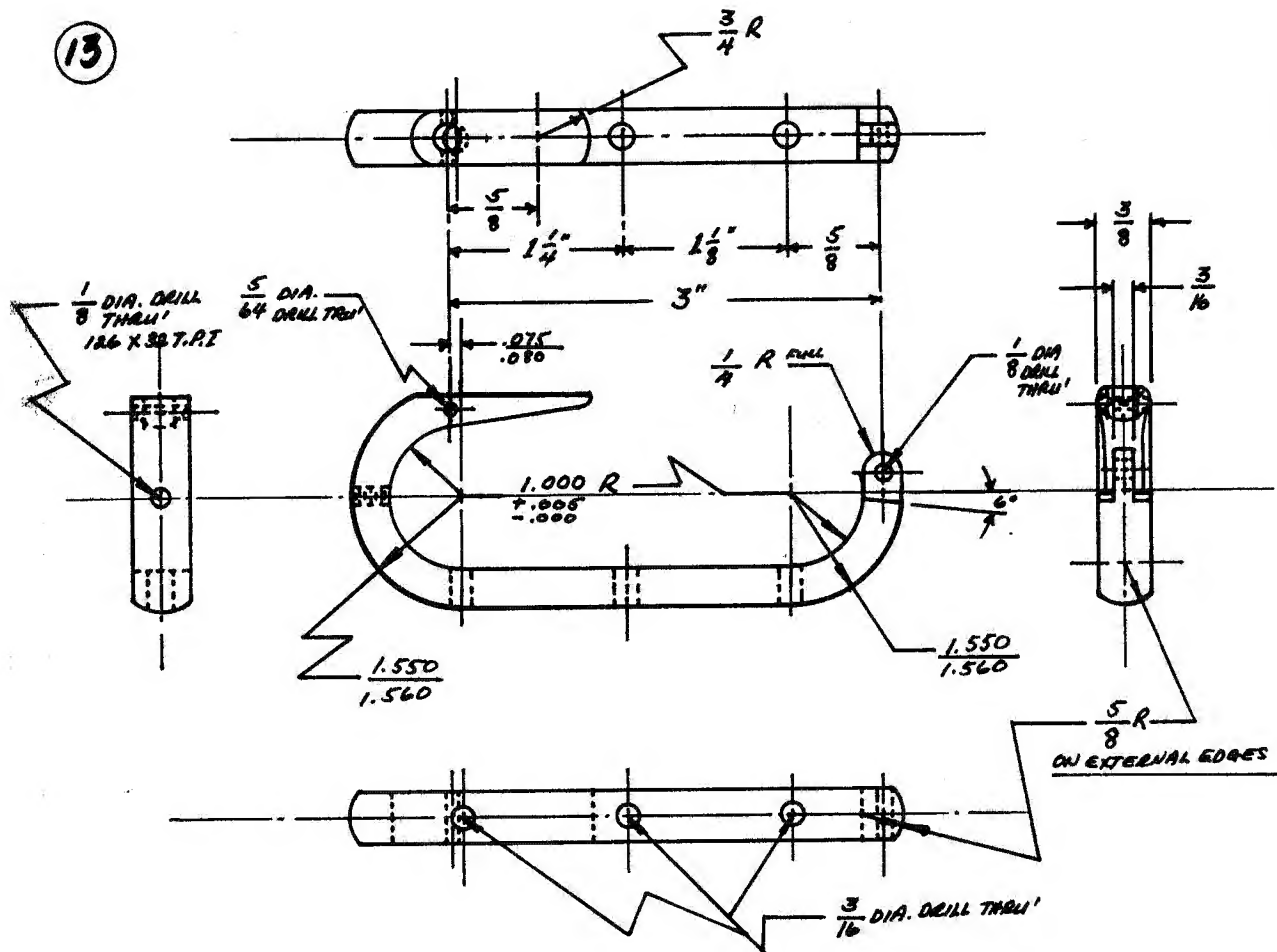



20

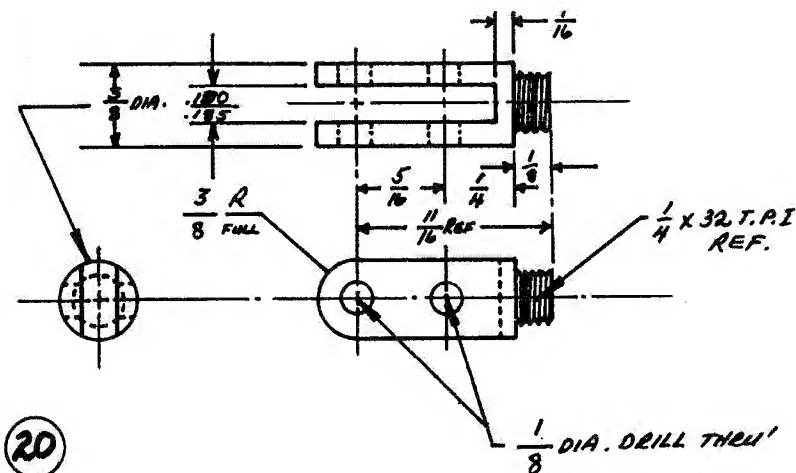


19

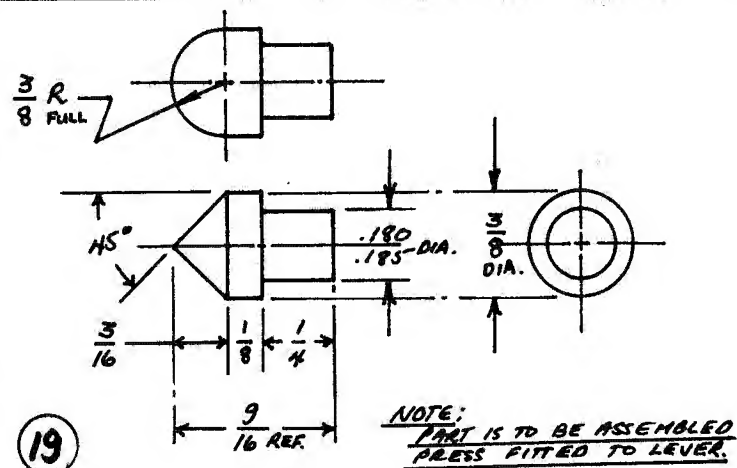


15

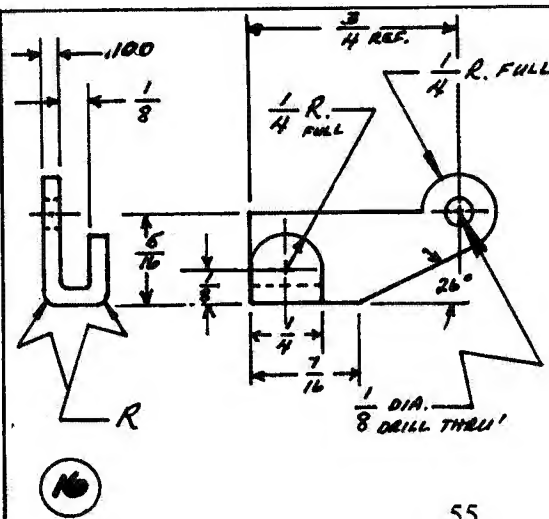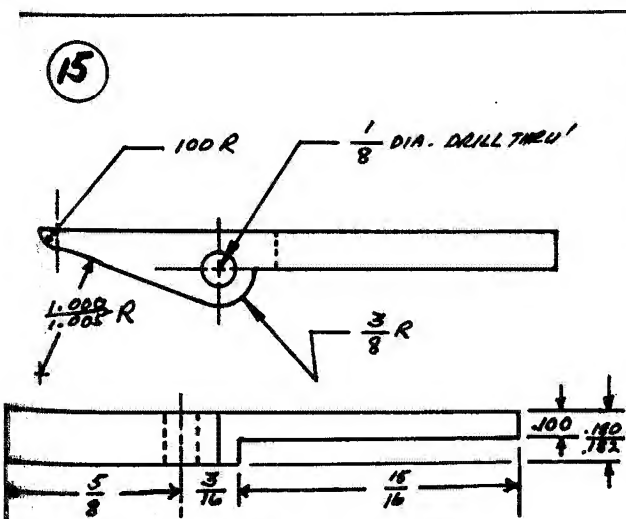


12

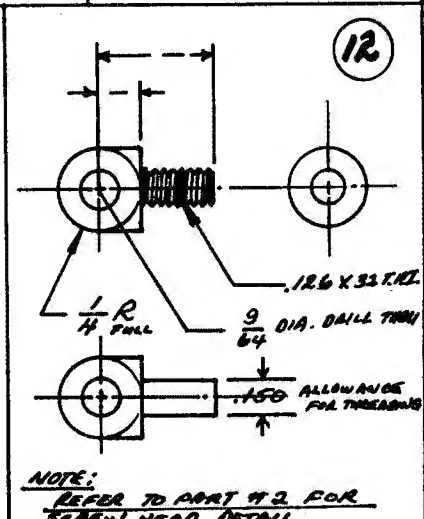


17

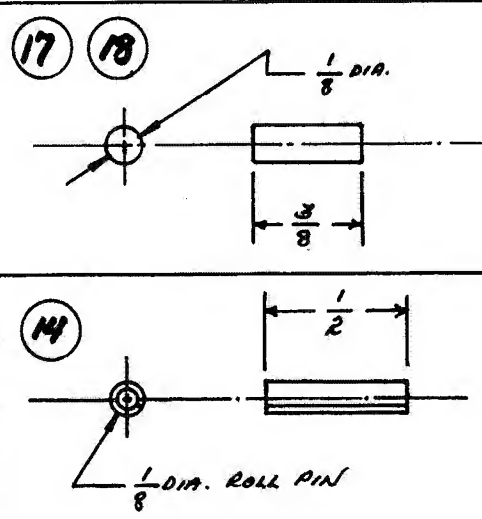

14

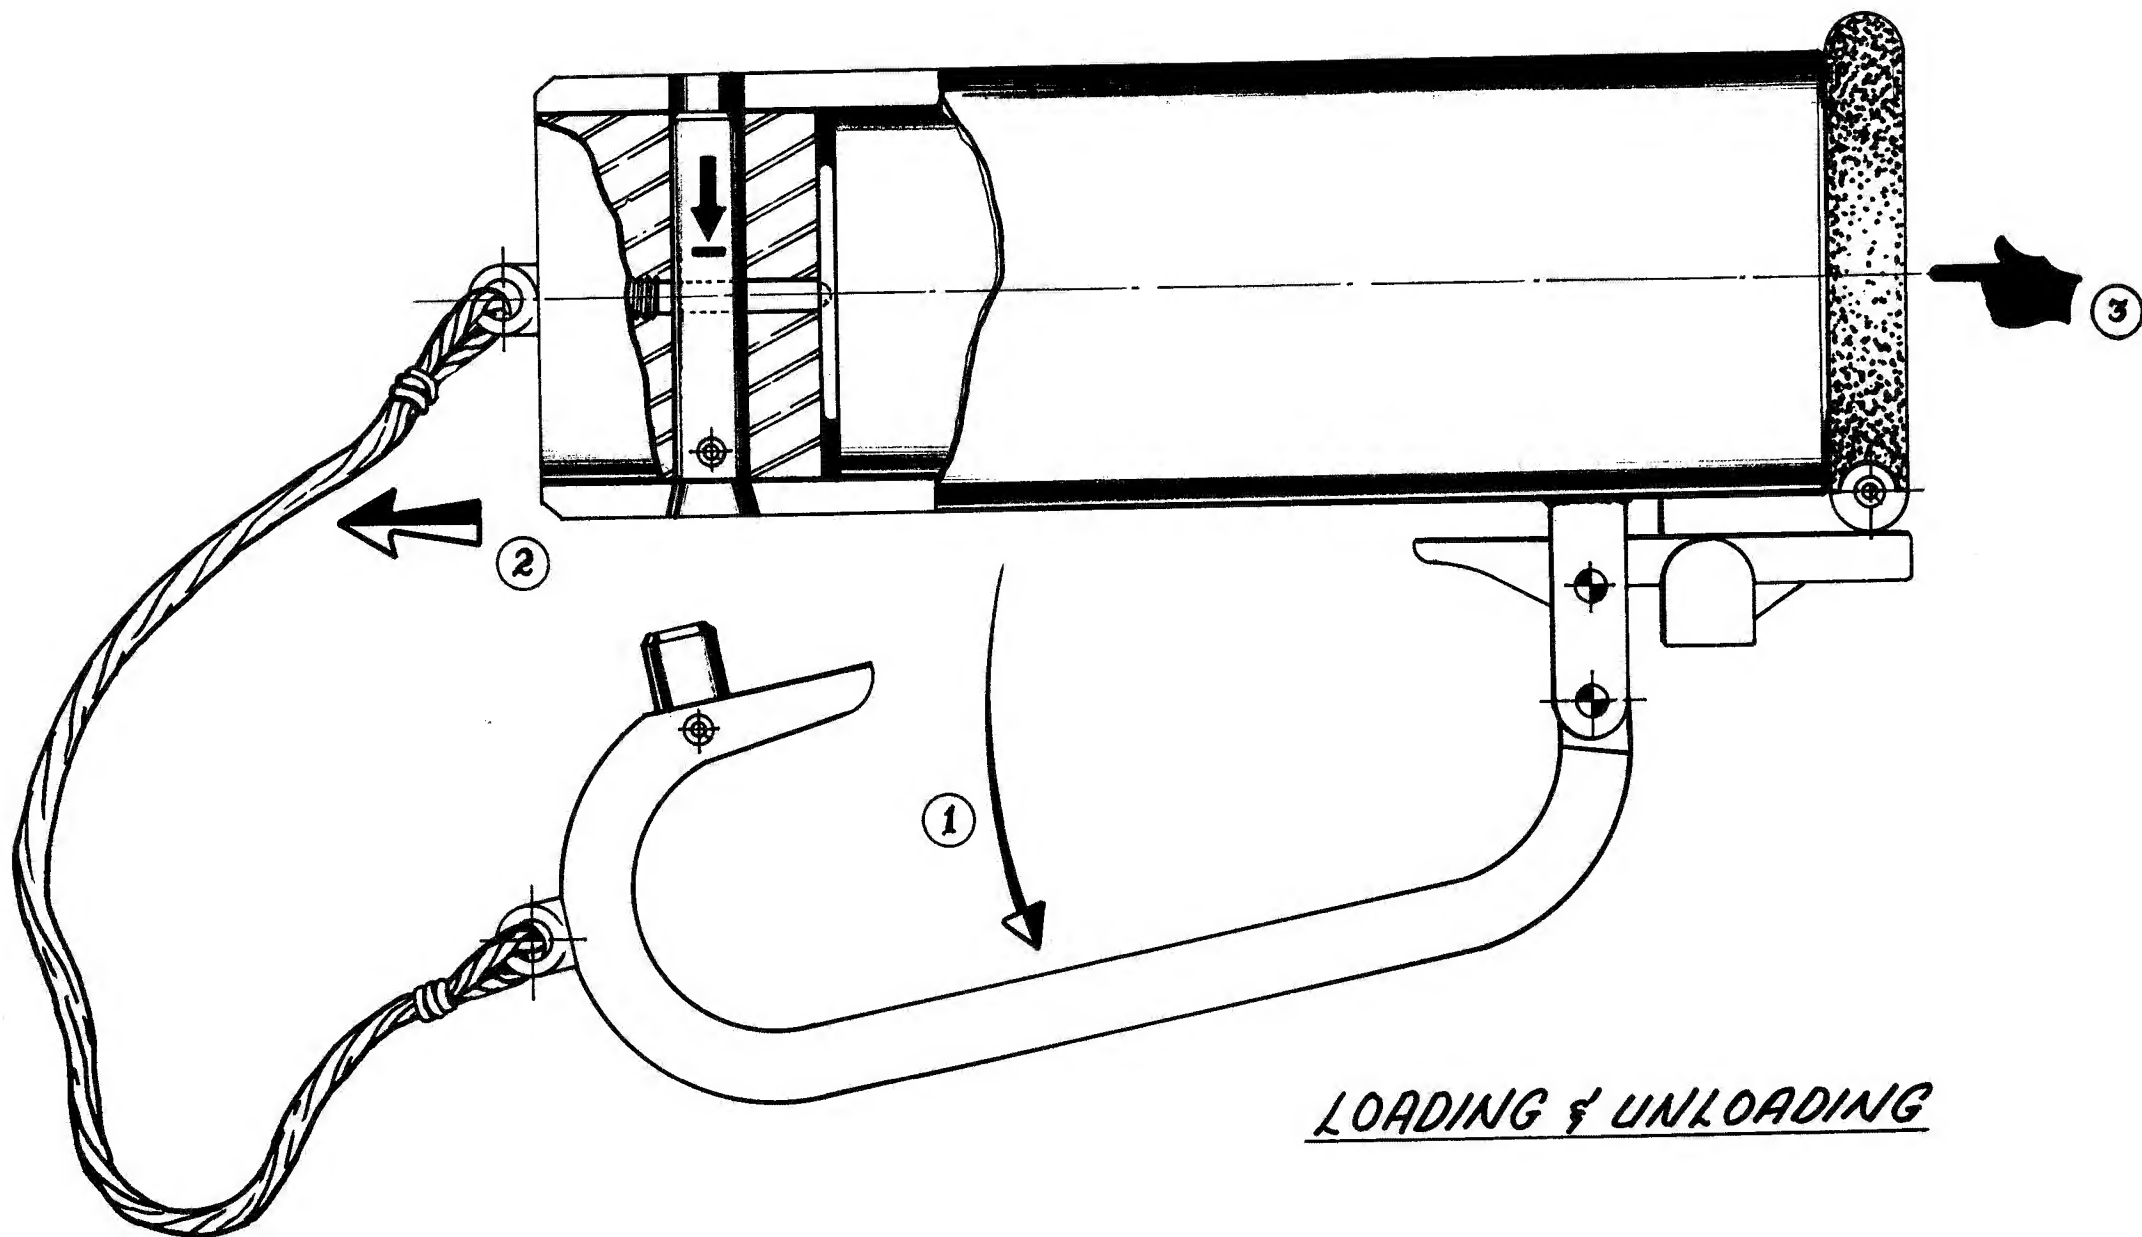

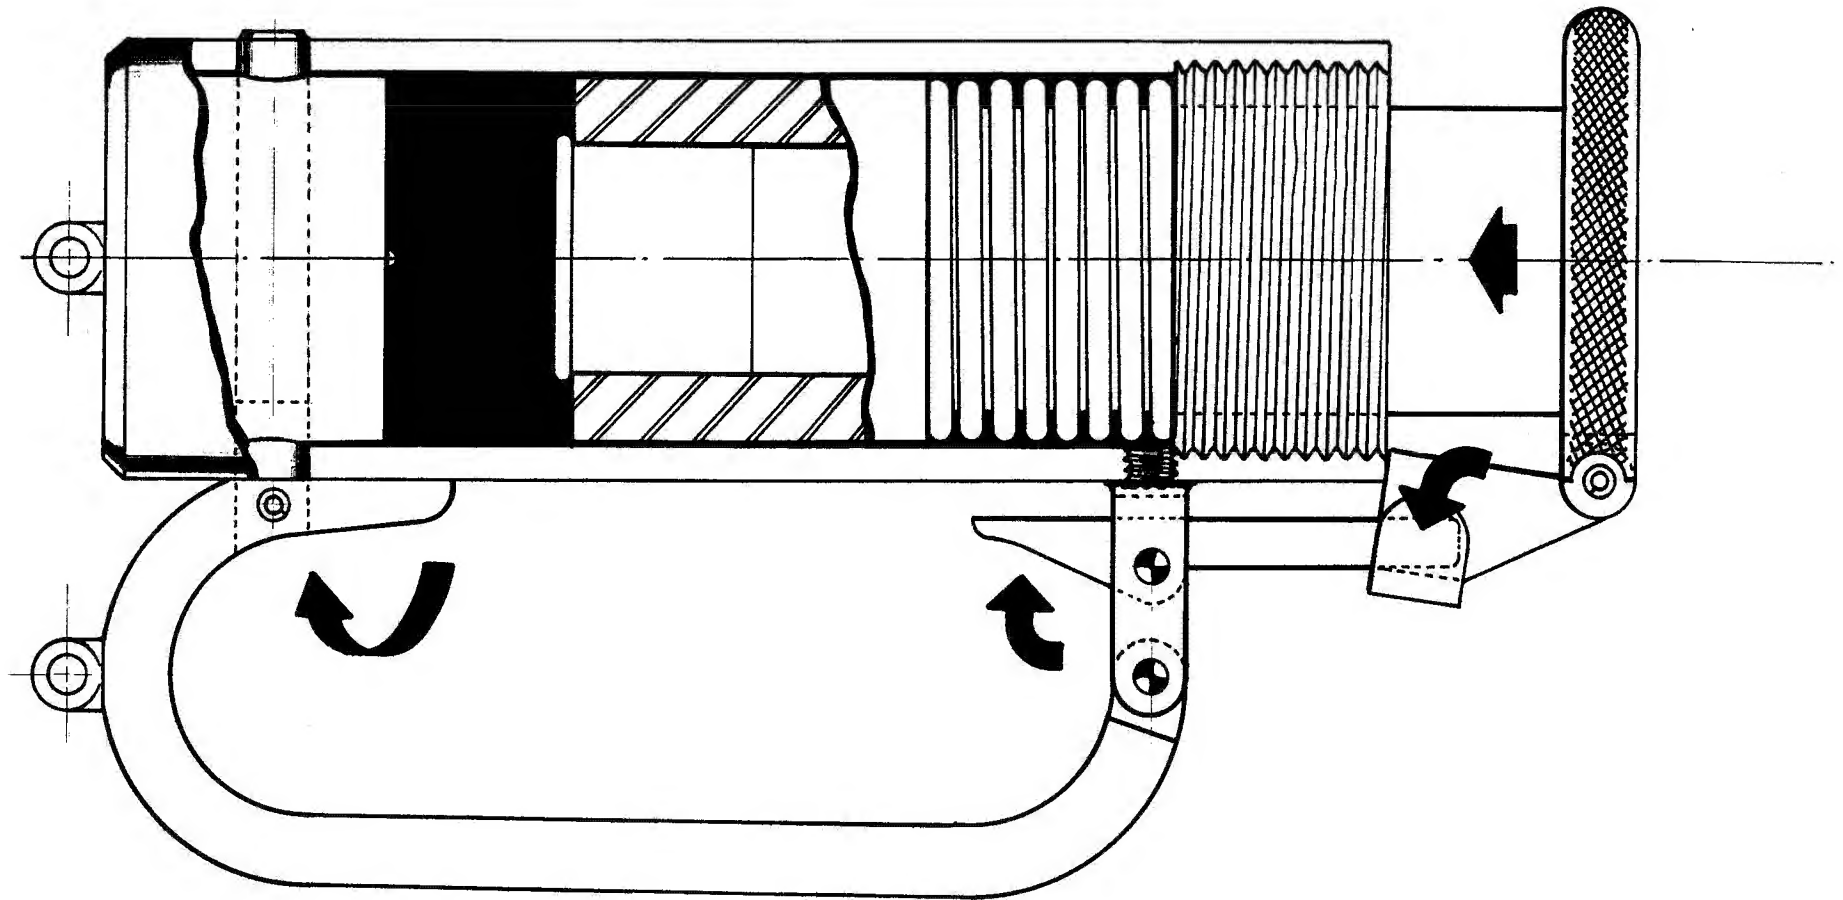

WEAPON IS COCKED - READY TO FIRE